



Care and Maintenance: Your new garden furniture is a natural timber product. In order that you may prolong the life of this product, we recommend that you follow the general care and maintenance advice below. The timber used for the BSW Garden Arch is pressure treated to provide protection against biodeterioration in end use situations. It is possible that under some environmental conditions that a surface mould may develop - should this happen, clean off with mild soapy water. All fixings should be checked for tightness and signs of deterioration at the beginning of each season on a regular basis. We recommend that this product is positioned on firm, level ground. If necessary, the product can be firmly fixed to the ground by using a proprietary ground anchor. Product should be checked regularly and re-coated with a suitable topcoat finish when required. If accidental damage occurs, lightly sand and re-coat with a suitable water based wood preservative. Product can be cleaned periodically with a mild soapy detergent. This is a natural product and therefore colour may vary slightly from piece to piece. As a natural product, it is possible that knots can work loose and sometimes fall out. Resin leakage and small cracks may also appear on the wood's surface. Should this happen, clean the product of resin, ensure any sharp edges are sanded smooth and re-coat. Products should be given suitable protection from adverse weather conditions, particularly during the winter months. Please retain these instructions for future reference and use.