## FloPlast building the future

## Step by step installation guide -32/40/50mm Push-Fit Waste



WARNING Ensure you purchase the correct pipe for your chosen system.



Measure and cut the pipe to size.



**Pipe Size** 


32mm

40mm

50mm

Lubricate the ring seal in the socket.

Push the pipe into the socket.

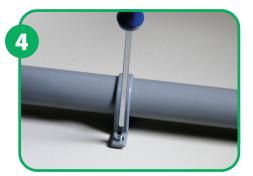

All pipes must be supported both vertically and horizontally.



Roofline, Window and Cladding Systems



Systems

Soil & Waste Systems





Pipework support (BS EN 12056:2000)

**Maximum distances for support** 

Vertical

1.2m

1.2m

1.2m



Systems



Horizontal

0.5m

0.5m

0.6m

For more information visit www.floplast.co.uk