

## Uses and limitations

Only suitable for heating and plumbing applications using copper tube.

Suitable for hot and cold water services including mains.

Not suitable for gas.

## Directions

1. Before starting work turn off any related heating appliance.
2. Isolate water supply at point of installation.
3. Drain system where necessary.
4. Cut copper tube with a tube cutter.
5. Slide nut and olive onto the copper tube.
6. Put the copper tube into the fitting and tighten by hand.
7. Hold fitting with a spanner and tighten nut with another spanner by 1-1¼ turns for 6-15mm fittings, 1 turn for 22mm fittings or ¾ of a turn for 28mm fittings.
8. Do not overtighten.
9. Turn on the water and check for leaks, give a further ¼ of a turn if necessary.

If in doubt, consult a competent plumber.