

Uses and limitations

Only suitable for heating and plumbing applications using copper tube.

Suitable for hot and cold water services including mains.

Not suitable for gas.

Directions

1. Before starting work turn off any related heating appliance.
2. Isolate water supply at point of installation.
3. Drain system where necessary.
4. Cut copper tube with a tube cutter.
5. Slide nut and olive onto the copper tube.
6. Put the copper tube into the fitting and tighten by hand.
7. Hold fitting with a spanner and tighten nut with another spanner by 1-1¼ turns for 6-15mm fittings, 1 turn for 22mm fittings or ¾ of a turn for 28mm fittings.
8. Do not overtighten.
9. Turn on the water and check for leaks, give a further ¼ of a turn if necessary.

If in doubt, consult a competent plumber.