

Ball Valve

Carefully push one of the supplied buttons into position (Red = **H**ot, Blue = **C**old).

To change buttons on lever, prise out existing button using a narrow flat blade screwdriver in cut out shown.

