


Thermostatic Bar Shower

Fitting instructions

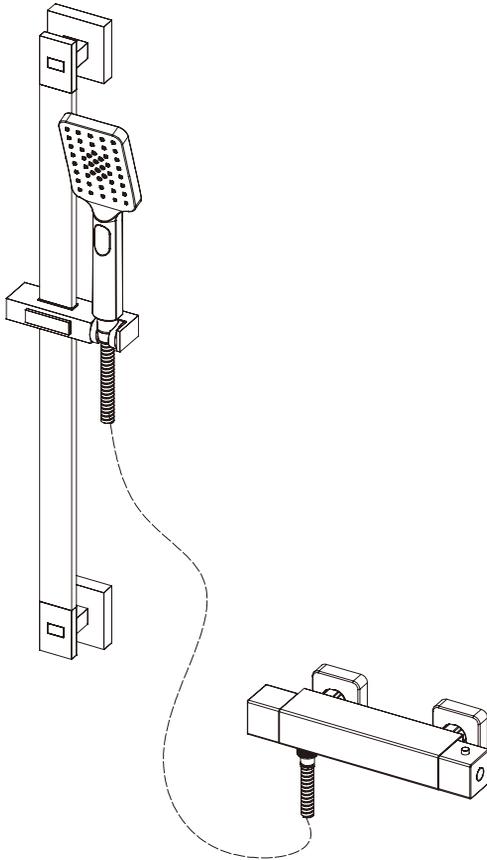

**Please note: Tap head shown is for illustration purposes only.
Please keep these instructions for future reference and request of replacement parts.**




We have taken great care to ensure that this product reaches you in perfect condition. However should any parts be damaged or missing please contact your point of purchase. This does not affect your statutory rights. In addition if you require replacement parts your point of purchase will be happy to assist.

Contents	Page
1. General Information	2
2. Tools Required	3
2. Parts Supplied	3
3. Before Your Start	4
4. Water Supply Temperature	4
5. Installation	5-8
6. Temperature Setting	9
7. Aftercare	10-11
8. Troubleshooting	12

General Information


This product must be fitted in compliance with the UK Water Supply (Fittings) Regulations. If in doubt please contact your local water authority.

Tools Required (Tools not supplied)

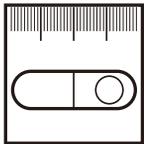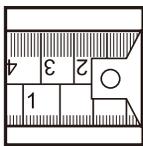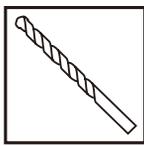

Parts Supplied

NO.	Description	Qty
1	Bar Valve	1
2	Seal Washer	2
3	Adaptors	2
4	Copper Olive	2
5	Covers	2
6	Wall Screws	4
7	Wall Bracket	2
8	Wall Plugs	4
9	Cap	2
10	Long Wall Screws	2
11	Riser rail bracket	2
12	Rail bracket	2
13	Wall Plugs	2
14	Riser Rail	1
15	Slider	1
16	Shower Hose	1
17	Handset	1

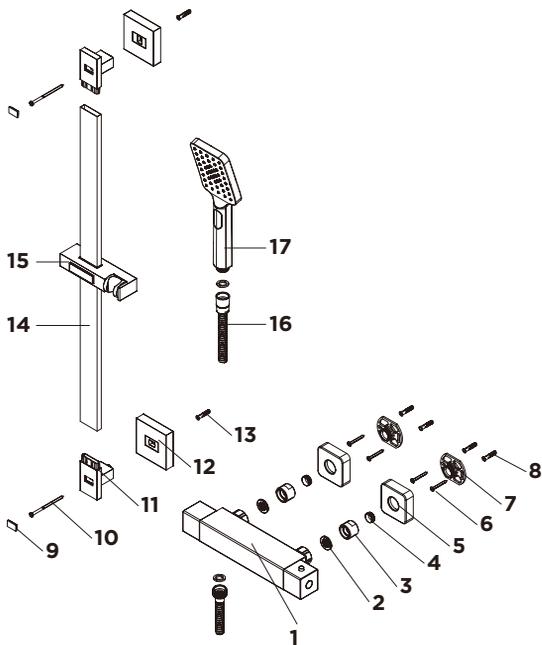

Before Your Start

Hot water should be stored and distributed at a temperature of not less than 60°C which will help minimise the build-up of limescale.

For further details contact your Local Water Authority.

This shower should be installed in compliance with the UK Water Supply (Fittings) Regulations.

- (a) Identify all components and check pack contents.
- (b) Turn off water mains supply.

Water Supply Temperature:

Hot Water Maximum:	70 °C	Recommended	60-65 °C
Cold Water Minimum:	5 °C	Recommended	10-15 °C

Operating Pressure:

Minimum: 0.3 Bar

Maximum: 5.0 Bar

This pressure rating is determined by the manufacturer using soft water under test house conditions and may differ to the retailer's recommendation.

Always maintain a 10 °C difference between hot system temperature and maximum hot setting of valve.

Hot and Cold Maximum pressure differential should be no more than 2 bars. If this limit is exceeded, fit a pressure reducing valve (not supplied).

Operating pressures on hot and cold lines should be kept as even as possible in order to ensure the maximum efficiency of the mixer.

When water pressure is higher than 5 bar a pressure reducing valve (not supplied) must be fitted before the mixer.

Flow restrictors(not supplied) can be fitted into the wall unions to reduce water consumption on high pressure system.

Installation


-Fitting the Thermostatic Shower Valve

1. Flush pipe work prior to installation to remove debris from the system.
2. Turn off water supply following system flushing.



3. Mark out the position for the pipework (150mm between centres).

Note: the pipe centres required for this thermostatic bar valve are 150mm. Terminate the pipework in the wall ensuring that there is at least 26mm of 15mm diameter pipework protruding from the finished wall surface.


IMPORTANT: The water supply pipes to the thermostatic bar valve must be with the hot on the left and the cold on the right when viewed from the front.

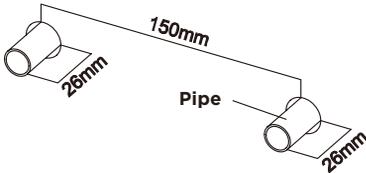


4. Drill suitable holes in the wall surface at the marking positions to accommodate the supply pipework and fixings.

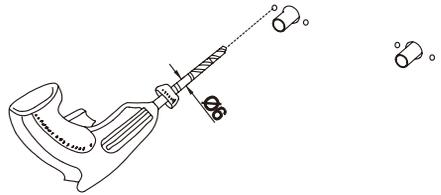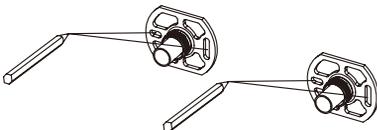


5. Place the Wall Bracket(7) over the supply pipes. Using the Wall Plugs(8) and Screws(6) provided fix the wall Bracket to the wall.

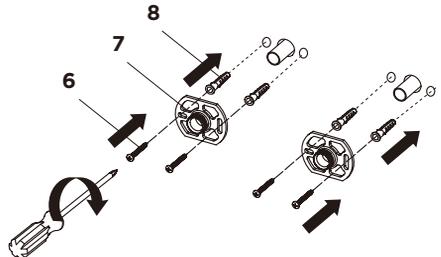


6. Place the Copper Olive(4) onto the protruding pipework. **IMPORTANT:** The pipework must not protrude past the Copper Olive(4) by more than 7mm.

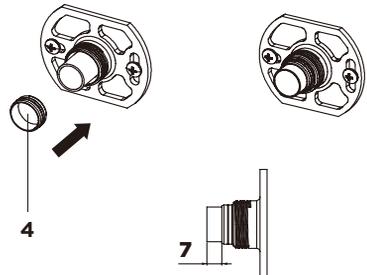

7. Holding the flat edges of the Wall Bracket(7) with a 47.5mm spanner screw the Adaptors(3) onto the Wall Bracket(7) using a 22mm spanner. Repeat this step on both sides.

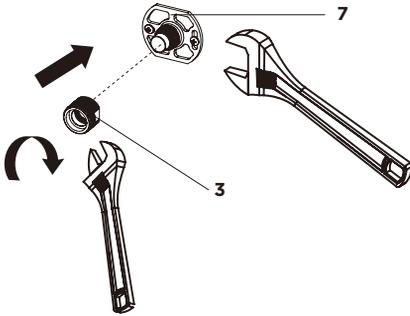


8. Screw the covers(5) over the wall Bracket(7) / Adaptors(3), so they are flush against the finished wall surface.

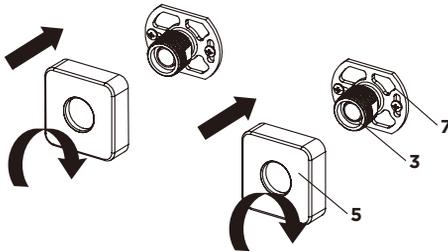

9. Place the Sealing Washers(2) into the bar valve fixing nuts. Position the Bar Valve(1) against the Adaptors(3) and carefully tighten the bar valve fixing nuts onto the Adaptors (3). Do not over tighten.


Note: Take care not to damage the finish of the bar valve.

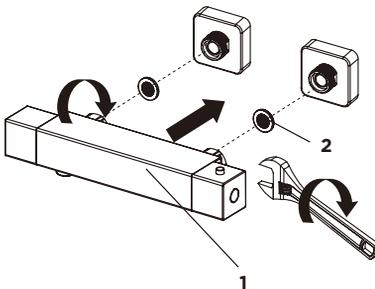

10. Turn on the water supplies and check for leaks.

-Fitting the Shower Kit


1. Mark and drill 2 holes (the centre of 2 holes are 700 ± 5 mm on the wall, ensure that the shower hose will not be over extended when the Slider is in its highest position.

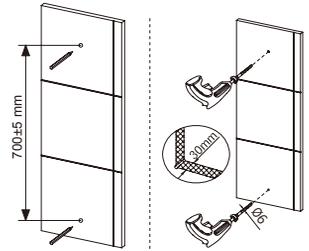


2. Once holes are drilled , insert Wall Plugs (13) .
3. Fit the slider(15) to riser rail(14).

Note: The slider(15) button must be depressed whilst fitting. The button must be forward to the installer, and the holder to the right, as shown.


Note: Handset holder on the slider(15) must be positioned on the right hand side.

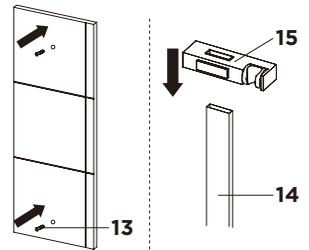

4. Then fit riser rail bracket(11) to riser rail(14).
5. Fit this assembly to rail bracket(12) and insert the long wall screw (10, if suitable) through the hole of the riser rail bracket(11).
6. Tighten the long wall screws(10) until secure.
7. Fit cap(9) to the riser rail brackets(11).

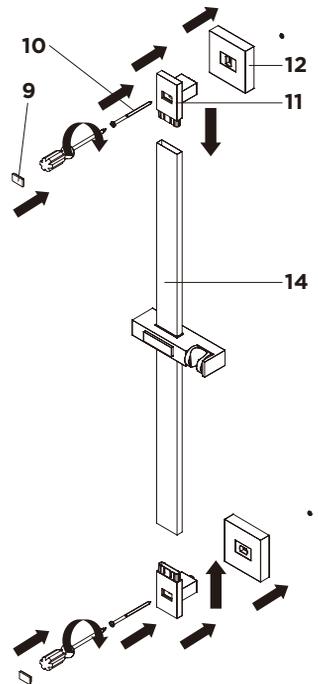

8. Ensuring the hose washer is in position, attach the conical end of the shower hose(16) to handset(17) and tighten. **DO NOT OVER TIGHTEN.**
- Ensuring the hose washer is in position, attach the non-conical end of the shower hose(16) to outlet of the bar valve(1).
- Then place the handset in the handset holder.

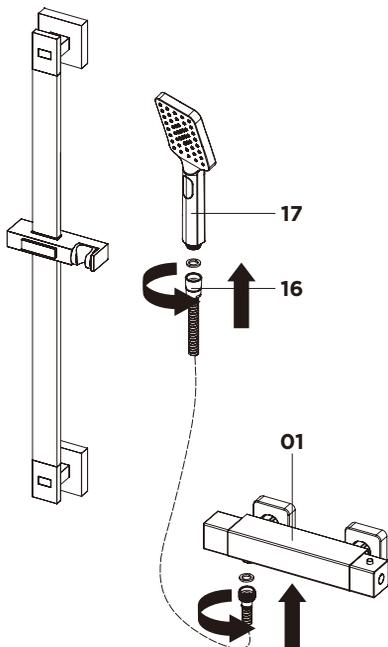


Temperature Setting (To be done only when essential)

This mixer has been set in the factory under balanced pressures and hot water supply at 65°C.

When your operating conditions vary significantly from the above, the temperature of the mixed water may vary from the setting. In this case, you can set the temperature of the mixer to suit your requirements.

The valve is set to a maximum 46°C. This can be checked if required using a thermometer. If this temperature is incorrect, you can reset it as the following:


1. Turn the handle to 38°C position.
2. Remove cap, then the grub screw, then the temperature handle.
3. Without removing the **black stop**, turn the spindle of thermostatic cartridge until the temperature is at the required level.
4. Test again using a thermometer.
5. When the required temperature is reached, re-fit the components, so that the chrome button stop will be at your new set temperature.

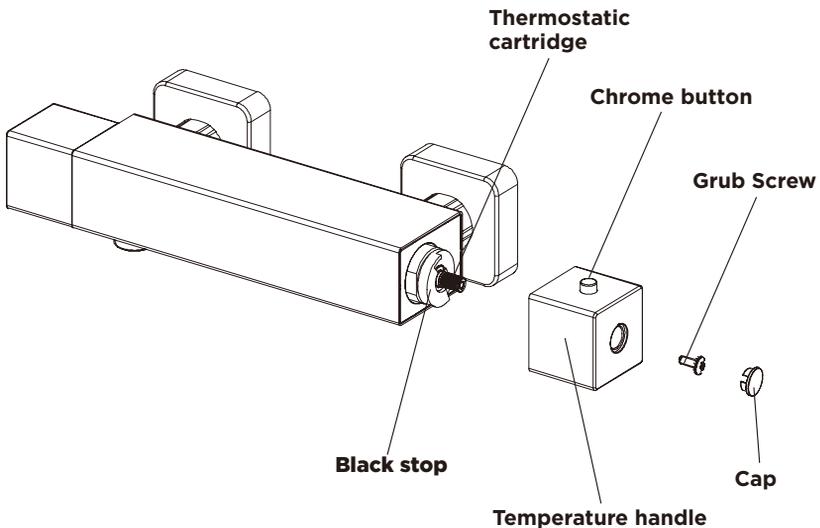

Aftercare


Cleaning the thermostatic cartridge

1. Before carrying out any maintenance, turn off the mains water supply. If you are unsure contact a qualified plumber.
2. Remove the cap, grub screw, temperature handle.
3. Pull the black stop from the thermostatic cartridge. Remove the retaining nut using a suitable spanner, remove and clean the thermostatic cartridge rinse thoroughly under cold water to remove any build up of limescale or debris.
Note: take note of the position of the black stop and thermostatic cartridge, they must be re-fitted in the same position.
4. Replace the thermostatic cartridge into the body, tighten the retaining nut using a suitable spanner.
5. Re-fit the black stop, temperature handle, tighten the grub screw and re-fit cap to handle.

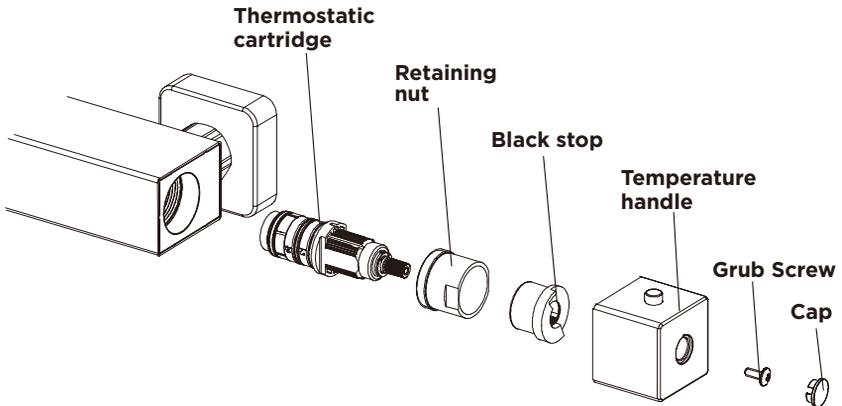

Cleaning the flow cartridge

1. Before carrying out any maintenance, turn off the mains water supply. If you are unsure contact a qualified plumber.
2. Remove the cap, grub screw, On/Off control handle.
3. Remove the flow cartridge using a suitable spanner, clean the flow cartridge rinse thoroughly under cold water to remove any build up of limescale or debris.
4. If necessary replace the flow cartridge.
5. Re-fit the flow cartridge into the body, tighten the flow cartridge using a suitable spanner.
6. Re-fit the On/Off control handle, tighten the grub screw and re-fit cap to handle.

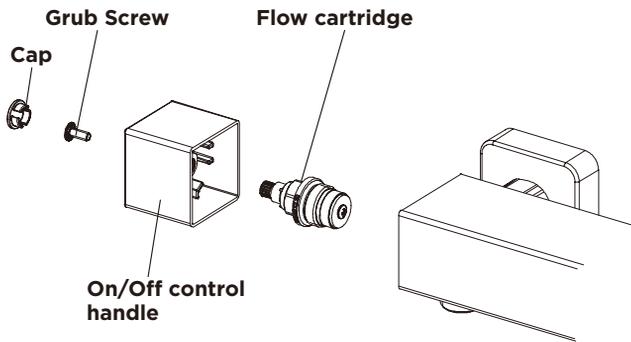

General Cleaning

Whilst modern plating techniques are used in the manufacture of these fittings, the plating will wear if not cleaned properly. The safest way to clean your product is to wipe with a soft damp cloth. Stains can be removed using washing up liquid. All cleaning powders and liquids will damage the surface of your fitting even the non-scratch cleaners.

Troubleshooting

Symptom	Cause	Remedy
No flow or low flow rate and /or varying temperatures.	Check showerhead, hose and filters for any blockage.	Clean as necessary. Refer to Aftercare section (page 10-11).
	Partially closed stop or service valve in water supply pipework to the shower valve.	Open stop or service valve.
	Instantaneous water heater cycles on and off as the flow rate or pressure is too low.	Increase water flow rate or pressure through system. Contact the boiler manufacturer.
	Head of water is below the minimum distance required.	Raise the cistern or fit a shower booster pump.
	Inlet filter is partially blocked.	Clean or replace, flush through pipework before refitting.
	Hot or cold water being drawn off elsewhere causing pressure changes or instantaneous boiler temperature changes.	Do not use other water outlets when using the shower.
	Make sure the maintained inlet pressures are nominally balanced and sufficient.	Refer to Water Supply Temperature (page 4).
	Airlock or partial blockage of the pipework.	Flush through pipework to ensure removal of debris and any airlocks.
	No hot or cold water reaching the shower valve.	Check hot and cold feeds (the valve will shut down if either the hot or cold supply fails).
Only hot or cold water from the shower valve outlet.	Partially closed stop or service valve in water supply pipework to the shower valve.	Open stop or service valve.
	Inlet filter is partially blocked.	Clean or replace, flush through pipework before refitting.
	Inlet water supplies are reversed (hot to cold supply).	Check the connections are the correct way round. Hot on the left and cold on the right when viewed from the front. Rework pipework as necessary.
Water leaking from showerhead.	This is normal for a short time after turning off.	Adjust angle of showerhead in holder as necessary to vary draining time.
	Shower flow valve failing to close fully, possibly due to water borne debris.	Remove flow valve and check. Refer to Aftercare section (page 10-11) before dismantling shower valve.
Maximum water temperature too hot or cold.	Maximum water temperature set incorrectly.	Reset maximum water temperature. Refer to Temperature setting (page 9).
Outlet water temperature too hot / cold.	Inlet filter is partially blocked.	Check inlet filters for any blockages and clean as necessary.
	Installation conditions outside operating parameters.	Refer to Water Supply Temperature (page 4). Refer to Aftercare section (page 10-11). Refer to Temperature setting (page 9).
Water temperature too cold Maximum water temperature incorrectly set.	Hot water temperature is less than 10°C above the required blend temperature.	Adjust hot water temperature or wait for water to reheat if stored system is used.
	Instantaneous water heater not igniting because water flow rate is too low.	Increase water flow rate through the system. Check inlet filters and clean or replace. Refer to Aftercare section (page 10-11). Contact the boiler manufacturer.