
170097 - Fiora Mono mixer


| Useful Information | | | | |
|----------------------------|---------|--|--|--|
| Minimum operating pressure | 0.3 bar | | | |
| Maximum operating pressure | 5 bar | | | |
| Wickes Guarantee Length | 5 Years | | | |

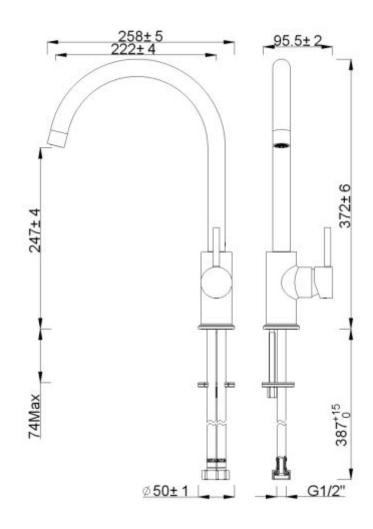

Technical Diagram



Exploded Diagram

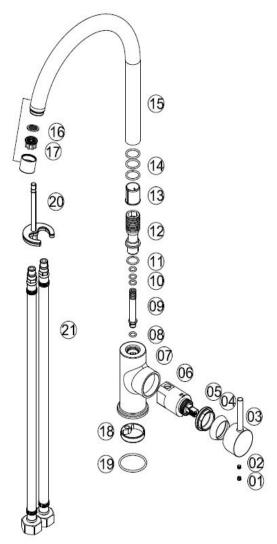

| Item Number | Suppliers Identification code | Item Description | Qty | Price (If purchased as a spare part) |
|-------------|-------------------------------|--------------------|-----|--------------------------------------|
| 1 | P67 | Indice | 1 | Yes |
| 2 | SC5-4SN | Screw | 1 | Yes |
| 3 | 167024-H | Handle | 1 | Yes |
| 4 | S278 | Valve Cover | 1 | Yes |
| 5 | N31-G | Cartridge Clamp | 1 | Yes |
| 6 | LT35D-11 | Cartridge Assembly | 1 | Yes |
| 7 | 177005-01 | Tap Body | 1 | No |
| 8 | OR074 | O ring | 1 | No |
| 9 | 177005-N3 | Adaptor | 1 | No |
| 10 | OR186 | O ring | 3 | No |
| 11 | OR109 | O ring | 1 | No |
| 12 | 177005-N1 | Adaptor | 1 | No |
| 13 | 177005-N2 | Block Ring | 1 | Yes |
| 14 | OR101 | O ring | 3 | Yes |
| 15 | 177005-02 | Spout | 1 | No |
| 16 | A14-01X | Washer | 1 | Yes |
| 17 | A13-02 | Aerator | 1 | Yes |
| 18 | 177005-N6 | Fixing Nut | 1 | No |

| 19 | OR111 | O ring | 1 | Yes |
|----|----------------|--------------------|---|-----|
| 20 | N28-M | Fixing kit | 1 | Yes |
| 21 | BZG10-1/2"-450 | Braided Connectors | 1 | Yes |

Flow Rates

FAQ

What should I do if my tap is dripping/leaking?

Cleaning the valve (if water dripping from tap)

Before carrying out any maintenance, turn off the mains water supply.

- (1). Remove the Braided connectors(b) from the tap body(a).
- (2) Press the button in and pull the spout(c) vertically until remove the spout(c).
- (3) Remove the cap(d), grub screw(e), handle(f), cover(g) and retaining nut(h).
- (4) Unscrew the adaptor anti-clockwise using 5mm allen key (not supplied) and then pull the cartridge until the cartridge(i) can be removed. Clean the cartridge(i) thoroughly under cold water to remove any build up of limescale or debris. If necessary replace the cartridge(i).
- (5) Replace the cartridge(i) into the body and screw the adaptor clockwise until tighten.
- (6) Tighten the retaining nut(h) using a suitable spanner. Replace cover(g) and handle(f), tighten

the grub screw(e) and re-fit cap(d) to handle(f).

- (7) Fit the Braided connectors(b) to the tap body. Ensure that the hot and cold braided connector(b) fit to inlet hole of the cartridge are correctly.
- (8) Ensure that the hole of the spout(c) aligned with the button of the black adaptor, then press the button of the black adaptor(j) and push

What does the Guarantee Cover?

The Guarantee Covering leakage, manufacturing defects and Chrome plating. The guarantee does not cover:

- Damage or defects caused by:
 - general wear and tear (including special non-chrome finishes; components such as filters, seals, 'O'rings and washers)
 - incorrect installation
 - repair using non- PPI parts
 - accidental or wilful misuse
 - corrosion and the use of inappropriate cleaning products.
 - system debris including the build up of limescale (which can be controlled through regular servicing and maintenance).
- Compensation for loss of use of the product or consequential loss of any kind.