

How To

Manual Tile Cutters

Vitrex® 
Sign of a professional job



Setting The Tile Cutter

Place the tile cutter on a flat surface.
Fit the angle guide if supplied




1 Attach the angle guard to the top of the cutter



2 Tighten knob to secure angle guide

Straight Cuts

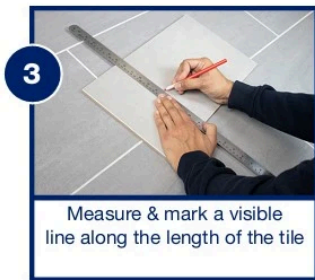


3 Measure & mark a visible line along the length of the tile




4 Place the tile on to cutter bed, line up the mark with the centre point indicator



5 Lift up the scoring handle, check the cutting wheel is on the edge of the tile

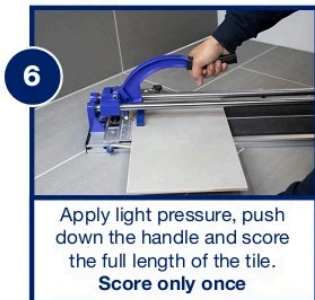

6 Apply light pressure, push down the handle and score the full length of the tile.
Score only once

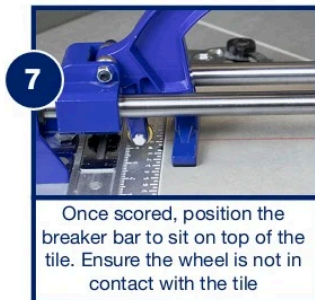

7 Once scored, position the breaker bar to sit on top of the tile. Ensure the wheel is not in contact with the tile



8 When the breaker bar is in place, apply pressure to the handle – excess force is not needed

Angled Cuts



9 Measure & mark a visible line along the length of the tile



10 Position the guide to the required angle



11 Repeat steps 5-8

Tips

- Use a Tile File to smooth sharp edges
- For smaller cuts and shaping, use Tile Nippers
- After cutting is complete, clean the cutter to prolong its life

