# **ZDLN1511**





#### Open the door to natural drying

The Series 20 AirDry dishwasher automatically opens the door in the final part of the cycle, letting fresh air inside - performing three times better than our closed-door systems. Automatic drying, with no extra effort from you. Just unload when it suits your schedule.

## **Product Benefits & Features**

### Three times better drying, with AirDry

AirDry technology lets air into the dishwasher in the last phase of the drying process. The door will automatically open to allow a 10cm gap, for up to threetimes better drying, compared to our closed-door systems.

#### Quick cycle, to suit your schedule

The Quick programme is ideal when you're short on time, with light loads treated in just 30 minutes. Clean dishes, on your schedule.

- Energy efficiency (2010/30/EC): A+ · Loading capacity: 13 IEC settings
- Installation: FI
- Noise level: only 49 (dB(A) re 1 pW) (2010/30/EC)
- Water and energy consumption: 9.9 l, 1.039 kWh for program Eco 50
- 5 programmes, 3 temperatures
- · Dishwasher programmes: 160 Minutes, 90 Minutes, Eco, Quick 30 Minutes, Rinse & Hold
- Text/symbol panel
- · Panel with symbols
- Warm water connection up to 60°C
- · Delay start option: 3h
- · Indications for salt and rinse aid
- Height adjustable upper basket
- Upper basket with Foldable cup shelves · Lower basket with Fixed plate racks
- · Cutlery basket
- Built-in H(min/max)xWxD (mm): 820/880 x 600 x 550

## Total peace of mind, with MachineCare

 
The MachineCare programme is designed to keep the dishwasher working at its best. When combined with our special cleaning detergent, grease and limescale are washed away, for better performance and cleaner dishes.

## PerfectFit, for effortless installation

The PerfectFit sliding hinges make it really easy to ensure your dishwasher blends in with the rest of your kitchen. The hinges are designed to suit all counter top heights, removing any need to cut the plinth. The perfect fit, every

## Rinse and hold pre-washing keeps your dishwasher fresh

If it takes you a few days to fill up the dishwasher, the rinse and hold programme will prevent the build-up of odours in the meantime. Water jets remove food remnants from plates and glassware, making sure the kitchen stays fresh.





# **Product Specification**

Product Installation	Built_In
Product Typology	Full_Width(60cm)
Product Classification	Entry
Installation	FI
Cabinet type of	60 FI SLIDING
Panel colour	White
Door colour	None
Side walls colour	Rough zinc coated
Type of timer min.	EDW503
Push button functions	Delay start, On/off, Program selection, Reset
Knob/Command functionality	No
Programmes number of	5
Number of temperatures	3
Dishwasher programs	160 Minutes, 90 Minutes, Eco, Quick 30 Minutes, Rinse & Hold
Indicator programme	LED
Indicators display	None
Indicators other	Buzzer, Delay start 3h, Drying phase, Program selected, Rinse aid, Salt
Height total	818
Width mm	596
Depth mm	550
Tub material	Stainless steel

Heating element type of	Interheater
Inlet hose type of	Standard hot
Inlet hose length	150
Water supply	Cold or hot
Anti-flood device	Floating switch
Drying system	AirDry Technology
Softening regulation	10 steps
Top spraying level	None
Lower spray arm	Standard

