

 
 
 
★ ★ ★ ● TRISTAR

EN | Instruction manual




AT-5443BS

PARTS DESCRIPTION

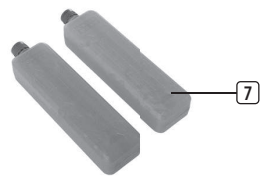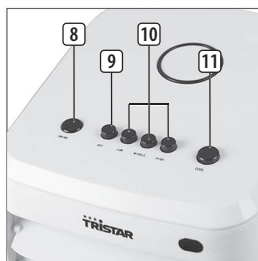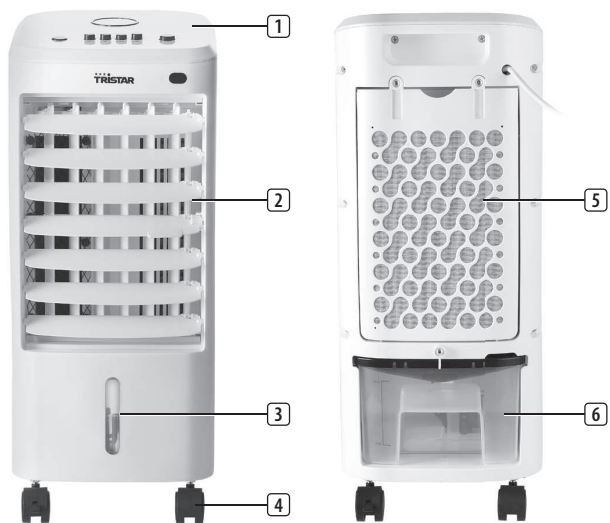

SAFETY

- By ignoring the safety instructions the manufacturer cannot be held responsible for the damage.
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
 - To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
 - The appliance must be placed on a stable, level surface.
 - The user must not leave the appliance unattended while it is connected to the supply.
 - This appliance is only to be used for household purposes and only for the purpose it is made for.
 - This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- Empty the tank and refill every third day. Before refilling, clean it with fresh tap water or cleaning agents if required by the manufacturer. Remove any scale, deposits, or film that has formed on the sides of the tank or on interior surfaces, and wipe all surfaces dry.
 -  Clean the filter regularly.
 - Be aware that high humidity levels may encourage the growth of biological organisms in the environment.
 - Unplug the appliance during filling and cleaning.
 - Never leave water in the reservoir when the appliance is not in use.

- Empty and clean the air cooler before storage. Clean the air cooler before next use.
- **WARNING:** Microorganisms can grow in the water reservoir and be blown in the air causing serious health risks when the water is not renewed and the tank is not cleaned regularly and properly.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local Authority or local store for recycling advice.



This product complies with conformity requirements of the applicable European regulations or directives.



The Green Dot is the registered trademark of Der Grüne Punkt – Duales System Deutschland GmbH and is protected as a trademark worldwide. The logo may only be used by customers of DSD GmbH holding a valid trademark usage contract or by engaged waste management companies within the Federal Republic of Germany. This also applies to reproduction of the logo by third parties in a dictionary, an encyclopaedia or an electronic database containing a reference manual.



In a double-insulated appliance, two insulation systems are provided instead of an earth wire. No earthing means is provided on a double-insulated appliance, nor should a means for earthing be added to the appliance. Servicing a double-insulated appliance requires extreme care and knowledge of the system, and should only be done by qualified service personnel. The replacement parts for a double-insulated appliance must be identical to the parts they replace. A double-insulated appliance is labelled with the words 'CLASS II' or 'DOUBLE INSULATED'. It can also be identified with the double insulation symbol.



The product and packaging materials are recyclable, subject to extended manufacturer responsibility. Dispose it separately, following the illustrated packaging symbols, for better waste treatment. The Triman logo is valid in France only.

Cleaning and maintenance

- Always disconnect the power cord from the socket before any cleaning.
- Clean the outside with a damp cloth. Never use harsh and abrasive cleaners, steel wool or a scouring pad as this will damage the device. Do not immerse in water or other liquid.

 
- Removable air filter and evaporation pad. Remove them from the back of the unit, then wash them in warm water with a mild detergent and a soft brush. Take care not to pierce the pad and filter.
 - Please ensure that the unit and all of its parts are cleaned regularly to reduce the risk of limescale and bacteria forming. The evaporation pad must be installed flatly, in order to avoid leaking.
 - If the fan will not be used for a long period of time, drain the condensate water and store it in a dry place.
 - This electrical appliance was manufactured in accordance with the relevant safety requirements. Repairs should only be carried out by qualified persons using original spare parts, otherwise this may result in considerable danger to the user.
4. Caster wheel
 5. Filter
 6. Water tank
 7. Ice boxes
 8. Swing button
 9. Off button
 10. Low / Middle / High buttons
 11. Cool button

BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50Hz)
- Fill the water tank.

PARTS DESCRIPTION

1. Control buttons
2. Air outlet
3. Water level indicator

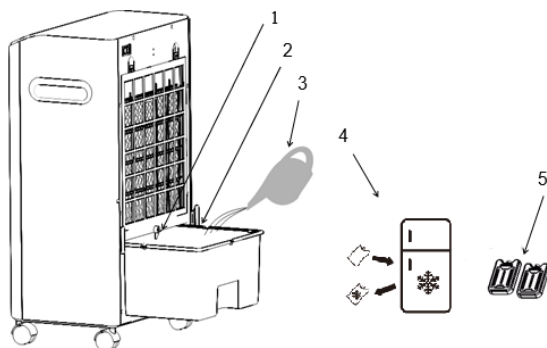

1. Rotate the small knob to release the water tank.
 2. Pull out the water tank.
 3. Add water into the tank to at least the minimum level but don't exceed the maximum level indicator.
 4. Pour water into the ice box and put in the freezer until it is completely frozen.
 5. Put the frozen ice boxes into the water tank.
- The frozen ice boxes can be put in the water tank to increase the cooling effect.

! Do not use the cooling / evaporator function if the water tank is empty or if the water level is below the minimum mark, it can severely damage the pump.

USE

- **Swing** : Use the swing button to turn on the oscillation mode. The airflow will now move from side to side.

- **Off** : Press the off button to turn the device off.
- **Low/Middle/High** : Press the speed buttons to select the desired airflow speed. There are three levels to choose from (low, middle and high speed).
- **Cool** : Press the cool button to turn on the humidification cooling function. The unit will act as a evaporator now. If combined with the ice boxes, this unit can lower its surrounding temperature even more.
- If you want to use the ice boxes, remember to put it in the freezer beforehand. Use them when they are completely frozen.

ENVIRONMENT



■ This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

Support

You can find all available information and spare parts at www.tristar.eu!





TRISTAR Europe B.V.
Swaardvenstraat 65 | 5048 AV | Tilburg
The Netherlands | www.tristar.eu



smartwares® Safety and Lighting Ltd.
West Point, Second Floor | Mucklow Office
Park Mucklow Hill | Halesowen | West
Midlands | B62 8DY United Kingdom |
www.princesshome.co.uk