

 
 
 


EN Instruction manual



SMART Air Cooler


01.358640.02.001

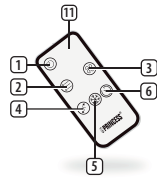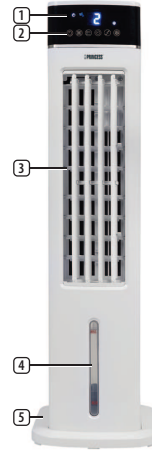

SAFETY

- By ignoring the safety instructions the manufacturer cannot be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- The appliance must be placed on a stable, level surface.
- The user must not leave the appliance unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of

experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.

- Empty the tank and refill every third day. Before refilling, clean it with fresh tap water or cleaning agents if required by the manufacturer. Remove any scale, deposits, or film that has formed on the sides of the tank or on interior surfaces, and wipe all surfaces dry.
-  Clean the filter regularly.
- Be aware that high humidity levels may encourage the growth of biological organisms in the environment.
- Unplug the appliance during filling and cleaning.
- Never leave water in the reservoir when the appliance is not in use.

- Empty and clean the air cooler before storage. Clean the air cooler before next use.
- **WARNING:** Microorganisms can grow in the water reservoir and be blown in the air causing serious health risks when the water is not renewed and the tank is not cleaned regularly and properly.



This product complies with conformity requirements of the applicable European Regulations or Directives.



This product complies with conformity requirements of the applicable UK Regulations.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Lokal Authority or local store for recycling advise.

Safety Coin cell



BATTERY WARNING: KEEP OUT OF REACH OF CHILDREN

Store spare batteries securely. Dispose of used batteries immediately and safely. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

- If the battery compartment does not close securely, stop using the product and keep it away from children.
- Be alert, there are no obvious symptoms if a child has swallowed a button or coin battery. If your child appears unwell and there are no obvious symptoms, then check to make sure there are no batteries missing from any items they have been around. If you suspect they have swallowed a coin/button cell, then seek medical attention. Similarly, if they vomit bright red fresh blood seek immediate medical help.
- Always remain vigilant with discharged or spare button or coin batteries in the home and in products that contain them.



PRODUCT CONTAINS A COIN/BUTTON CELL

PARTS DESCRIPTION

1. Display
2. Control panel
3. Air outlet with swing louvers
4. Water level window
5. Base
6. Handle
7. Back mesh
8. Water reservoir
9. Pump
10. Ice packs (2x)
11. Remote control

Remote control

1. ON/ OFF
2. Mode
3. Speed
4. Swing
5. Cool
6. Timer

BEFORE THE FIRST USE

 
- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Before using your appliance for the first time, wipe off all removable parts with a damp cloth. Never use abrasive products.
- Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.

- When using, plug the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50Hz).

INSTALLING THE BATTERY TO THE REMOTE CONTROL

The remote control uses a cell battery, type **CR2025(3V)** To install the battery to the battery carriage-

- Use your thumb to push the child proof release tab to the right.
- Pull the battery carriage out.
- Place the battery into the carriage and slide the carriage back into the remote control.

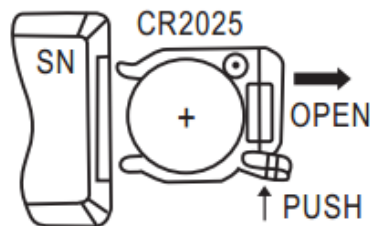

FILLING THE WATER RESERVOIR

- Open the water reservoir located at the back of the unit.
- Fill the water reservoir with clean, cold water. Make sure that the water level is between the MIN (minimum) and the MAX (maximum). See the water level indicator at the front the water reservoir.
- To increase the cooling effect insert the cooled ice pack inside of the water reservoir.

- Pay attention to the water level when using the ice packs, the water level must never exceed the maximum level allowed.

WI-FI PAIRING

- To pair the device with Wi-Fi long press the [ON/OFF] icon for 6 seconds until the wi-fi signal flashes on the screen and you hear 3 beeps.

USING THE DEVICE WITH PRINCESS HOME APP

Download the correct version of the Princess Home app via our website princesshome.eu/nl-nl/princess-home-app or use QR:



iOS™



Android™


Pair your device to the Princess Home app

- Make sure your device is powered.
- Open the Princess Home app.
- Select your country code, enter the cell phone number and tap "Get" to get a message containing the verification code.
- Enter the verification code in the message and tap "Log in" to log in to the App.
- Click "Add Device" to add a new device.



 





- Select the device you wanted to connect.
- Follow the instructions on the app to connect the device.
- To control your device with voice using a smart speaker please refer to the manufacturer's instructions on how to enable a skill through your device.

USE

- Place the unit on a firm level surface.
- Plug in the unit.
- Press the [ON/OFF] button to turn the unit on or off. The display will light up for 10 seconds showing the current settings.
- If using the Princess Home App long press (6 seconds) the [ON/OFF] icon to first pair the unit with Wi-Fi. When there is a connection, the Wi-Fi icon  will flash for 10 seconds on the screen before being dimmed.
- Select the desired setting using the icons on the display, on the remote control or in the Princess Home App.

SETTINGS

					
ON/ OFF	SPEED	MODE	TIMER	SWING	COOLING

SPEED

- Press the SPEED icon to increase or decrease the fan speed. Choose from 3 levels - 1 LOW - 2 MEDIUM- 3 HIGH.

MODE

- Press to MODE icon to choose between 3 different breeze patterns - The display panel will show the current mode



Normal fan mode



Natural - (randomly cycle through different speed settings to recreate an outdoor natural breeze)



Sleep - (slows down the fan speed so you can still feel the air flow with reduced noise level)

- **Sleep mode:**

Firstly select the fan speed, then select sleep mode. The sleep mode will begin from the selected fan speed and reduce down to low speed where it will remain.

TIMER

- Press the TIMER icon to activate the timer. Push repeatedly to increase the time. The timer can be set to automatically turn off the fan after 1-24 hours.

SWING

- Press the SWING icon for the fan blades to oscillate, press again to turn off.

COOLING

- Press the cooling icon for the cold function. Add the freezing ice pack to the water reservoir for even cooler breeze. Pay attention to the water level in the reservoir when the ice pack is added. The water level must never exceed the maximum allowed.

STANDBY MODE

- When the unit is first plugged in, it will emit a beep and the unit will enter standby mode.
- The display will not show data when in standby mode, if the Wi-Fi is active it will dimly display only a flashing Wi-Fi icon.

Memory Function

- If the unit is turned off using the [ON/OFF] icon, the mode and wind speed settings will be recalled when the unit is turned back on.
- If the unit is shut down due to a power failure, the default setting will override the previous settings.

Water level sensor

- The unit is featured with a water level sensor. In case of the reservoir having too little water in when in cooling mode you will receive a warning: the "COOL" icon will flash repeatedly for a few seconds. In the Princess Home App you will also see an indication that the water level is low.

CLEANING AND MAINTENANCE

- Always disconnect the power cord from the socket before any cleaning.
- Clean the outside with a damp cloth. Never use harsh and abrasive cleaners, steel wool or a scouring pad as this will damage the device. Do not immerse in water or other liquid.
- **To clean the water reservoir;** Unlock the latch on the reservoir. Open the water reservoir. Unscrew the screws holding the pump to the water reservoir. Remove the water reservoir and clean it with warm soapy water. After cleaning install the reservoir and the screws to the unit.
- If the fan will not be used for a long period of time, drain the condensate water and store it in a dry place.
- This electrical appliance was manufactured in accordance with the relevant safety requirements. Repairs should only be carried out by qualified persons using original spare parts, otherwise this may result in considerable danger to the user.

Cleaning the filter

- Keep the filter clean by regularly wiping the back of the unit with a soft, damp cloth, do not use abrasives as this will damage the exterior of the unit.
- Gently vacuum any accumulated dust on mesh covering the filter.

ENVIRONMENT



■ This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol

on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

Support

You can find all available information and spare parts at www.princesshome.co.uk.





This product is only suitable for well insulated spaces or occasional use.

Wireless technology: Wi-Fi

Operating frequency: 2400MHz~2483.5MHz

Max. radio-frequency power: 18 dBm



smartwares[®] Europe
Swaardvenstraat 65 | 5048 AV | Tilburg
The Netherlands | www.princesshome.eu



smartwares[®] Safety and Lighting Ltd.
West Point, Second floor | Mucklow Office Park
Mucklow Hill Halesowen | West Midlands | B62 8DY |
United Kingdom | www.princesshome.co.uk