



Laminate Upstand

Installation & Maintenance

 
You may now need:

- Silicone Sealant
- Upstand Accessories




Cutting

Measure your upstand and use a soft pencil on the laminate surface. If you do not wish to mark the laminate surface then put masking tape down first and mark on the tape with a soft pencil. Mark the face if cutting with a handsaw or the back if using a power saw and always double check your measurements before cutting. Remember to allow for any edging to be added. If the end of the upstand is against a wall the angle may vary as very few rooms are completely square. Edges may be trimmed using a sharp plane or fine file.

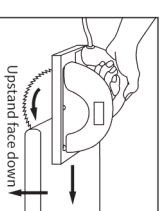

 When using an electric saw you should start from the decorative profiled front edge cutting the upstand face down.

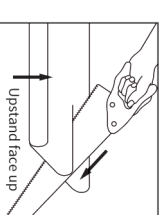

When using a handsaw the decorative face should be uppermost and again you should start from the decorative profiled front edge keeping the saw at a low angle to ensure the best cut. Ensure that your saw is sharp and well set and has 10/12 teeth per inch.

Installing

When fixing to the worktop apply a bead of silicone to the work surface and press the upstand down ensuring the silicone is squeezed out. Remove excess silicone, this ensures a good moisture seal between worktop and upstand. Use an adhesive e.g. Silicone or equivalent to fix upstand to wall.

NOTE: All surfaces that are not laminated must be sealed with silicone sealant before final fixing. Upstand accessory fitting kits may also available in-store.

NOTE: When cutting upstands always wear a suitable dust mask.

NOTE: For installations behind a hob please refer to the hob manufacturers guidelines for fitting suitability and requirements.

Cut edges may be finished off by applying laminate edging strip. Having ensured that the cut edge is flat, clean and dust free, apply contact adhesive to the edge and apply the edging strip, pressing along its length to ensure a good bond. Wipe off any deposits of glue from the face and edging of the upstand immediately with a damp cloth.

Edging tape should be applied with contact adhesive for which you should follow the manufacturer's instructions.

General Maintenance

WILSONART UPSTANDS have a laminate surface resistant to abrasion, high temperatures, impact and most household stains. Use a damp cloth and a mild detergent or non-abrasive cleaner to keep the laminate clean. Any potentially stubborn stains should be removed immediately. The use of abrasive cleaners should be avoided.



Wilsonart Limited, Lambton Street Industrial Estate, County Durham, DL4 1PX

T: 01388 774661 F: 01388 774861

www.wilsonart.co.uk