



**GDG961AB**

**GDG966AB**

**GDG969AB**

**EN** User Manual | **Cooker Hood**



# Welcome to AEG! Thank you for choosing our appliance.



Get usage advice, brochures, trouble shooter, service and repair information:  
[www.aeg.com/support](http://www.aeg.com/support)

Subject to change without notice.

## CONTENTS

1. SAFETY INFORMATION AND INSTALLATION.....	2
2. PRODUCT DESCRIPTION.....	2
3. DAILY USE.....	3
4. CARE AND CLEANING.....	7
5. TROUBLESHOOTING.....	9
6. ENVIRONMENTAL CONCERNS.....	10


## 1. SAFETY INFORMATION AND INSTALLATION

### **WARNING!**

Refer to the separate Installation Instructions booklet for Safety Information and Installation. Read carefully the Safety chapters before any use or maintenance of the appliance.

## 2. PRODUCT DESCRIPTION

### 2.1 Control panel overview

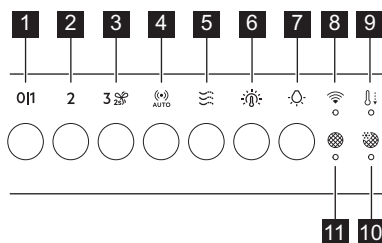



Function	Description
<b>1</b> First Speed / Off	The motor switches to first speed level. Second press or long press while other functions operate, turns off the appliance.
<b>2</b> Second speed	The motor switches to second speed level. Second press turns off the appliance.

Function	Description
<b>3</b> Third speed / Boost function	The motor switches to third speed level. Press and hold for 2 seconds to activate the Boost function. Second press turns off the appliance.
<b>4</b> AutoSense	Activates and deactivates the AutoSense function.
<b>5</b> Breeze	The hood operates on the lowest speed. After 60 minutes the motor turns off.
<b>6</b> Light colour temperature	Changes the light colour temperature.
<b>7</b> Lamp	Turns the lights on and off. Changes the light intensity.
<b>8</b> WiFi indicator	Indicates WiFi connection status.
<b>9</b> Automatic cool down	Indicates that the Automatic cool down is active.
<b>10</b> AutoSense filter notification	Reminds to change or clean the AutoSense filter.
<b>11</b> Filter notification	Reminds to change or clean the charcoal filter and clean the grease filter.

## 3. DAILY USE

### 3.1 Using the hood - manual mode

Check the recommended speed according to the table below.

<b>01</b>	While heating up food, cooking with covered pots.
<b>2</b>	While cooking with covered pots on multiple cooking zones or burners, gentle frying.
<b>3</b>	While boiling and frying big quantities of food without a lid, cooking on multiple cooking zones or burners.
	While boiling and frying big quantities of food without a lid, big humidity. After 8 minutes the appliance returns to previous setting.
	Refreshes the air in kitchen after cooking at a very low noise level. The function turns off automatically after 60 minutes. Use after cooking only.



It is recommended to leave the hood operating for approximately 15 minutes before and after cooking.

#### Activating the appliance

##### To operate the hood:

Press the desired fan speed button.

#### Deactivating the appliance

 

To turn off the fan touch the activated speed again or long press **01**.


#### Perfect Illumination - Lighting



The hood lighting works independently to other hood functions.

#### Activating and deactivating the lighting

To illuminate the cooking surface press  button. Press the  button again to change the light intensity in the following order: Maximum, Medium, Low, Off.



To switch off the lights, press and hold the  button for 3 seconds.

#### Setting the light colour temperature



The hood remembers the last setting of the light colour temperature.


 
There are two ways to set the light colour temperature:

1. Press the  button to change the colour temperature from neutral, through warm to cold.
2. Press and hold the  button to move smoothly between light colour temperatures. Release it once you reach the desired setting.

### AuroraTech®

It is a function that automatically adjusts the illumination colour and intensity based on the time of day, creating an optimal ambiance. Use the app to activate this function.



After activating from the app, the function will operate each time the lighting is switched on. You can still manually adjust the lighting settings using the  and  buttons. However, the AuroraTech® function will be deactivated.

### 3.2 Hob<sup>2</sup>Hood function

It is an automatic function which connects the hob with a hood. Both the hob and the hood have an infrared signal communicator. Speed of the fan is defined automatically on basis of mode setting and temperature of the hottest cookware on the hob. You can also operate the fan using the hob manually. The function can be activated from panel of the hob.




For more information how to use the function, refer to the hob user manual.





For information on how to use the function together with AutoSense function, refer to the AutoSense chapter.

### 3.3 Activating Boost Function

When you press and hold , the Boost function starts to operate for 8 minutes. After that time, the appliance returns to its previous speed settings.

### 3.4 AutoSense


The function automatically adjusts the fan speed level basing on the TVOC sensor (Total Volatile Organic Compounds), air temperature, and relative humidity coming from the hob.

1. Press  to turn on the function. The function indicator lights up.
2. To turn off the function, press  or any other speed level button on the hood control panel.

#### WARNING!

If your hob is equipped with the Hob<sup>2</sup>Hood function, switch its mode to **H1** to use it together with the AutoSense. In this mode, the AutoSense function and lighting are activated automatically each time the hob is turned on. Refer to hob user manual.

#### WARNING!

During the first 96 hours after plugging in the appliance, the function runs in a dedicated startup mode for air sensor tuning. Hood reactions may vary at the startup mode. During that time the  indicator pulsates.


#### WARNING!

A blackout or unplugging and plugging in the appliance again causes internal sensor self-tuning. It may take up to 24 hours for the function to regain full capability.



The AutoSense function can run for a maximum of 5 hours.



Pressing the  button with the hood off will start the AutoSense function at Breeze speed by default. When another speed has been already selected and the fan is working, the AutoSense function will start at that speed.

### CAUTION!

This function is sensitive to cleaning agents. After cleaning, wait at least half an hour before turning on the function to avoid unintentional activation of the Boost function.







When used with a gas hob, the function may operate at higher speeds due to gas combustion.







While preparing food that generates little odour over an extended period (e.g. simmering), the hood may stop and then restart within a few seconds. If the hob power level is very low, the generated odour may not be sufficient for AutoSense to function properly. If your hood switches off and does not restart, use manual mode to operate it.

 
### To permanently deactivate the function:

1. Make sure the fan and the lighting are turned off.
2. Press and hold the  and  buttons.  
 and  indicators blink twice.


### To activate the function again:

1. Make sure the fan and the lighting are turned off.
2. Press and hold the  and  buttons.  
 and  indicators blink once.



### 3.5 Automatic cool down


This function turns on automatically when the temperature of the hood exceeds 70°C. The hood continues to operate on the third speed to cool down. The indicator with the symbol  on the panel turns on.



For safety reason, if the temperature grows higher while the function is active, the hood turns off and symbol  starts to blink. The hood can be turned on again when the indicator stops blinking.

### 3.6 Filter notification

The filter alarm serves as a reminder to clean the grease filter and either replace or clean the charcoal filter, depending on its type. The indicator  and  blinks regularly for 30 seconds if the grease filter must be cleaned.

The indicator  and **2** blinks twice per every second for 30 seconds if the charcoal filter must be replaced or cleaned. Reset can be performed during or out of the notification period.



This function is activated after 40 hours of the operation of the hood when the grease filter requires cleaning and after 160 hours when the charcoal filter requires cleaning or replacement.




Refer to cleaning the grease filter in Care and cleaning chapter.




Refer to cleaning the charcoal filter or replacing the charcoal filter in Care and cleaning chapter.


### To reset the function counter:

For grease filter, press and hold  for 3 seconds.



For charcoal filter, press and hold **2** for 3 seconds.

The indicator stops blinking for the correct reset in the notification period. The indicator  blinks once for correct reset out of the notification period.

### To activate or deactivate the filter notification for charcoal filter:

1. Make sure the fan and the light are turned off.
2. Press and hold **2** and  for 3 seconds. The function is activated if both indicators blink once. The function is deactivated if both indicators blink twice.

### 3.7 AutoSense filter notification


Filter alarm reminds to clean the AutoSense filter. The indicators  and  blink regularly for 30 seconds if the filter must be cleaned.



Refer to Care and cleaning chapter.


A reset can be performed during or out of the notification period.


To reset the function **during the notification period:**

1. Press and hold the  button for 3 seconds.

Indicators  and  stop blinking for the correct reset.



To reset the function **out of the notification period:**

1. Make sure that the fan is turned off.
2. Press and hold the  button for 3 seconds.

The indicator  blinks once for the correct reset.

### 3.8 Deactivating and activating panel sounds

To deactivate or activate the sounds of the panel:

1. Make sure the fan and the lighting are turned off.
2. Press and hold  and  buttons. Both indicators blink once if sounds are enabled and twice if sounds are disabled.



The off sounds of the hood cannot be disabled.

### 3.9 WiFi connectivity setup

This feature enables you to connect your appliance to a WiFi network and pair it with your mobile device. Using this feature, you can access additional functions, control and monitor your appliance from your mobile device, and receive notifications.

To connect the appliance you need:

- Wireless network with the Internet connection,
- Mobile device connected to your wireless network.

<b>Frequency/Protocol</b>	WiFi: 2.4 GHz / 802.11 bgn
<b>Power</b>	WiFi 2.4 GHz: <20 dBm
<b>Encryption</b>	WPA-PSK, WPA2-PSK, WPA3-SAE

 
 

### Installing the app

Take the following steps to connect the appliance to WiFi :


1. Make sure that the appliance is plugged into a power socket and turned on.
2. Make sure that your mobile device is connected to the same wireless network you want to add your appliance to.
3. To download the app, use your mobile device's camera to scan the QR code located on the back cover of the user manual. You can also download the app directly from Google Play (Android) or App Store (iOS).
4. Open the app and register to create an account.


### Configuring the appliance wireless connection

Follow the instructions in the app to complete the onboarding process:


1. Press and hold  and  buttons on your appliance, the  indicator flashes continuously. The onboarding process is ongoing.
2. Continue to follow the instructions in the app to complete the onboarding process.



To stop the onboarding process, press the  or any of the speed level buttons.


After the successful onboarding, the  indicator stops flashing and becomes steady.





If the onboarding process exceeds 1 minute, the control panel enters standby mode, the  indicator turns off, and the app provides feedback on the onboarding status.




If the onboarding process is unsuccessful, the indicator flashes rapidly for 6 seconds and then turns off. Repeat the procedure.







Each time the action is performed using the app, the  indicator blinks 3 times.

### Disabling / Enabling the appliance wireless connection

 To temporarily disable the WiFi connection, press and hold  and .

buttons. The  and  indicators blink twice and the  indicator turns off.

### To enable the WiFi connection again,

press and hold  and  buttons,  and  indicators blink once.

### Resetting the appliance wireless connection

To offboard the WiFi network, press and hold  and  buttons. The  indicator blinks until the successful reset.

This action results in the removal of the appliance from the WiFi network. To re-establish the connection, repeat all the steps described in the 'Configuring the appliance wireless connection' section.

## 4. CARE AND CLEANING

### 4.1 Notes on cleaning



Cleaning Agents

#### Do not use abrasive detergents and brushes.

Clean the surface of the appliance with a soft cloth with warm water and a mild detergent.

After cooking some parts of appliance can get hot. To avoid stains appliance must be cooled down and dried with clean cloth or paper towels.

Clean stains with a mild detergent.



Keep the hood clean

Clean the appliance and grease filters each month. Clean the interior and grease filters carefully from fat. Fat accumulation or other residue may cause fire.

Grease filters can be washed in a dishwasher.

The dishwasher must be set to a low temperature and a short cycle. The grease filter may discolour, it has no influence on the performance of the appliance.



Charcoal filter

The time of saturation of the charcoal filter varies depending on the type of cooking and the regularity of cleaning the grease filter. The activated charcoal filter is not washable, cannot be regenerated and must be replaced approximately every 4/6 months of operation, or more frequently for particularly heavy usage.




Before carrying out any maintenance, make sure there is no cookware on the hob and that the hood and the hob are disconnected from the power supply.

## 4.2 Cleaning the grease filter


Filters are mounted with the use of clips and pins on the opposite side.

To clean the filter:

1. Pull the cover to open it.

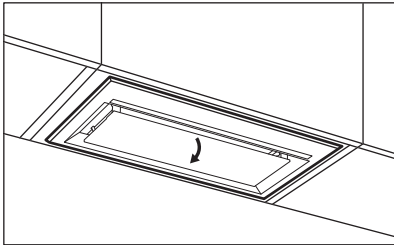

2. Pull the handle on the filter underneath the hood and slightly tilt the front of the filter down.

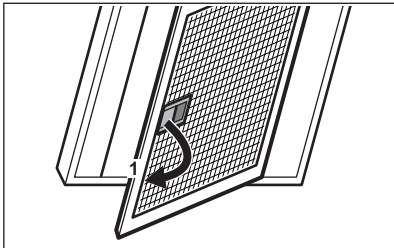

3. Clean the filters using a sponge with non abrasive detergents or in a dishwasher.



The dishwasher must be set to a low temperature and a short cycle. The grease filter may discolour, it has no influence on the performance of the appliance.

4. To mount the filters back follow the first two steps in reverse order. Repeat the steps for all filters if applicable.

## 4.3 Replacing the charcoal filter

### WARNING!


The charcoal filter is non-washable!

To replace the filter:

1. Remove the grease filters from the appliance.


Refer to "Cleaning the grease filter" in this chapter.

2. Pull the tabs towards the bottom part of the filter.

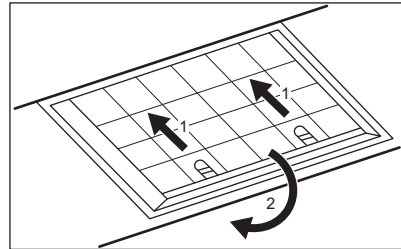

3. Slightly tilt the front of the filter downwards, then pull.

4. To install a new filter, perform the steps in the following order.

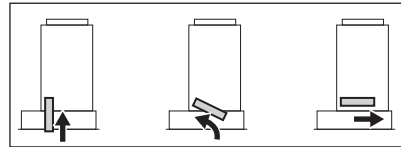

Refer to the separate Installation Instructions booklet.

In any case, it is necessary to replace the filters at least every four months.

## 4.4 Cleaning the AutoSense filter



The AutoSense filter must be cleaned when the filter notification is on. Refer to the "AutoSense filter notification" chapter.


To remove the filter:

1. Remove the grease filters from the appliance.

Refer to the "Cleaning the grease filter" chapter.



- Turn the filter clockwise (1) and then pull (2).

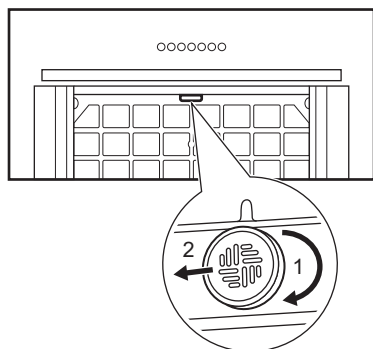

- Wash the filter in hot water without using detergent.
- To install the filter back, perform the steps in reverse order.

**! CAUTION!**

The filter has to be fully dried before installing it back into the appliance.

### 4.5 Replacing the lamp

This appliance is supplied with a LED lamp and separate control gear (LED driver). These parts can be replaced by a technician only. In case of any malfunction refer to "Service" in the "Safety Instructions" chapter.






 
## 5. TROUBLESHOOTING

**! WARNING!**


Refer to Safety chapters.


### 5.1 What to do if...

Problem	Possible cause	Remedy
You cannot activate the appliance.	The appliance is not connected to a power supply or it is connected incorrectly.	Check if the appliance is correctly connected to the electrical supply.
You cannot activate the appliance.	Lack of electrical power supply.	Check the fuse or the main switch. If the fuse or the switch continue to break the circuit, contact a qualified electrician.
You cannot activate the appliance.	Cabinet doors are not aligned with the cabinet frame.	Align the cabinet doors.
The lamp does not operate.	The lamp is defective.	Replace the lamp. Refer to the "Care and Cleaning" chapter.
The brightness level or light colour temperature is not as described in the instructions.	Incorrect Perfect illumination setting.	Press the  button to check if you are able to change all three colour temperatures.
	The lamp is defective.	Contact an Authorised Service Centre.
The appliance does not absorb enough vapours.	The motor speed is not adequate to the appearing vapours.	Change the speed of the motor.
The  indicator pulsates.	The internal sensor of the function is in the self-tuning mode.	Refer to the AutoSense in "Daily use" chapter.


Problem	Possible cause	Remedy
The  indicator blinks rapidly three times, and the AutoSense function does not start.	The function is permanently deactivated.	Activate the function. Refer to the AutoSense in "Daily use" chapter.
The  indicator blinks rapidly for three seconds, and the AutoSense function does not start.	There is a malfunction.	Contact an Authorised Service Centre.
The filter alarm indicator  is on together with  or <b>2</b> .	The filter alarm is on. The grease filter must be cleaned or the charcoal filter must be replaced or cleaned.	Refer to the filter notification in "Daily use" chapter.
The filter alarm indicator  is on together with  .	The AutoSense filter alarm is on. The filter must be cleaned.	Refer to the AutoSense filter notification in "Daily use" chapter.
		Check the wireless signal.
		Make sure that the wireless connection is on. Refer to "WiFi connectivity setup" chapter.
		Check if your mobile device is connected to the wireless network.
		Check your home network and router.
The App cannot connect to the appliance.	Connectivity issues.	Restart the router.
		Contact your wireless service provider if there are further problems with the wireless network.
		The appliance, the mobile device, or both need to be configured again because a new router has been installed or the router configuration has been changed. Refer to "WiFi connectivity setup" chapter.
The App cannot frequently connect to the appliance.	Connectivity issues.	Make sure that the wireless signal reaches the appliance. Try to move the home router as near the appliance as possible or consider purchasing a wireless range extender.
		Make sure the wireless signal is not disrupted by a microwave. Turn the microwave off. Avoid using the microwave and the remote control of the appliance at the same time.

## 6. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and

electronic appliances. Do not dispose of appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.



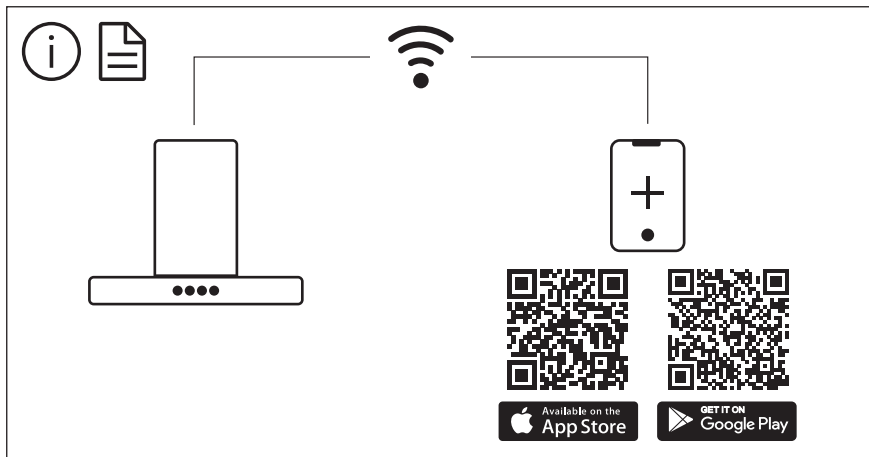

The software in this product contains components that are based on free and open source software. AEG gratefully acknowledges the contributions of the open software and robotics communities to the development project.

To access the source code of these free and open source software components whose license conditions require publishing, and to see their full copyright information and applicable license terms, please visit:  
<http://aeg.opensourcerepository.com> (folder NIUS)