


Installation Instructions For:

**ST90CP10-70**  
**ST90CB10-70**  
**ST90WH10-70**  
**ST90MW10-70**

# 90mm x 50mm WATER SEAL SHOWER TRAP



**1.**

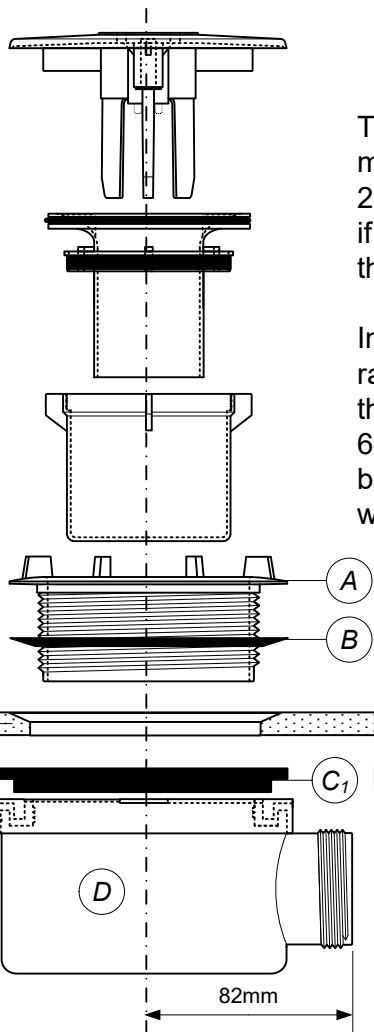


The Trap provides a flow rate of 34 litres per minute when tested in accordance with EN274-2:2002. The flow rate can be seriously impaired if an adequate fall is not maintained throughout the length of the waste pipe.


In order to maintain a high performance flow rate, two sealing washers are supplied. If the thickness of the waste outlet hole, 'X' measures 6mm or greater, the thinner washer, C<sub>1</sub>, should be used. If less than 6mm, use the thicker washer, C<sub>2</sub>.

Install Trap into shower tray by assembling parts A, B, C, D & E as illustrated.

Connect Trap Outlet, E, to waste pipe, ensuring that the pipe is adequately supported. Test the installation.

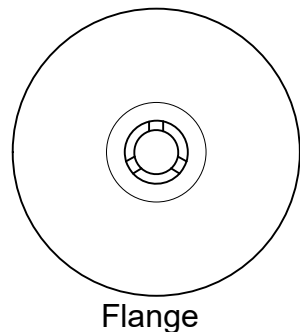


**2.**

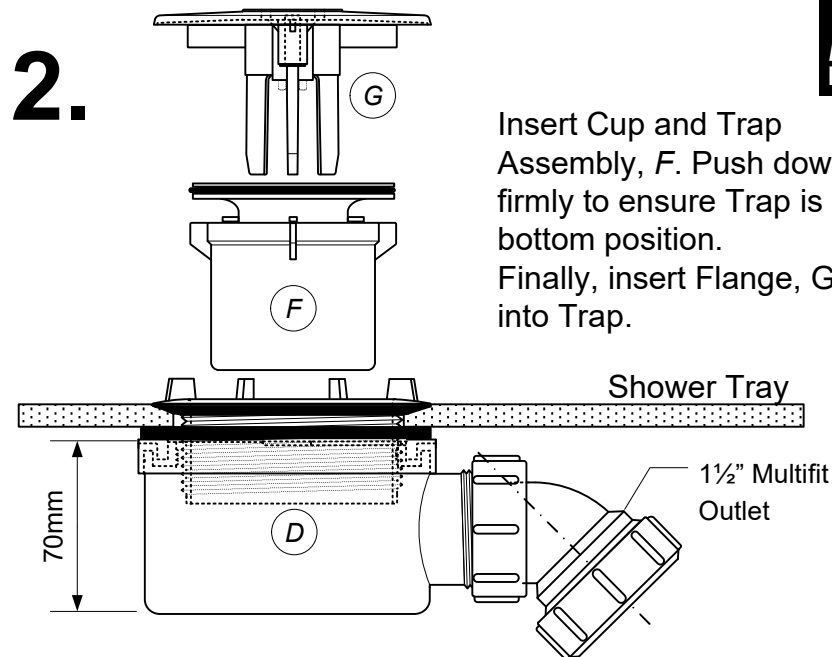

Insert Cup and Trap Assembly, F. Push down firmly to ensure Trap is in bottom position. Finally, insert Flange, G, into Trap.

If a silicone sealant is used, it should be a neutral sealant and **not** an acetoxy sealant. We recommend McAlpine MACXSEAL.

## 3. Completed Assembly

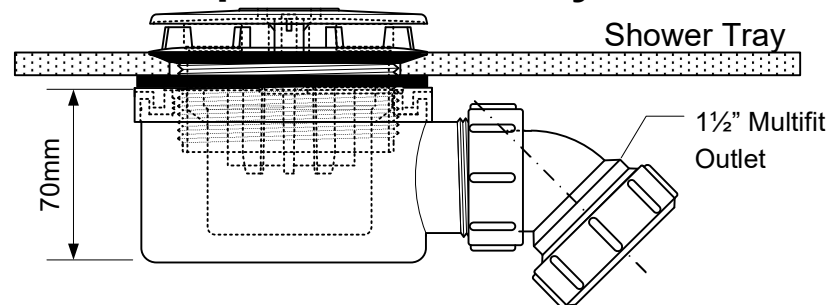

### After Care:

Regular maintenance is essential to retain a high performance flow rate. When cleaning, remove the Top Cover (dome), G, and Trap Assembly, F, and thoroughly clean all the parts in hot soapy water to avoid any discolouration. Do not spray with bleach-based drain-cleaning fluids. Flush through the Trap Body with clean water and carefully replace the parts.

Note the order and position of the Sealing Washers. Failure to do so can result in water leakage.