

3 PACK MDF SHELVING

HJ327

ASSEMBLY INSTRUCTIONS

















Watch the Assembly Video!

SET UP

- 2 PEOPLE REQUIRED
- PROTECT FLOOR WITH MAT
- WEAR GLOVES WHEN ASSEMBLING
- ENSURE COMPONENTS ARE IN GOOD CONDITION BEFORE ASSEMBLING
- SET POWER TOOLS TO LOW SPEED
- DO NOT TIGHTEN SCREWS UNTIL FULLY ASSEMBLED
- HAMMER REQUIRED

PARTS













STEP 1

 ATTACH PLASTIC FEET TO KEYHOLE UPRIGHTS x4

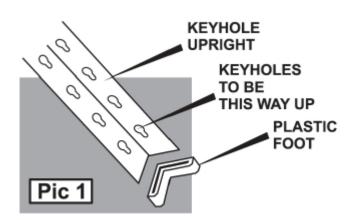

STEP 2

 ATTACH SHORT AND LONG SUPPORTS IN BOTTOM 2 KEYHOLES AND TAP WITH HAMMER UNTIL SLOTTED IN. x2

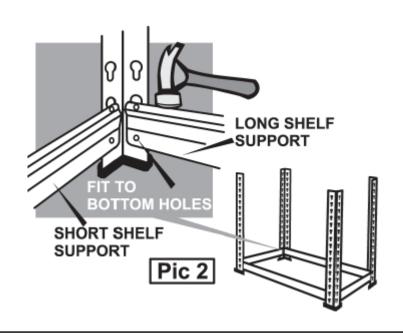



3 PACK MDF SHELVING

HJ327

ASSEMBLY INSTRUCTIONS


















Watch the Assembly Video!


STEP 3

 REPEAT PREVIOUS STEP FOR 2nd SHELF POSITION.

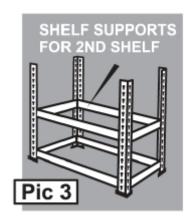

STEP 4


- FIT SUPPORTS IN TOP KEYHOLES OF THE OTHER 4 UPRIGHTS TOP CREATE THE TOP SHELF POSITION.
- IF YOU ARE CREATING A WORK BENCH, DO THIS ON THE SAME UPRIGHTS, ATTACH A CENTRE BRACE, THEN SKIP TO STEP 7.

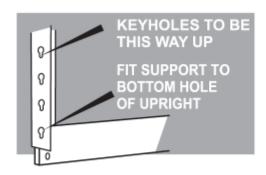

Pic 4

STEP 5

 REPEAT PREVIOUS STEP FOR THE 4TH AND 3RD SHELF POSITIONS (WORKING DOWNWARDS).

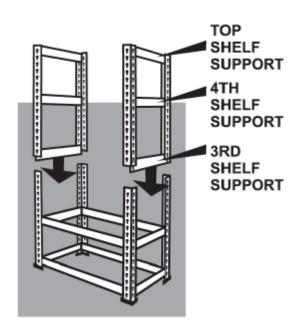



3 PACK MDF SHELVING

HJ327

ASSEMBLY INSTRUCTIONS


















Watch the Assembly Video!


STEP 6

ATTACH BOTH HALVES TOGETHER.

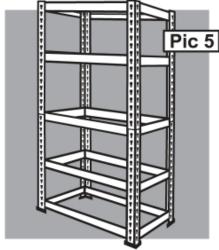

STEP 7

ATTACH MDF SHELVES AND ADD REMAINING PLASTIC FEET TO THE TOP OF THE UPRIGHTS.

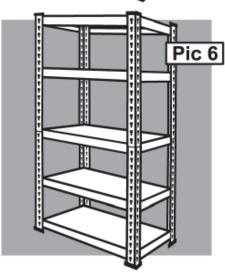

TOP TIP

WE RECOMMEND THIS SPACING FOR OPTIMUM USE.

SHELF POSITION RECOMMENDATIONS

