


Step by step installation guide - Rainwater Diverter

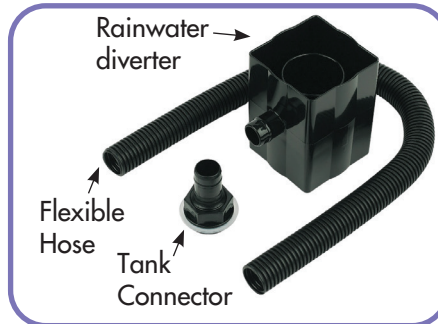

1 Remove items from the pack and put in a safe place and use the pack for guidance.



2 Remove the lid from the Water Butt.



3 Make sure that the water butt is positioned no more than 500mm from the downpipe.



4 Measure 100mm from the top of the butt and mark it.



5 Use a hole saw to drill your hole.



6 Use a level, positioned at the bottom of the your drilled hole.



7 Mark a level line from the bottom of the hole on the downpipe.



Roofline, Window and Cladding Systems



Rainwater Systems



Soil & Waste Systems



Underground Drainage Systems



MDPE Systems



Hot & Cold Plumbing Systems

Step by step installation guide - Rainwater Diverter

8



Mark 30mm (RVS1) / 38mm (RVM1) / 70mm (RVH1) above the level line on the downpipe.

9



Handy tip: use a piece of paper around the pipe to get a straight line.

10



Cut the pipe on both marks.

11



Remove the cut section.

12



Manoeuvre the diverter onto the downpipe.

13



Attach a pipe clip to support the diverter.

14



Attach the flexible hose to the diverter.

15



Attach the flexible hose to the water butt connector.

16



Replace lid of the water butt.



Roofline, Window and Cladding Systems



Rainwater Systems



Soil & Waste Systems



Underground Drainage Systems



MDPE Systems



Hot & Cold Plumbing Systems