

Easy-Trim Ridge F Universal Ridge Kit





easy-trim Ridge F

Key components: Ridge Roll (3, 6, 10 metre), Ridge Batten Brackets, Ridge Unions, Fixing Kit.





3 metre Kit Contents:

-  1 x 3m Ridge Roll
-  5 x Ridge Batten Brackets
-  7 x Ridge Unions
-  1 x Fixing Kit including:
 - 14 x Outer Clips (*short*)
 - 7 x Centre Clips
 - 7 x Screws
 - 25 x Nails (*approximately*)

6 metre Kit Contents:


-  1 x 6m Ridge Roll
-  10 x Ridge Batten Brackets
-  13 x Ridge Unions
 (20 x Ridge Unions in Clay Ridge Kit)
-  1 x Fixing Kit including:
 - 26 x Outer Clips (*standard*)
 - 40 x Standard Outer Clips in Clay Ridge Kit
 - 13 x Centre Clips
 - 20 x Centre Clips in Clay Ridge Kit
 - 13 x Screws (20 x Screws in Clay Ridge Kit)
 - 45 x Nails (*approximately*)

10 metre Kit Contents:

-  1 x 10m Ridge Roll
-  17 x Ridge Batten Brackets
-  22 x Ridge Unions
-  1 x Fixing Kit including:
 - 44 x Outer Clips (*short*)
 - 44 x Outer Clips (*standard*)
 - 22 x Centre Clips
 - 22 x Screws
 - 80 x Nails (*approximately*)

Before installation, please ensure your kit contains the correct quantities of components.

All kits are available in Black or Terracotta to match tiles

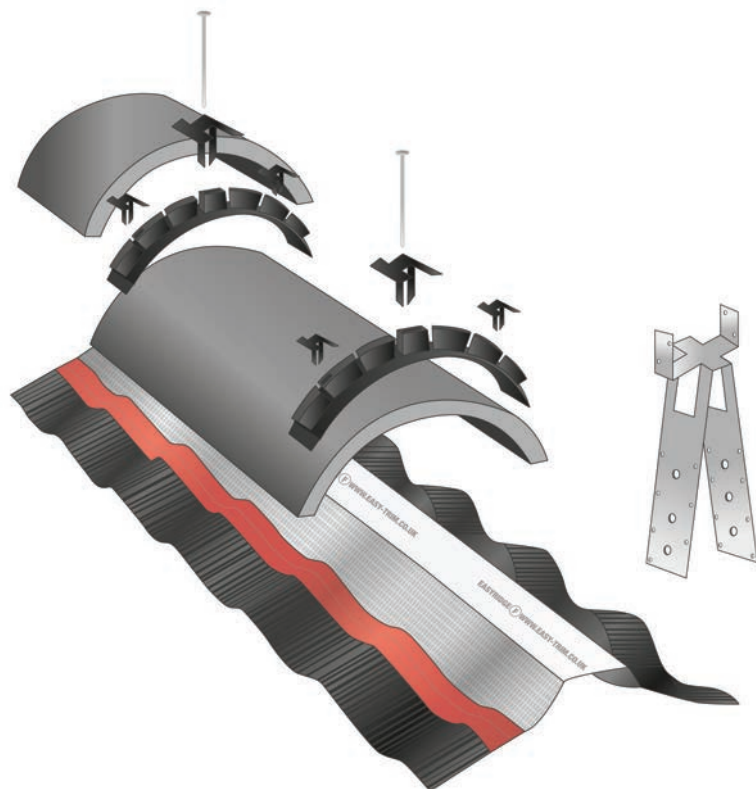

easy-trim Ridge F

Please Note:

Easy-Trim Ridge F Kits can also be applied to a Hip when used with our Hip Accessory Pack

Tel: +44 (0) 845 034 6008

e: enquiries@easy-trim.co.uk

f: +44 (0) 845 034 6010

Unit 12B Metcalf Drive
 Altham Industrial Estate | Altham
 Lancashire | BB5 5TU | England
 w: www.easy-trim.co.uk

find us:




Easy-Trim Ridge F Universal Ridge Kit Step-by-Step Instructions

easy-trim Ridge F




Install the underlay and battens as normal, leaving the underlay 5-30mm short of the ridge on both side. Do not fix the top tiling batten at this stage.

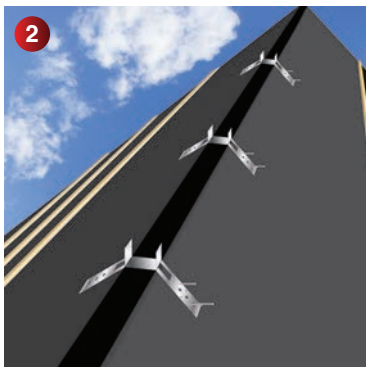


Place the ridge batten brackets across the apex of the roof, and nail to the rafters on both sides of the roof, using the nails provided. (Each kit contains enough batten brackets to fix at 450 and 600mm centres.) Install the top tiling batten as normal, leaving a 10mm gap before the ridge batten.




Place the first ridge batten in the batten bracket, and nail through the holes provided in the flange. Build up the ridge batten to the required height by adding one or two more battens, nailing each to the previous batten to ensure it's adequately secured in place.

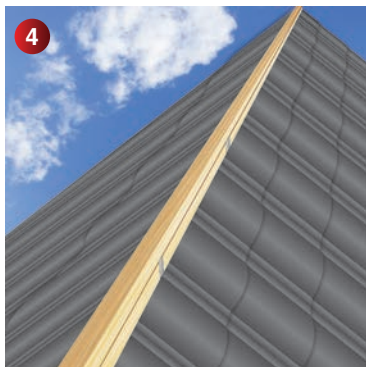

Lay and fix tiles as normal.

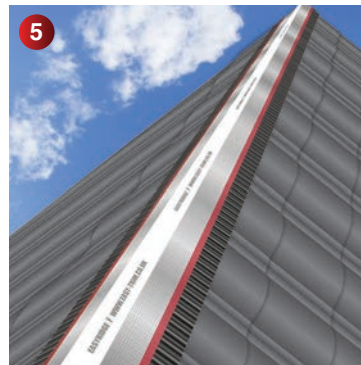


Roll out the ridge roll centrally across the entire length of the ridge batten, using the white spine of the roll as a guide over the ridge batten. Secure the roll by nailing or stapling through the white spine. All joints in the ridge roll must be overlapped by 75mm min. Leave a 75mm long strip of the roll at each end of the ridge.

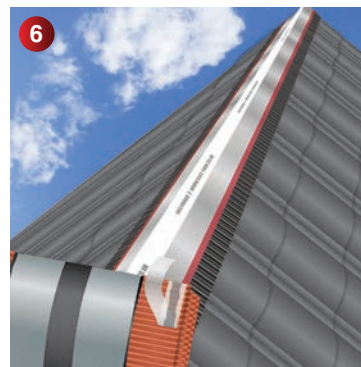

Remove the release paper from the butyl adhesive strip on the underside of each edge of the ridge roll, and firmly press onto the clean dry tile on both sides (avoid crushing the corrugations). Continue this process along the entire ridge line. Adhere the roll to the vertical surface of the dry verge unit at the gable end and at the hip abutment, overlap the roll across the hip rolls by 75mm, carefully sealing the butyl adhesive in place.



Insert the long and two short ratchet clips loosely into the middle and side slots respectively on the union. Lay the ridge tile on the ridge roll starting at the gable end or hip abutment, and slide the union into the open end. Slide the next ridge tile into the open end of the ridge union and press all three clips firmly in place. Secure the union with the screws provided, through the long ratchet clips. Any protruding end of the union can be snapped off or folded behind the union.

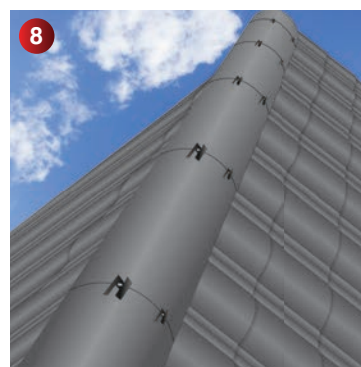

Continue this process along the ridge to the end. Secure the ridge end tile through the pre-drilled holes provided or drill a hole through when using reclaimed tile.

Tel: +44 (0) 845 034 6008

e: enquiries@easy-trim.co.uk

f: +44 (0) 845 034 6010

Unit 12B Metcalf Drive
 Altham Industrial Estate | Altham
 Lancashire | BB5 5TU | England

w: www.easy-trim.co.uk

find us:

