

WALL MOUNTED ROLL TOP BATH RAIL AD210241



ALL PRODUCT DIMENSIONS DETAILED IN THIS INSTALLATION AND MAINTENANCE MANUAL ARE APPROXIMATE

ALL ILLUSTRATIONS OF THE PRODUCT ARE FOR REFERENCE ONLY. COMPONENTS SUPPLIED WITH INDIVIDUAL PRODUCTS MAY DIFFER

CONTACT DETAILS

 Croydex
Central Way
Andover
Hampshire
SP10 5AW
UK

 Tel: +44 (0)1264 365881

 Email: info@croydex.co.uk


 www.croydex.com

Please follow all assembly and product care instructions to ensure that your product is assembled safely and retains its high quality finish.

PLEASE RETAIN THIS MANUAL FOR FUTURE REFERENCE

SAFETY & PRODUCT CARE

- 1. ALWAYS** take care when using power tools, particularly if there is any water in the working area.
- 2. ALWAYS** wear eye protection when using power tools.
- 3. ALWAYS** check for pipes and cables before drilling into walls and ceilings.
- 4. ALWAYS** use a ceramic drill bit when drilling into tiled surfaces.
- 5. ALWAYS** use a drill bit that is suitable for the surface that is being drilled.
- 6.** The wall plugs supplied are for use on solid walls only. For cavity walls or plasterboard **ALWAYS** use specialist fixings that are suitable for the type of wall construction.
- 7. DO NOT** use abrasive or chemical cleaners as these may damage the product.

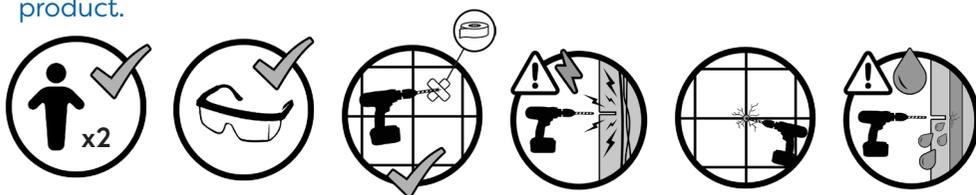


PRODUCT FITTING

IMPORTANT!


Before attempting to fit or use this product. Ensure that it can be properly installed in the location you wish it to be in.

- FOR PARTITION WALLS, THESE PRODUCTS SHOULD BE FITTED TO A TIMBER STUD WHEREVER POSSIBLE.
- IF FIXING TO A HOLLOW WALL CAVITY, ADDITIONAL TIMBER SUPPORTS SHOULD BE USED BEHIND THE PLASTERBOARD.
- IF THIS CANNOT BE DONE, PLEASE USE SPECIALIST FIXINGS TO SUIT THE INSTALLATION.

WALL FIXING PACK

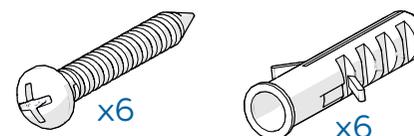


TOOLS REQUIRED

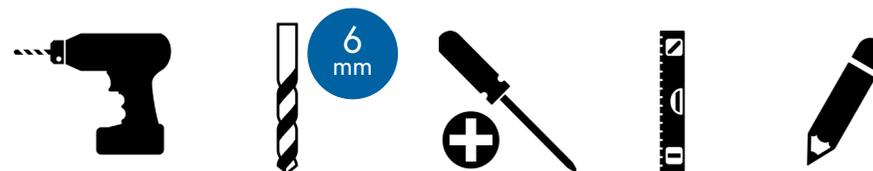


INSTALLATION


1. Construct the lower portion of the mounting bar. (See Fig. 1)

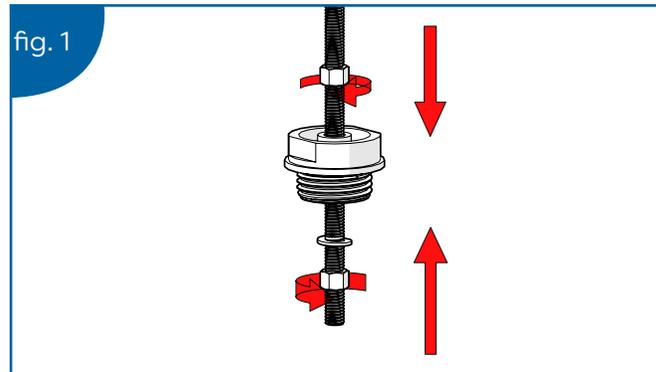


2. Construct the upper portion of the mounting bar. (See Fig. 2)

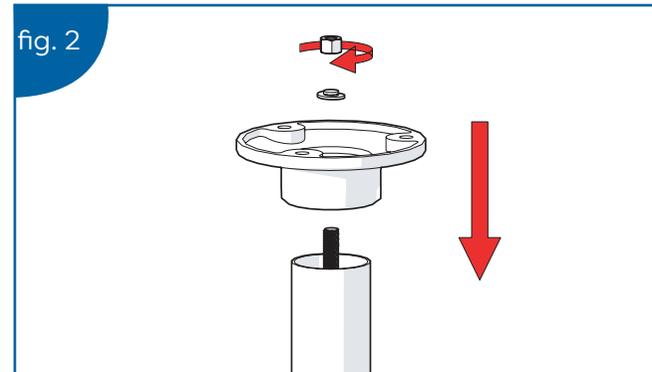


3. Before proceeding, ensure the threaded rod does not protrude past the wall bracket. (See Fig. 3)

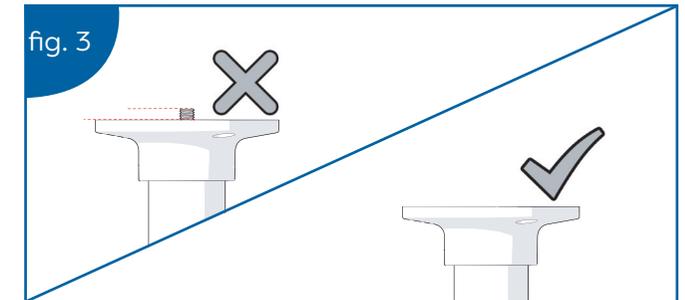


4. Screw the two wall mounts into the oval rail. (See Fig. 4)

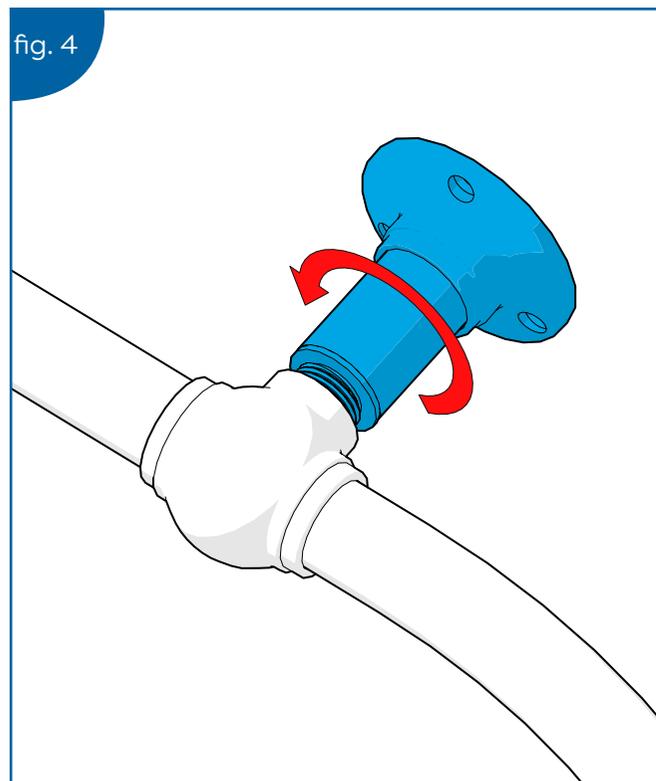

5. Position the rail at your desired location and mark the screw holes. (See Fig. 5) Ensure the brackets are mounted to a reinforced section of wall - see PRODUCT FITTING section for guidelines.

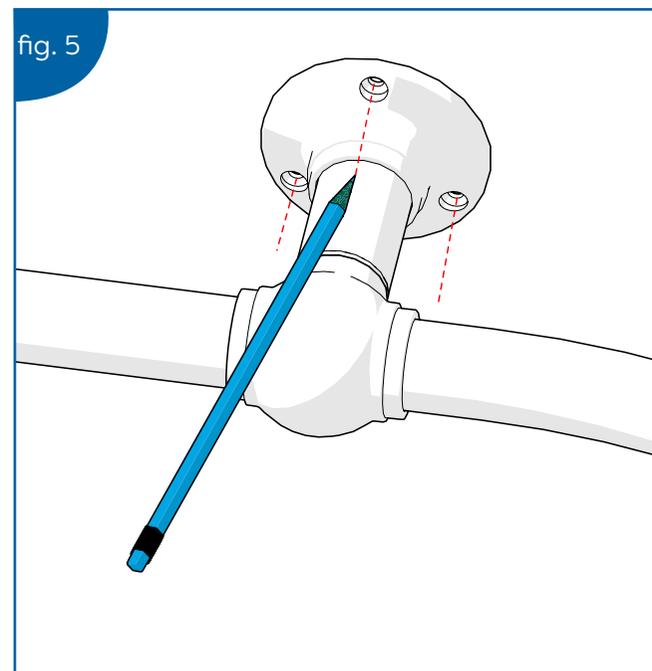

6. Drill holes in the marked positions and insert wall plugs. (See Fig. 6)

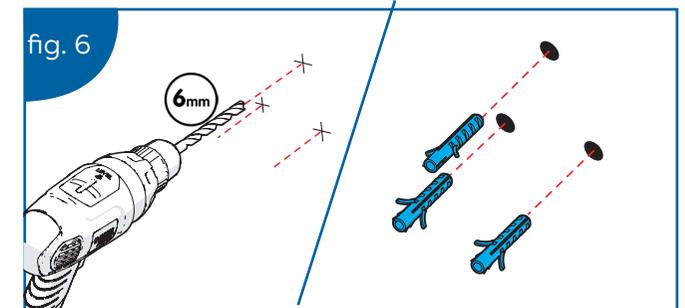

7. Locate the oval rail back in position. Insert screws and fasten. (See Fig. 7) Ensure bracket orientation allows for access to screwdriver

