


# OVERHEAD SHOWER ARM

## AM179841

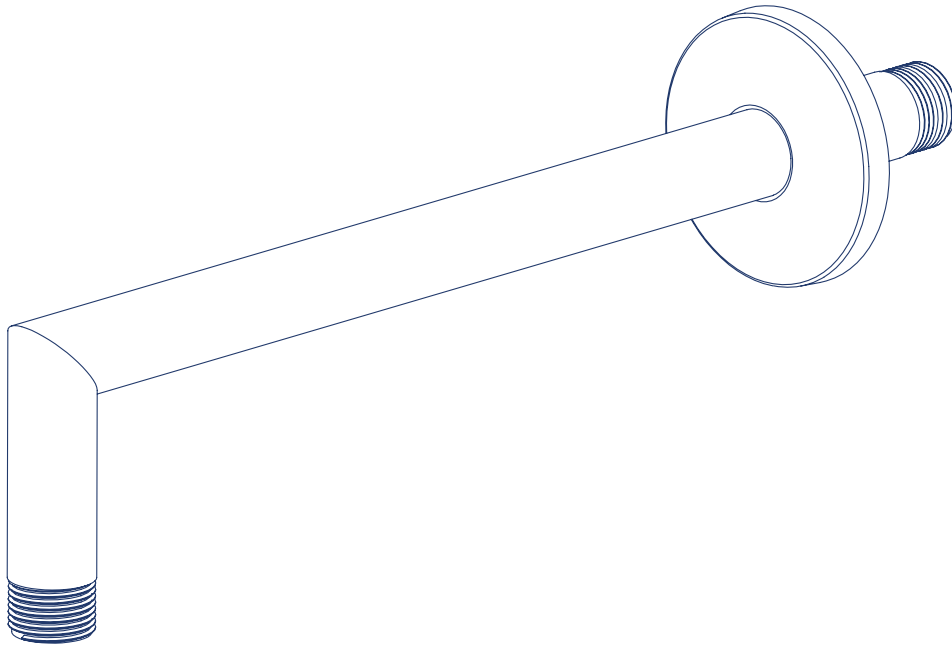

### IMPORTANT!

This shower arm should be fitted to a supply of controllable mixed water.

### EASY TO INSTALL

1. Support the shower arm using a rigid pipe-work connected to a female ½” BSP to 15mm compression adapter.
2. Adjust the height and depth of the pipe-work to suit the final position of the fixed shower head.
3. Ensure the pipe-work is securely fastened in position and connect to the water supply using thread sealing compound where required.
4. Before finishing the wall surface turn on the water supplies and check the connections for water leaks.
5. When the wall surface is finished check the stability of the shower arm, slide the decorative shroud onto the shower arm and push it up to the wall surface.
6. Fit a shower head to the arm in accordance with instructions supplied with the

### CONTACT DETAILS

 Croydex  
Central Way  
Andover  
Hampshire  
SP10 5AW  
UK

 Tel: +44 (0)1264 365881

 Email: [info@croydex.co.uk](mailto:info@croydex.co.uk)

 [www.croydex.com](http://www.croydex.com)