



4 TIER MDF SHELF

HJ169
HJ170

ASSEMBLY INSTRUCTIONS

The only tool you require is a **RUBBER MALLE**

LIST OF PARTS



4x Leg Joiners



4x 9mm MDF Shelves



8x Keyhole Uprights



8x Plastic Feet




8x Long Shelf Supports




8x Short Shelf Supports

ASSEMBLY INSTRUCTIONS

1 Attach a Plastic Foot to 1 end of 4 of the Keyhole Uprights. NOTE: Ensure keyholes are the correct way up. (Pic 1)


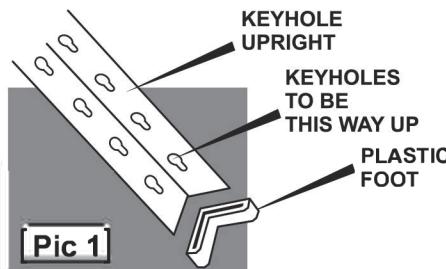


2 Fit 2 Short Shelf Supports and 2 Long Shelf Supports to the bottom holes (for maximum strength) of 4 Keyhole Uprights by slotting the Keylock Pins in the Supports into the Keyholes in the Uprights and tapping firmly with a hammer to seat in place. (Pic 2).

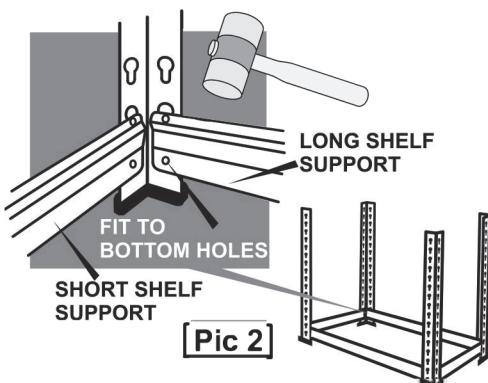


3 (GO TO 4 IF YOU ARE NOT ASSEMBLING AS A WORKBENCH)

- Fit 2 Short Shelf Supports and 2 Long Shelf Supports for the top of the Workbench into the holes at the top of the Keyhole Uprights.
- Assemble the remaining Keyhole Uprights and Long and Short Shelf Supports to make either a Straight Workbench or a Corner Workbench, using the same method as above.
- Install MDF Shelves.
- Bolt the 2 halves of the Workbench together if needed. (nuts and bolts not supplied).

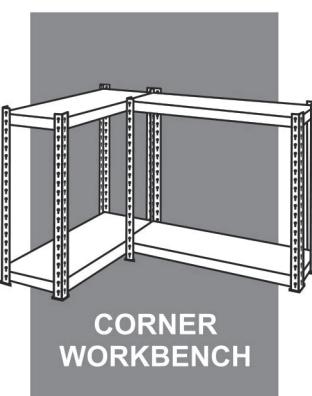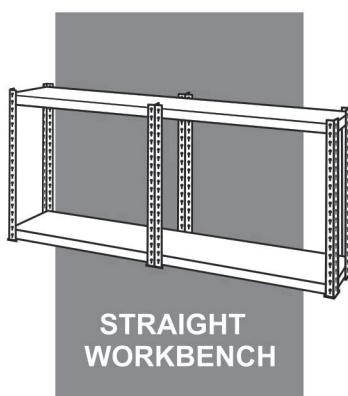

4 Fit Long and Short Shelf Supports where you want the 2nd Shelf to be positioned. These Supports must not be in the top 2 holes of the Keyhole Upright. (Pic 3) (We have shelf position recommendations listed below).

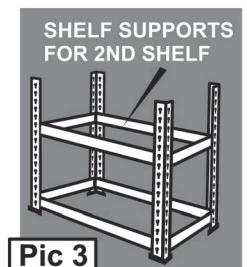




4 TIER MDF SHELF


ASSEMBLY INSTRUCTIONS

The only tool you require is a RUBBER MALLET

5 Fit 4 Leg Joiners to the bottom holes in each of the 4 remaining Keyhole Uprights. Leg Joiner MUST be this way up. (Pic 4)

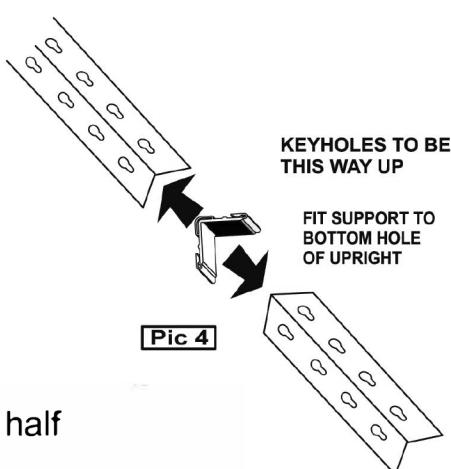

6 To make 1 side of the top half of the Storage Unit:
Fit 2 Short Shelf Supports to 2 Keyhole Uprights. Fit the top Support first. It must be located in the top 2 holes of the Upright. Then fit the 3rd Support in your chosen position. (Pic 5)
Repeat this procedure to make the second side.

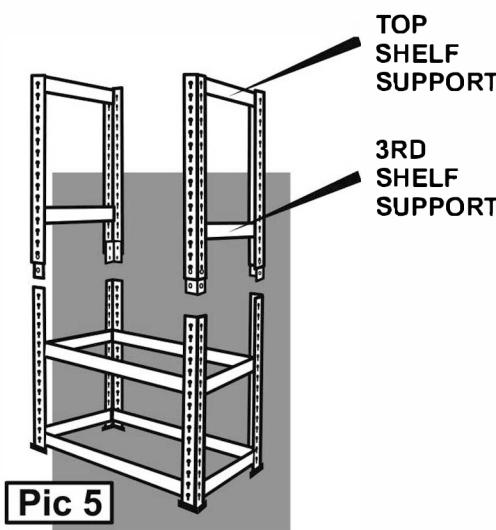


7 Fit these 2 top halves to the bottom half using the Leg Joiners. (Pic 5)

8 Fit the 2 Long Shelf Supports at the 3rd shelf position and then fit the last 2 Long Shelf Supports at the top shelf position.

9 Place the 4 MDF shelves onto the 4 Shelf supports and fit the last 4 Plastic Feet to the tops of the Uprights.

SHELF POSITION RECOMMENDATIONS

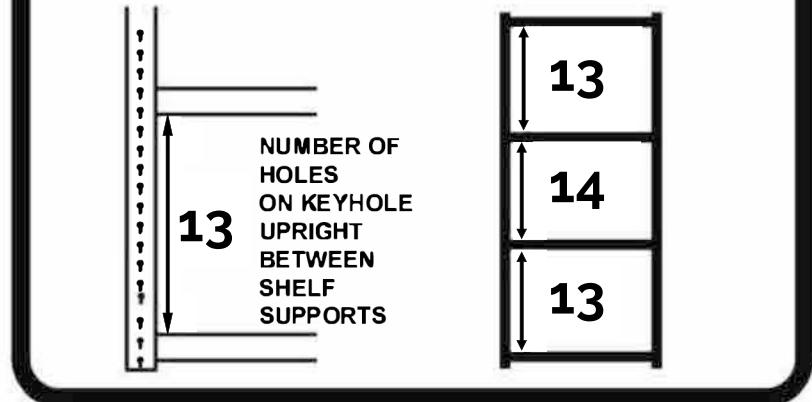

SAFETY: Max weight 250kg/shelf UDL



Keep heavier items on the bottom shelves

Keep your shelving dry

Do not climb on your shelving

Make sure it is on a level and even floor

It is recommended that the shelving is attached to the wall with an appropriate fixing

*Wall fixings not included.

For any problems with assembly of this product or for spare parts please email help@buffaloshelving.co.uk