

Note: If fitting a “True Handleless” kitchen, some components will differ to those shown in this instruction and will also be packaged separately. Please refer to your True Handleless guide to Receiving for further details on the different components and difference in installation.

Note: E included in the 600 standard height and tall height 2-arm Wall Unit configuration.

Note: E included in the 600 standard height and tall height Corner Wall Unit conversion kit.

TH


Every effort has been made to ensure that this product leaves the factory in perfect condition. In the unlikely event that an item is damaged or incorrect, please contact the customer services department.




Note - Fitting Handles: (1) Decide where you are going to position each handle to maintain symmetry around your kitchen. (2) Measure the handle centres and mark off each door/drawer position. (3) Drill through the door/drawer using a fine drill (<2.5mm), then drill back from the rear face using a 4.5mm drill. (4) Attach with the fixings provided with your handle.

Tools Required


2

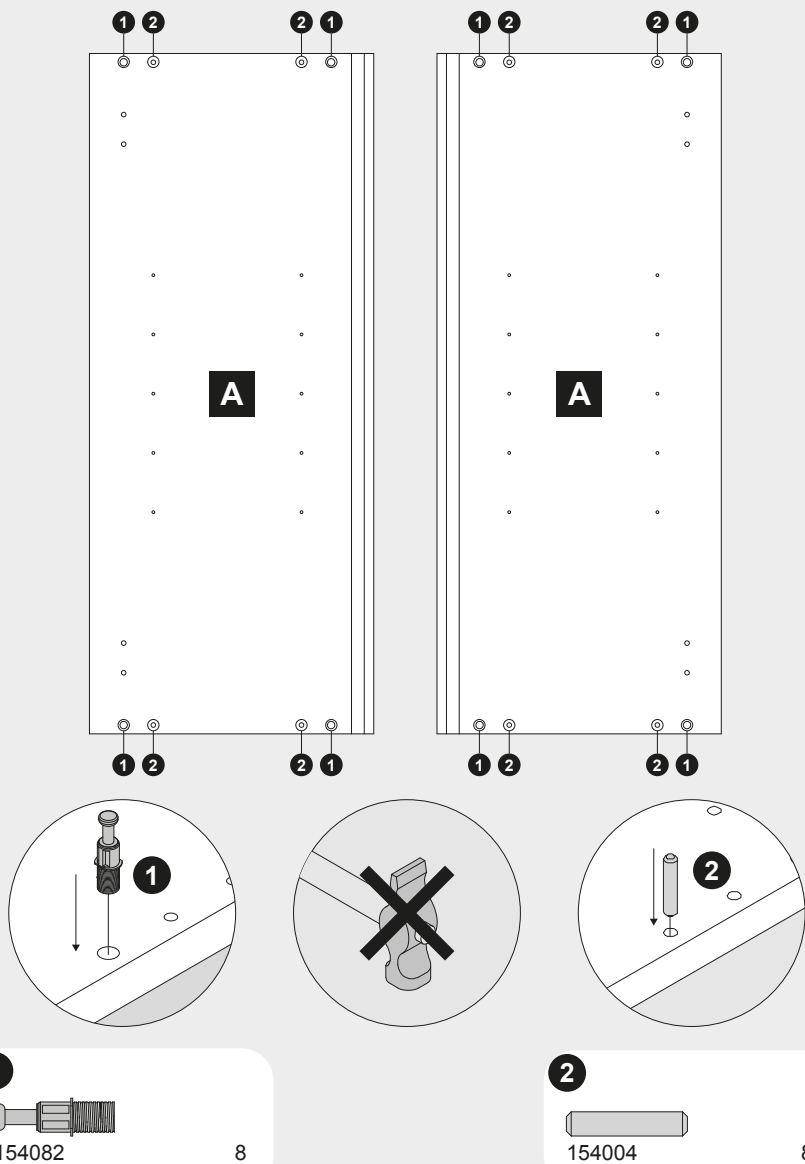


3

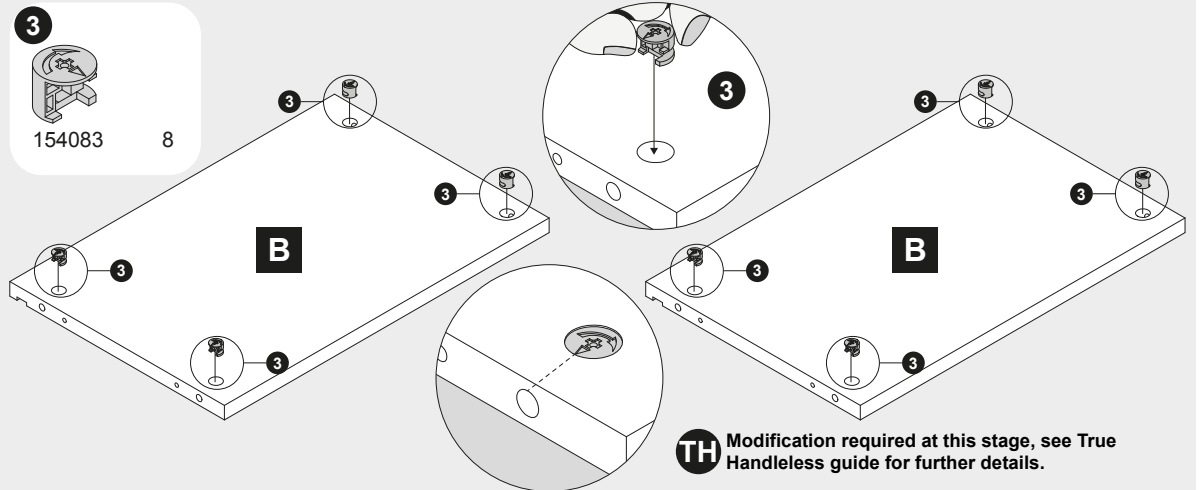



5

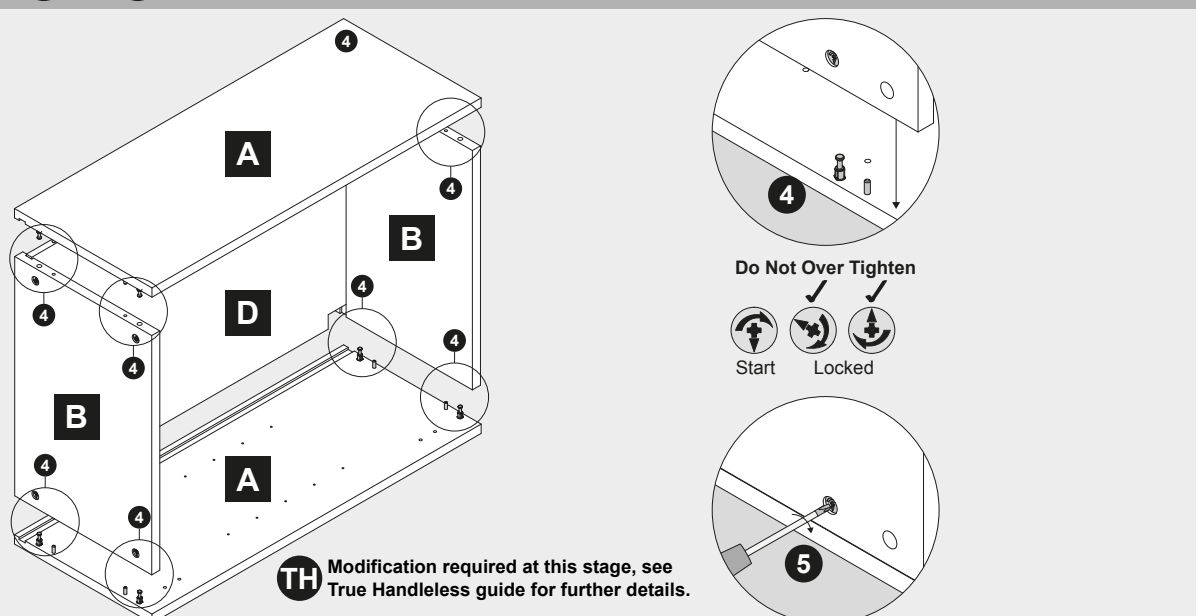


6

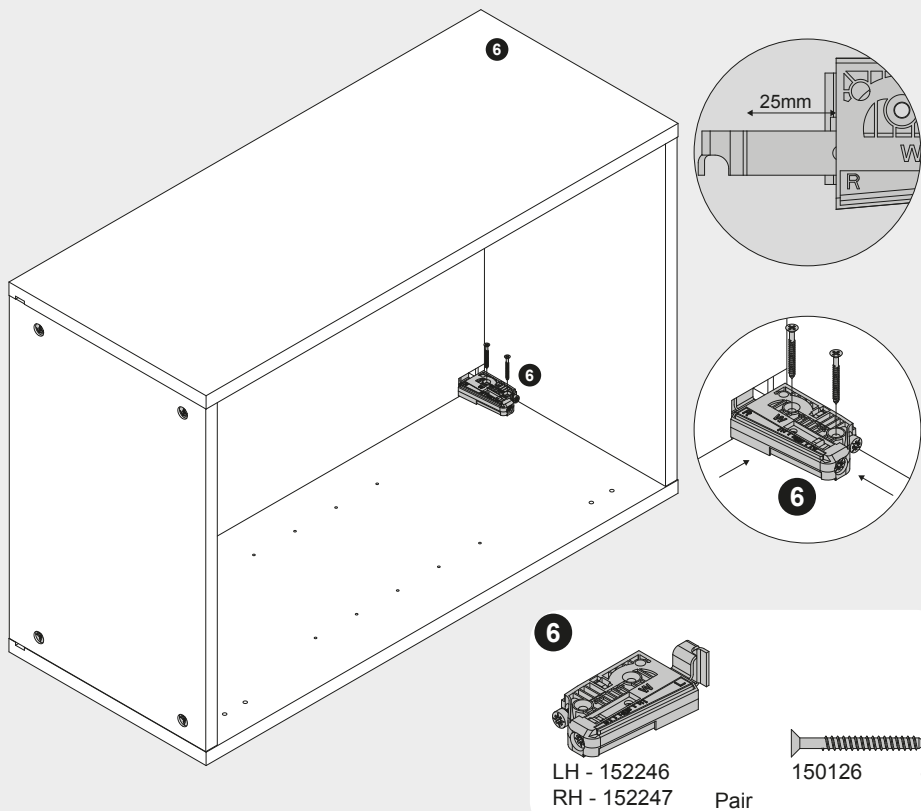


7 — 9 Installation Instructions

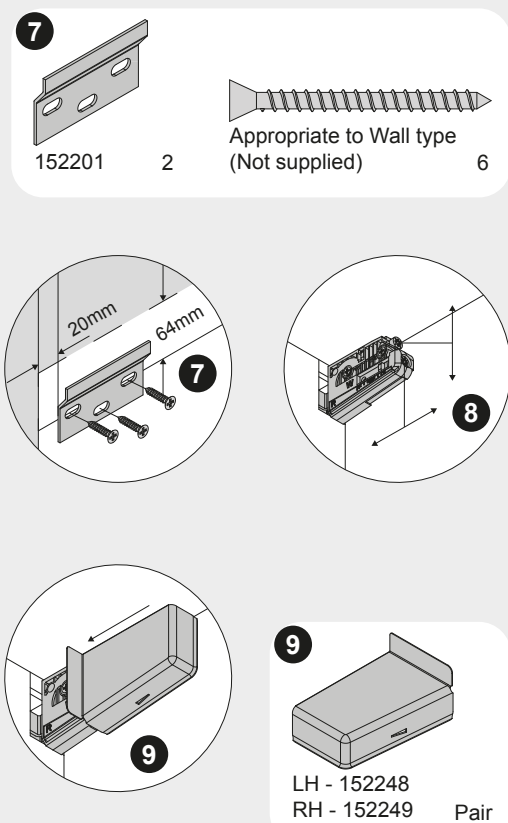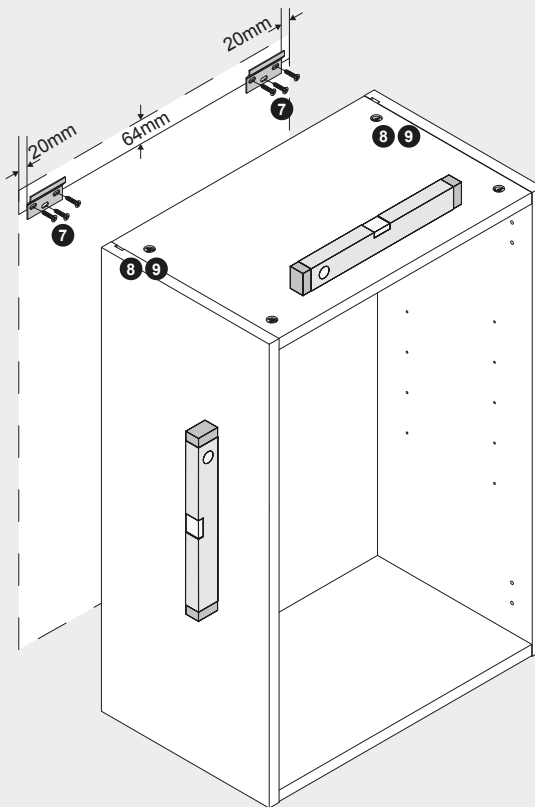


10

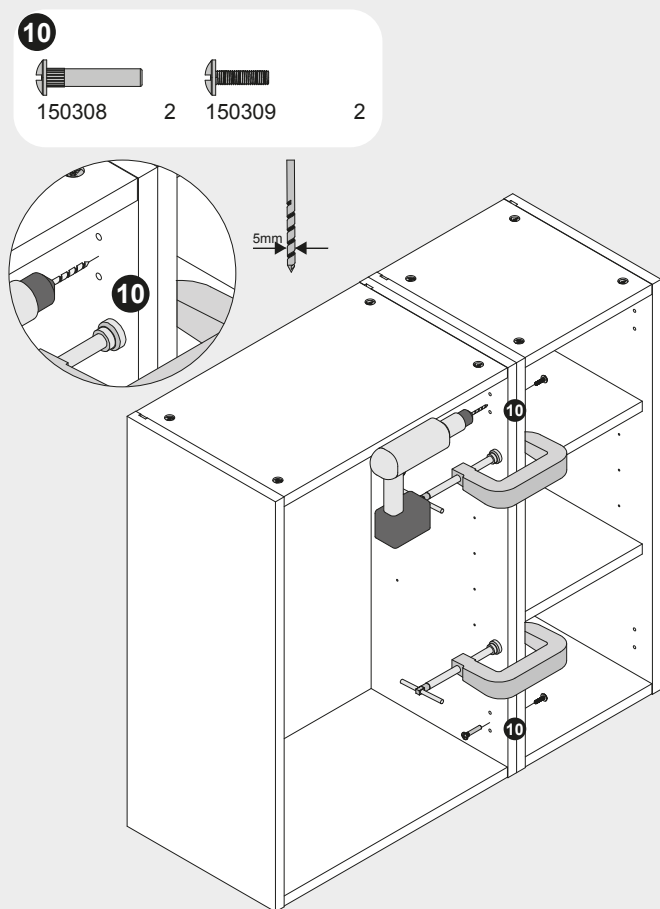


11 — 12

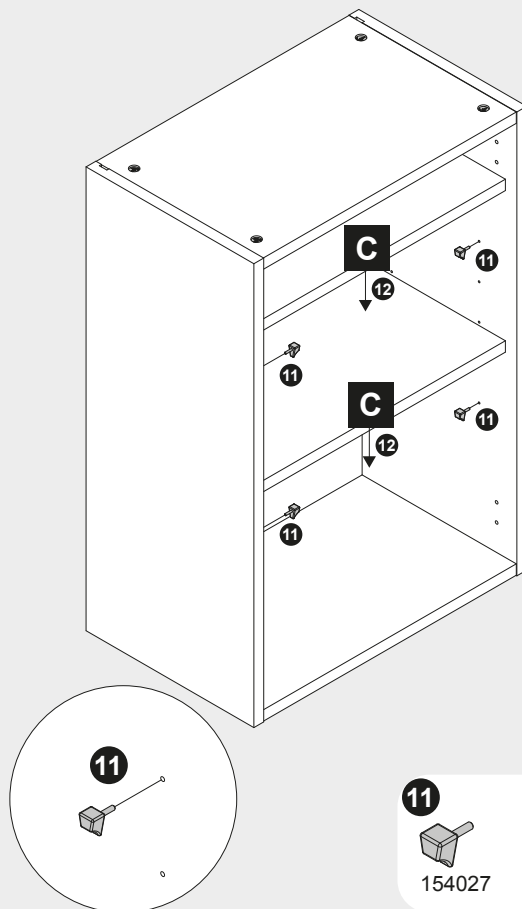


13 — 14

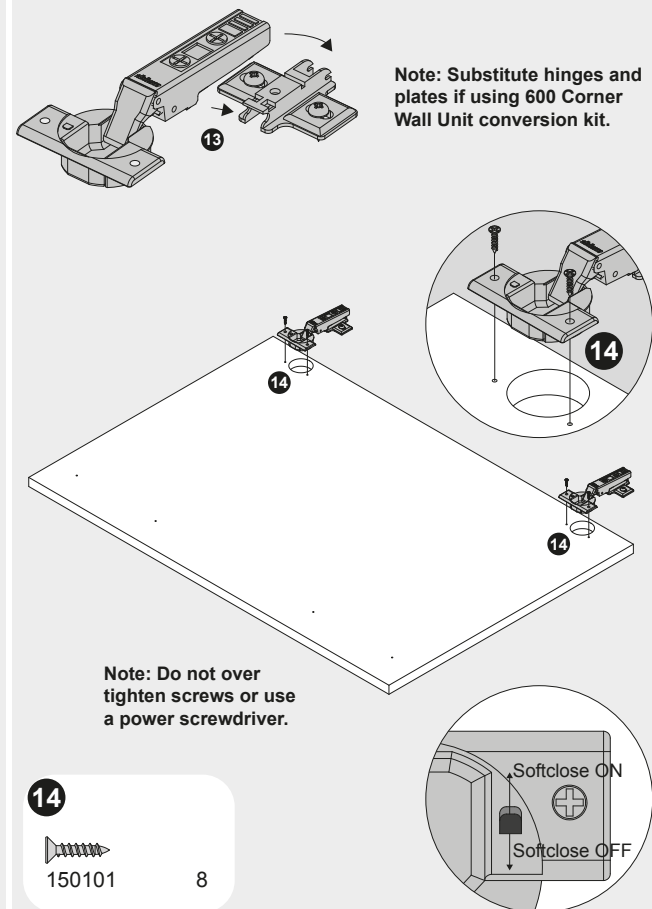

15 — 18

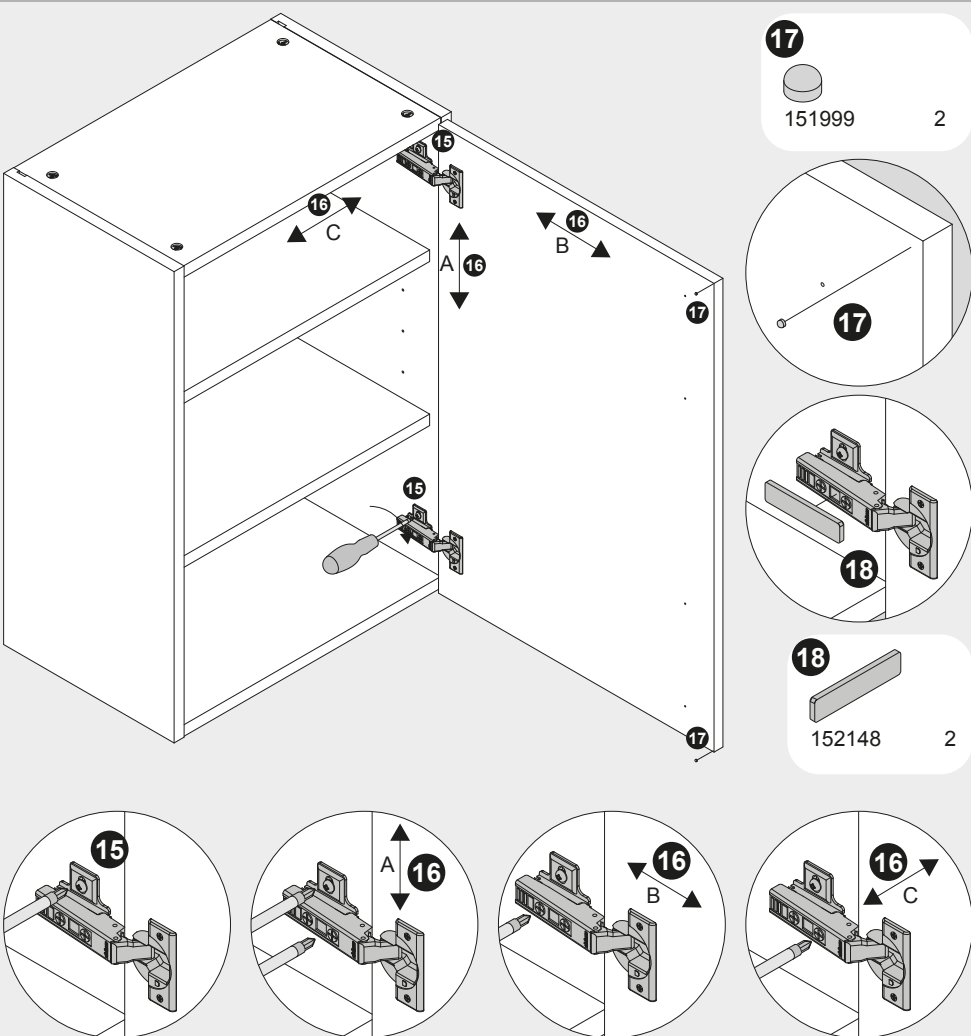

19 Corner Wall Kit

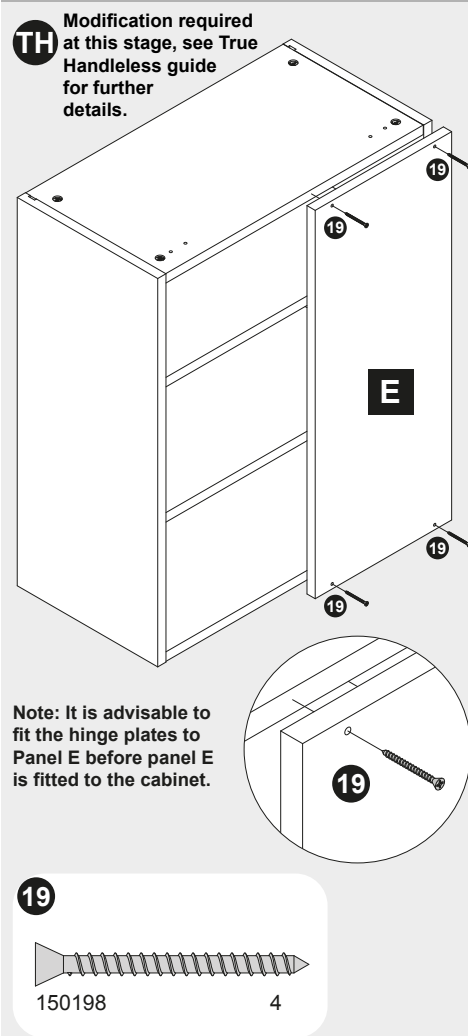

20 Corner Wall Kit

