

Note: If fitting a “True Handleless” kitchen, some components will differ to those shown in this instruction and will also be packaged separately. Please refer to your True Handleless guide to Receiving for further details on the different components and difference in installation.

Note: E included in the 600mm standard height and tall height models.

Note: E included in the 600 standard height and tall height Corner Wall Unit conversion kit.



Every effort has been made to ensure that this product leaves the factory in perfect condition. In the unlikely event that an item is damaged or incorrect, please contact the customer services department.



Note - Fitting Handles: (1) Decide where you are going to position each handle to maintain symmetry around your kitchen. (2) Measure the handle centres and mark off each door/drawer position. (3) Drill through the door/drawer using a fine drill (<2.5mm), then drill back from the rear face using a 4.5mm drill. (4) Attach with the fixings provided with your handle.

Tools Required

2

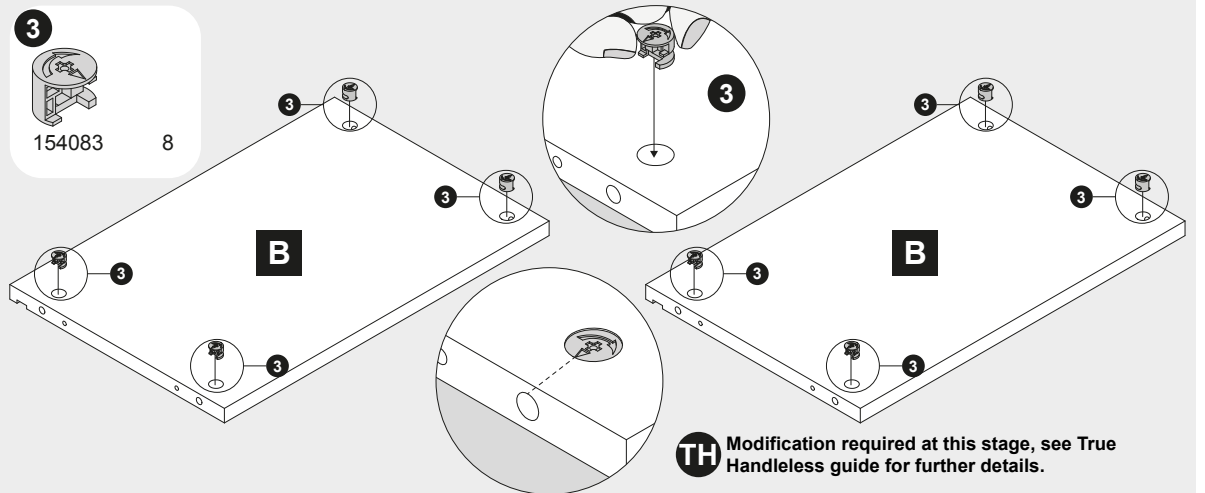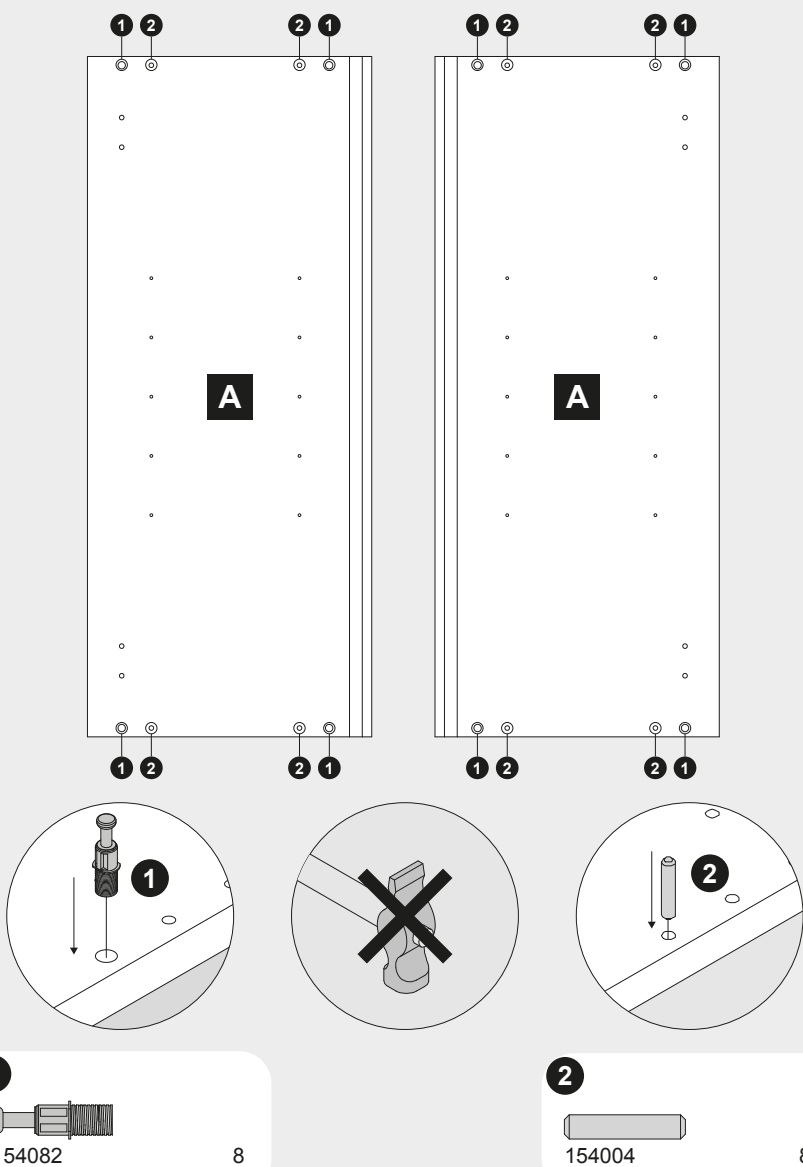

5

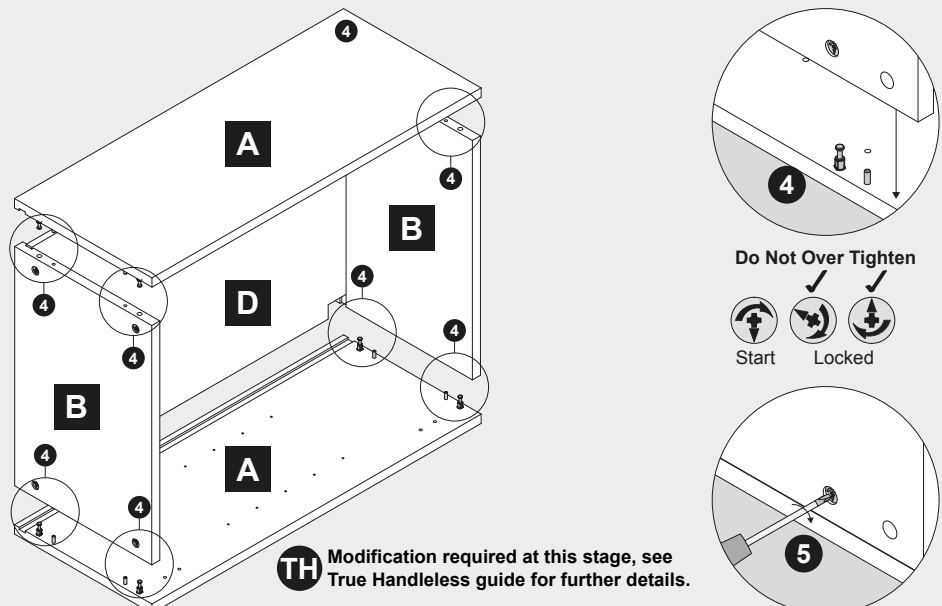


Diagram illustrating the installation of the bottom panel (6) into the cabinet frame. The panel is shown being lowered into the frame, with a callout showing the panel's underside.



150126 4

Appropriate to Wall type
(Not supplied) 6

9



LH - 152248
RH - 152249

Pair

10

			
150308	2	150309	2

Diagram 10 shows a circular inset view of the side of the cabinet. A 5mm drill bit is shown drilling a hole into the side panel. A dimension line indicates the hole diameter is 5mm.

Diagram 10 illustrates the process of attaching the side panel to the frame. A circular inset provides a close-up view of a screw being driven into the side panel. A 5mm drill bit is shown with a 5mm dimension line. The main diagram shows the side panel being attached to the frame with screws.

11  154027 8

Note: Substitute hinges and plates if using 600 Corner Wall Unit conversion kit.

Note: Do not over tighten screws or use a power screwdriver.

14



150101 8


The diagram shows a close-up of the door handle area. An arrow points to the top position, labeled "Softclose ON". Another arrow points to the bottom position, labeled "Softclose OFF". A plus sign (+) is visible on the door panel.

17
151999 2

18 
152148 2

TH Modification required at this stage, see True Handleless guide for further details.

TH Information required at this stage, see True Handleless guide for further details.

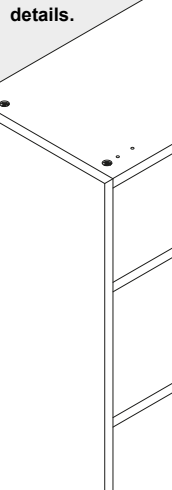

The diagram illustrates the installation of the True Handleless cabinet door. The door is shown being attached to the cabinet frame using screws. The door is labeled 'E' and the screws are labeled '19'. A circular inset shows a close-up of the door edge.

Note: It is advisable to fit the hinge plates to Panel E before panel E is fitted to the cabinet.

19



150198 4

TH Modification required at this stage, see True Handleless guide for further details.

Technical drawing of the upper part of the cabinet, showing dimensions and mounting points. The drawing includes the following dimensions and labels:

- Top left corner: 20mm (vertical), 64mm (horizontal), 625mm (diagonal).
- Top right corner: 45mm (vertical), 625mm (diagonal).
- Right side: 260mm (horizontal), 20mm (vertical), 64mm (diagonal).
- Mounting points: Three circular symbols with the number 20 inside, indicating the location of the mounting brackets.