

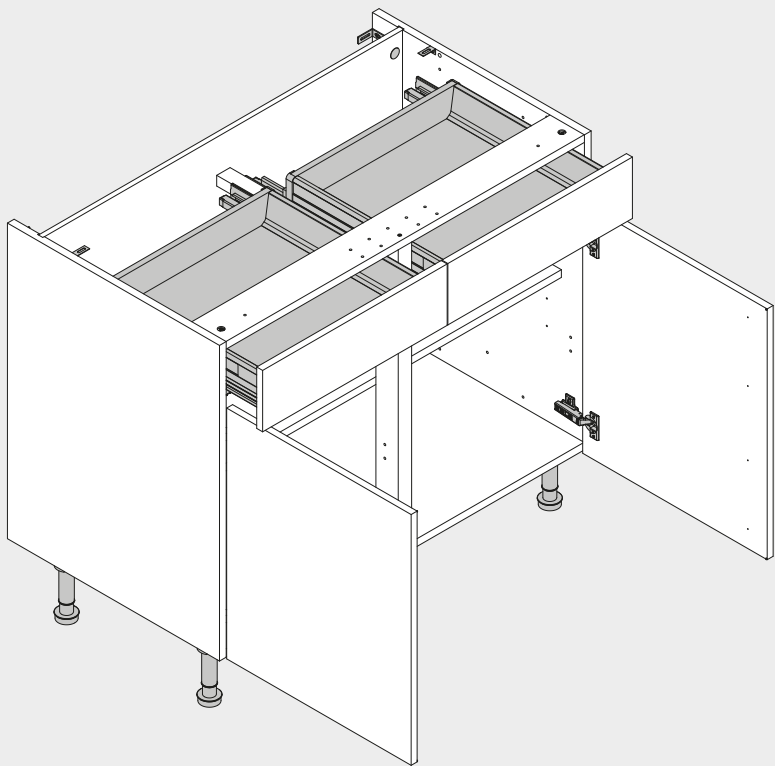
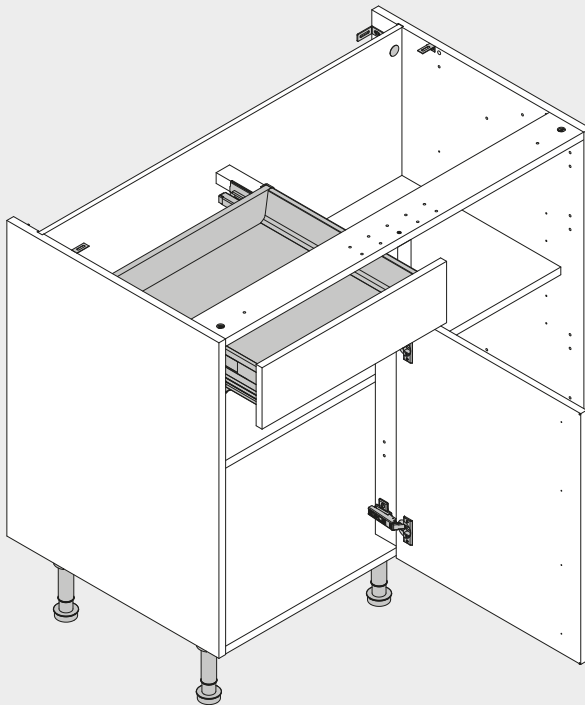



800, 900 and 1000 Base and Corner Base Unit Assembly

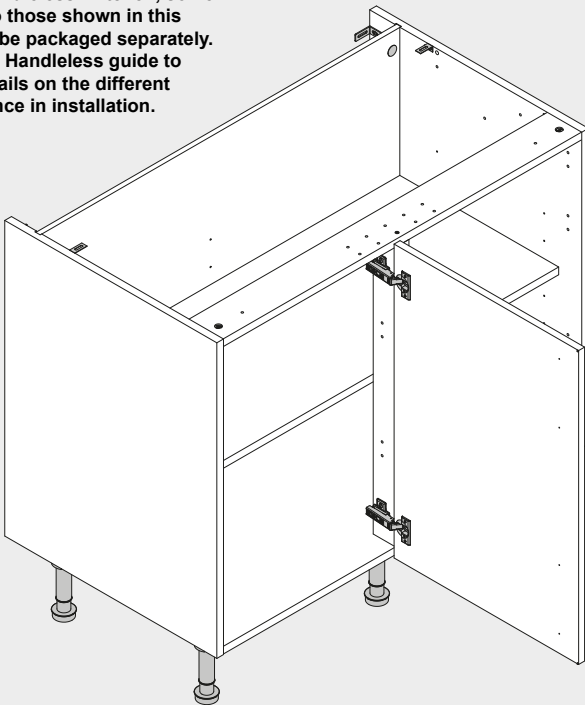

Note: If fitting a “True Handleless” kitchen, some components will differ to those shown in this instruction and will also be packaged separately. Please refer to your True Handleless guide to Receiving for further details on the different components and difference in installation.

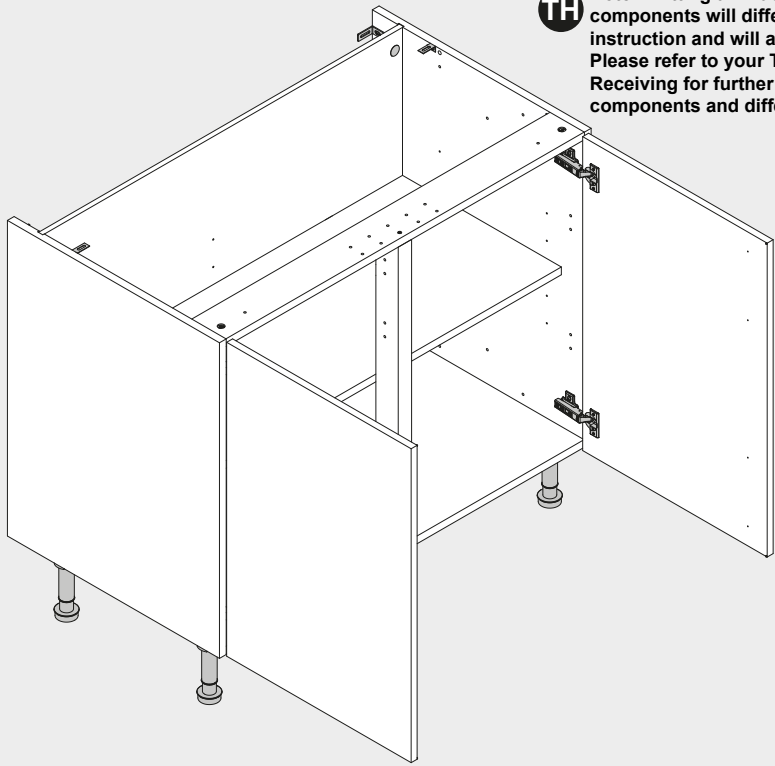

Components

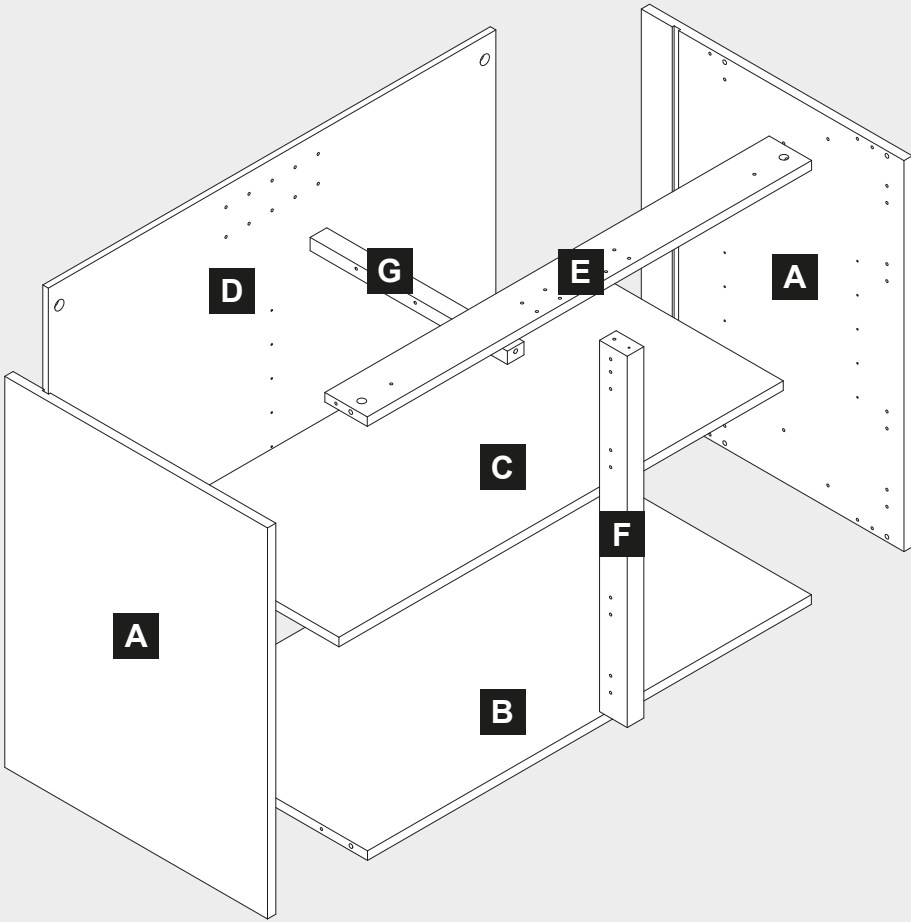

Important Information - True Handleless Kitchens Installers: See Note Above

Caution: Some pieces of hardware could be hazardous to small children. Keep all these items out of reach and do not leave children unattended in the assembly area.

Please read these instructions carefully before proceeding. Refer to the Guide to Receiving and Installing your Kitchen booklet for further information.

Note: Due to variation in wall conditions no screws are supplied for fixing the units to the wall. If in doubt consult an expert. Assemble the unit on a clean solid work surface.

In the interest of continuing improvements we reserve the right to amend or adjust the specifications without prior notice. Errors and omissions excepted.

These units may be fitted with a drawer system. The drawers are supplied separately. These instructions show the runner positions for the drawer system.

Follow the instructions supplied with the drawers for drawerbox assembly.

Every effort has been made to ensure that this product leaves the factory in perfect condition. In the unlikely event that an item is damaged or incorrect, please contact the customer services department.




FM 665131


Note - Fitting Handles: (1) Decide where you are going to position each handle to maintain symmetry around your kitchen. (2) Measure the handle centres and mark off each door/drawer position. (3) Drill through the door/drawer using a fine drill (<2.5mm), then drill back from the rear face using a 4.5mm drill. (4) Attach with the fixings provided with your handle.

Ref. No.	Item	Quantity	Ref. No.	Item	Quantity	Ref. No.	Item	Quantity	Tools Required	
150101	3.5x12mm	14	154027	Corner bracket	6	152401	Drawer pull	4/5	Drill	G-Clamp (pair)
150202	4x12mm	16	154068	L-shaped bracket	8	152418	Drawer pull	4/5	Medium Crosshead Screwdriver	Hammer
150201	4x15mm	16/20	154047	L-shaped bracket	2	152402	Drawer pull	2	Large Flathead Screwdriver	Tape Measure
150199	4.5x45mm	4	152181	Drawer pull	4	152148	Drawer pull	4	Spirit Level	Bradawl
150198	55mm Carcase Screw	3	152162	Drawer pull	4	151999	Drawer pull	12		
154082	Drawer pull	6	150308	Drawer pull	2	151500	Drawer pull	2		
154084	Drawer pull	1	150309	Drawer pull	2					
154085	Drawer pull	7								
154004	Drawer pull	8								


1—2 Assembly Instructions

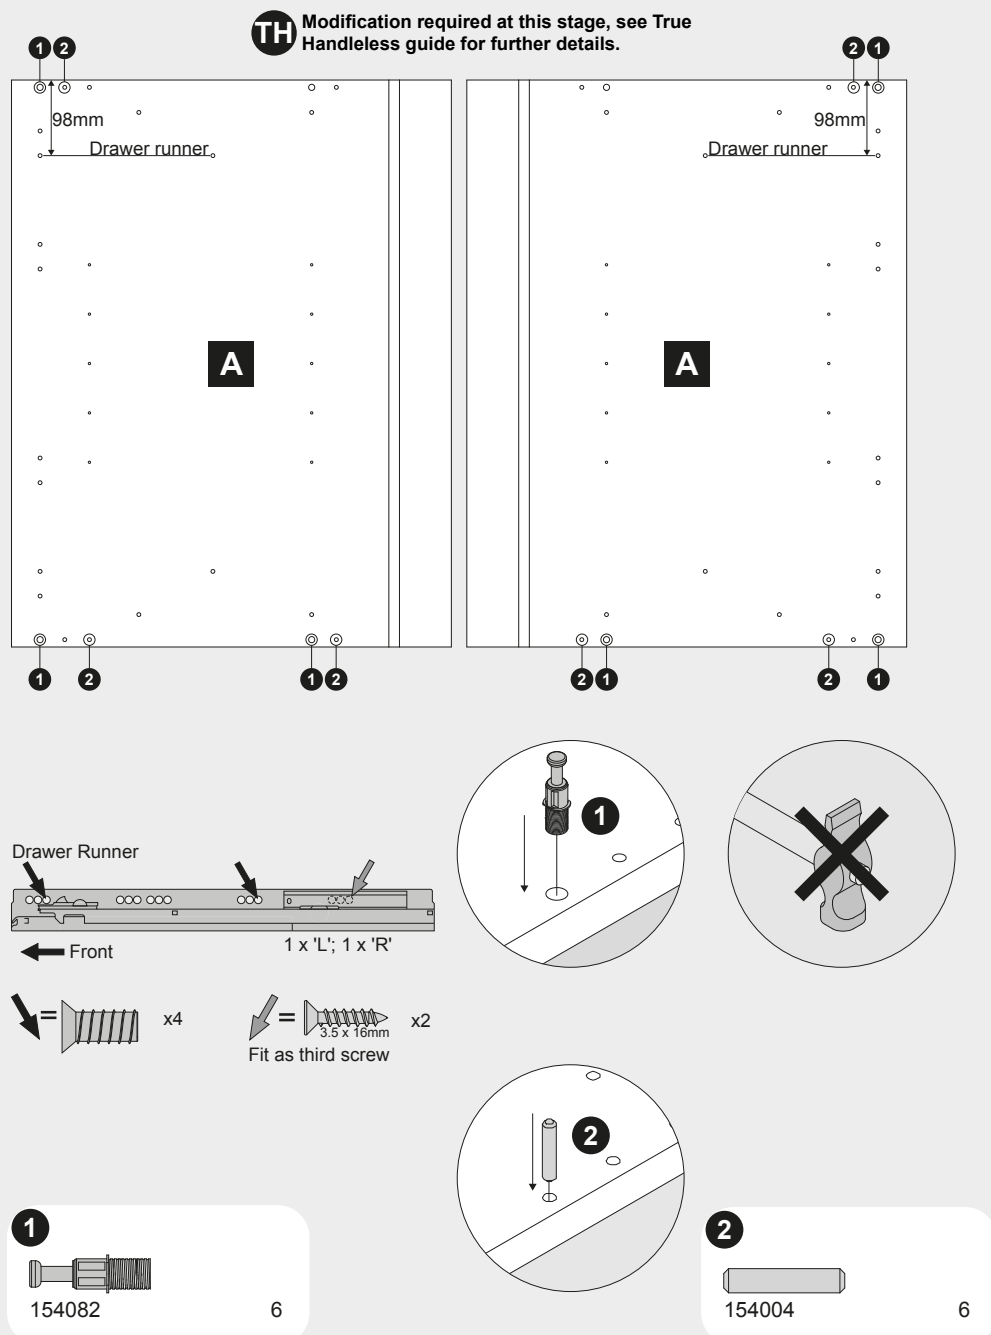


3 — 4

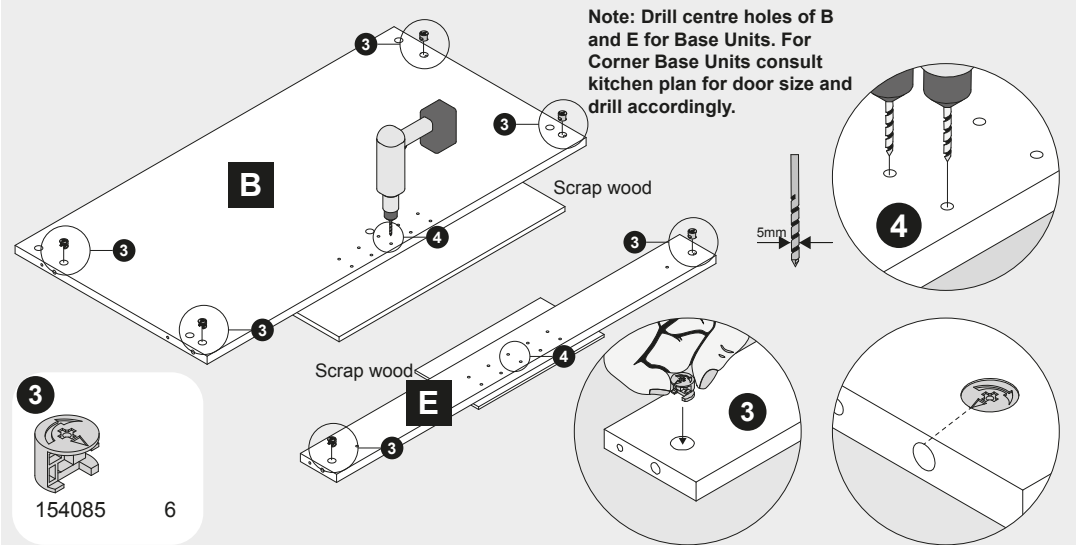


5 — 6

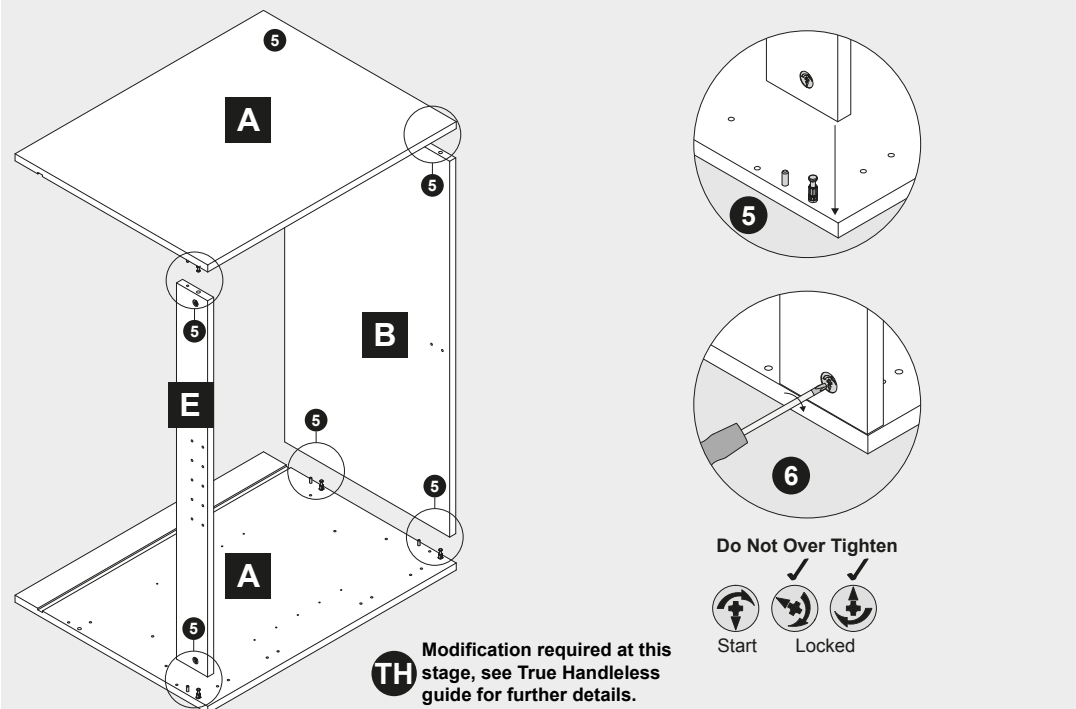


7 — 11

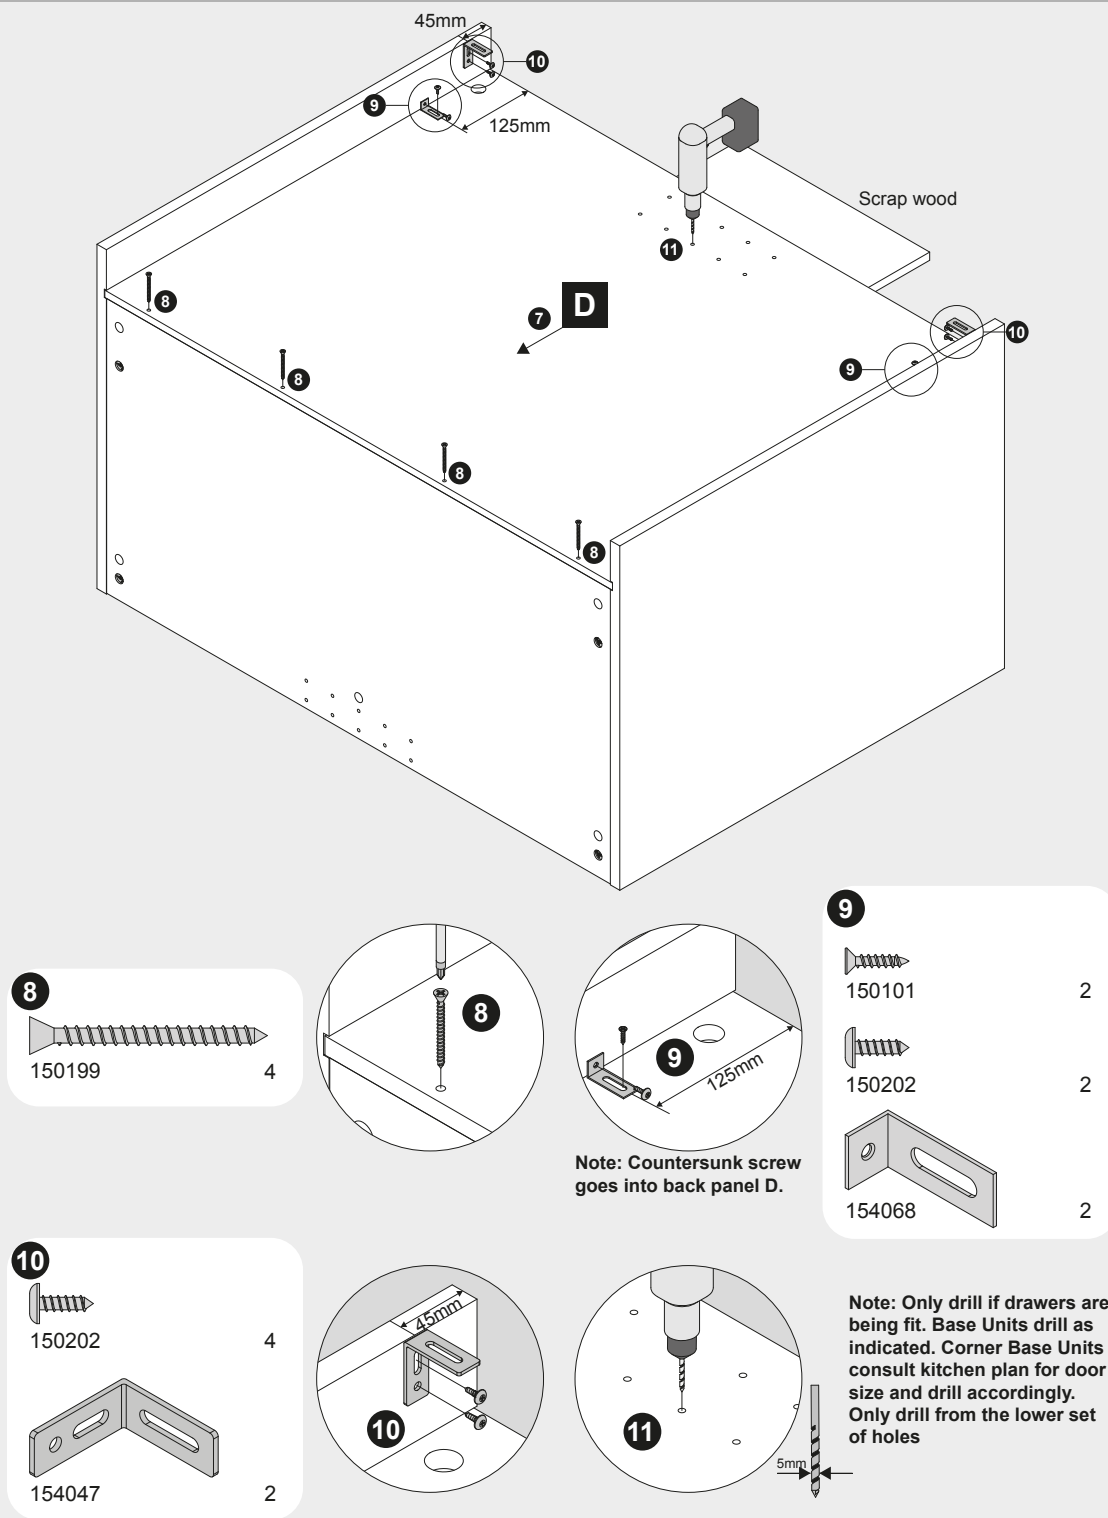


12—13 Without Drawers

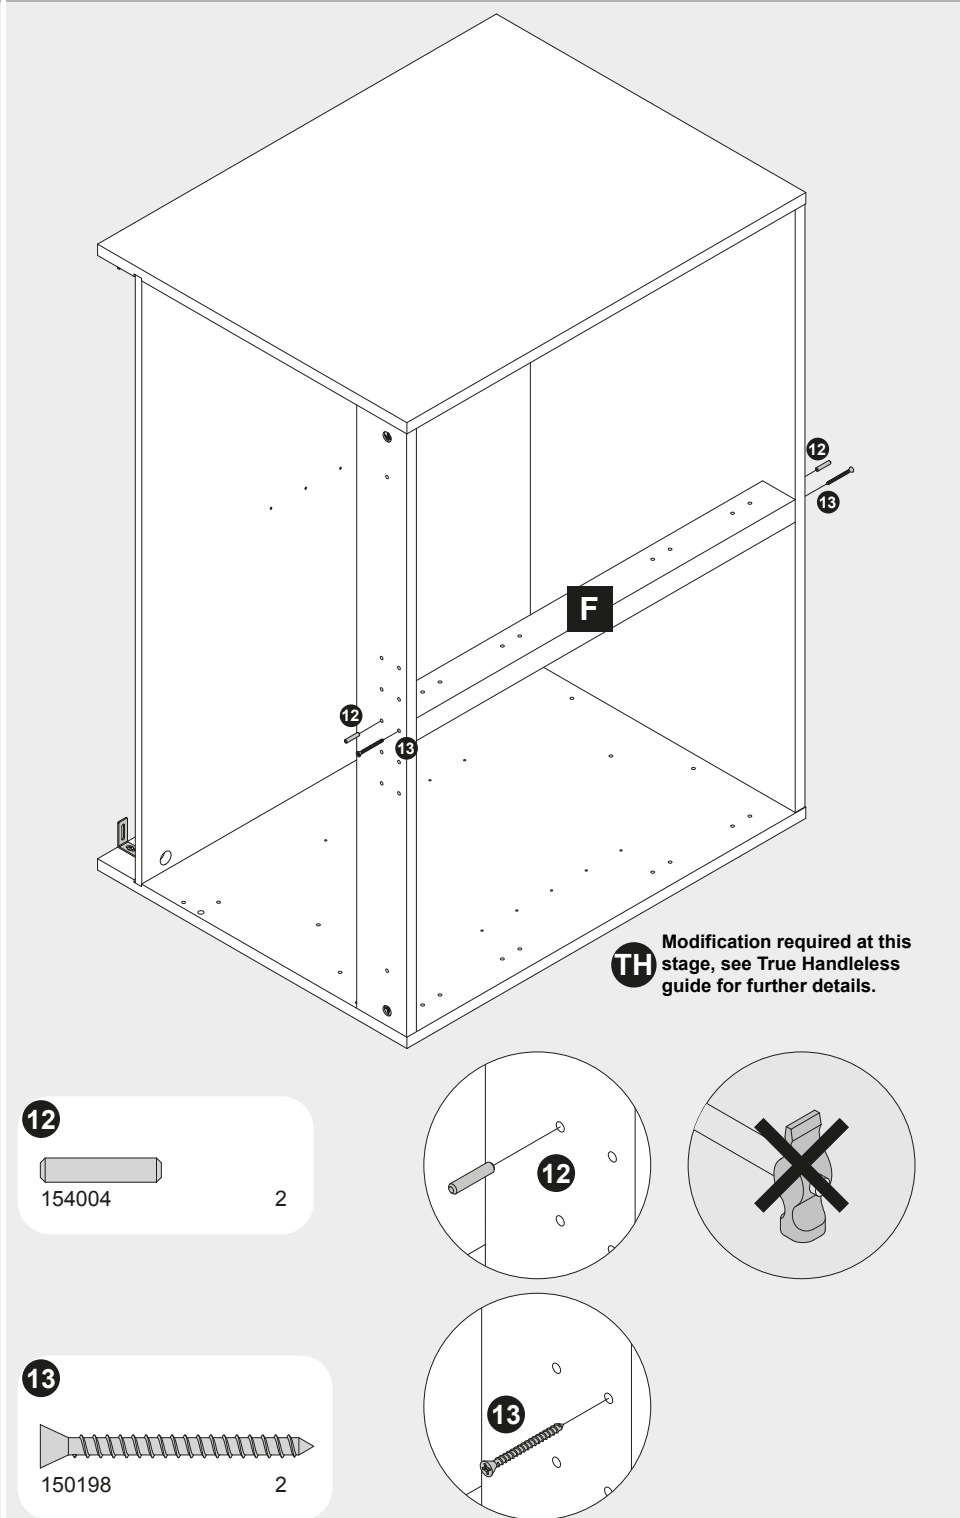


14 — 15 With Drawers

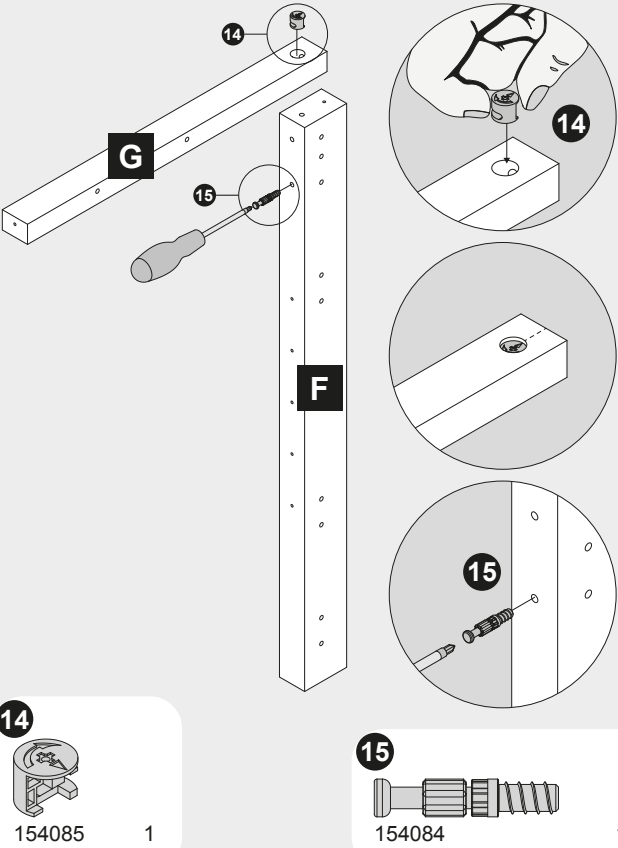


16 — 17 With Drawers

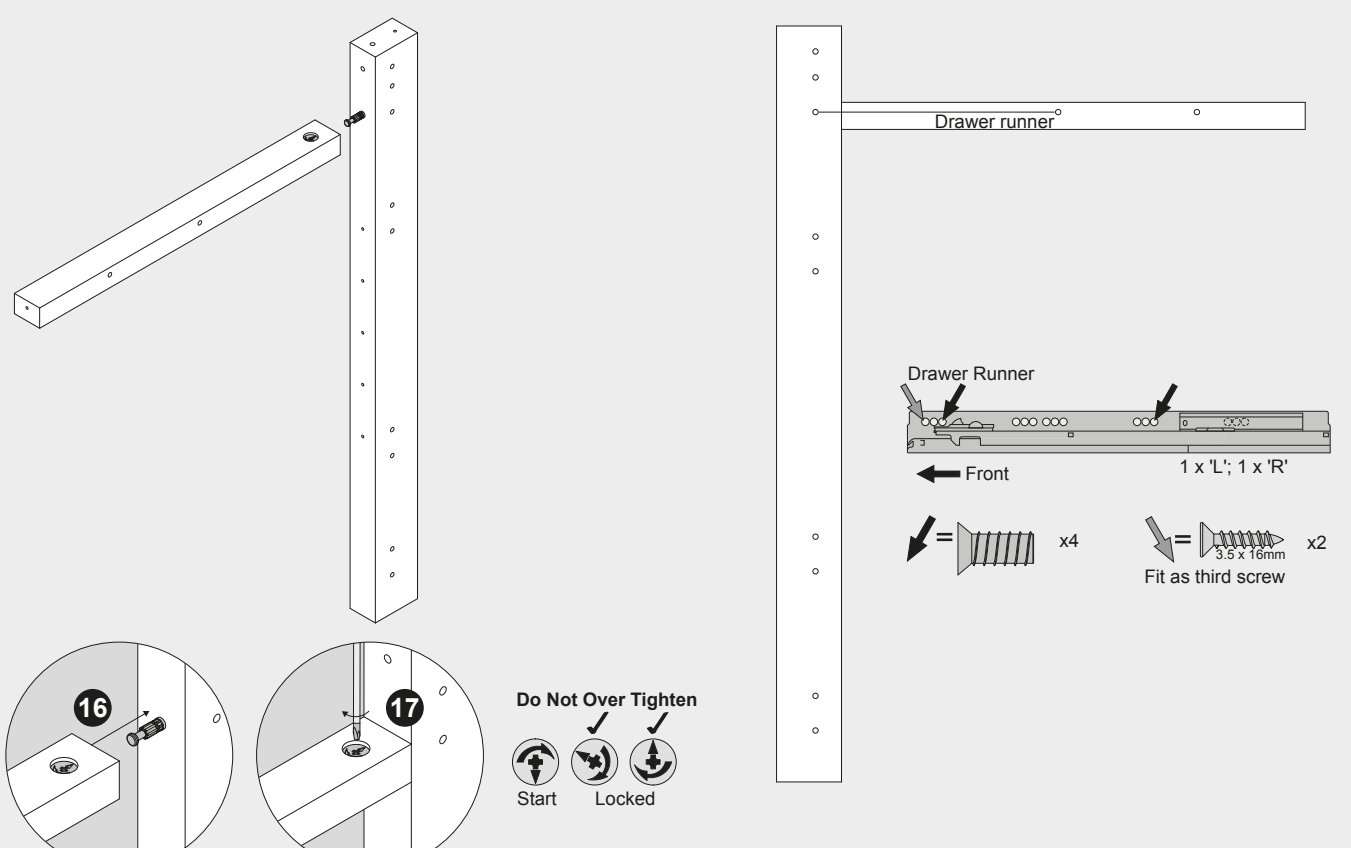

18 — 20 With Drawers

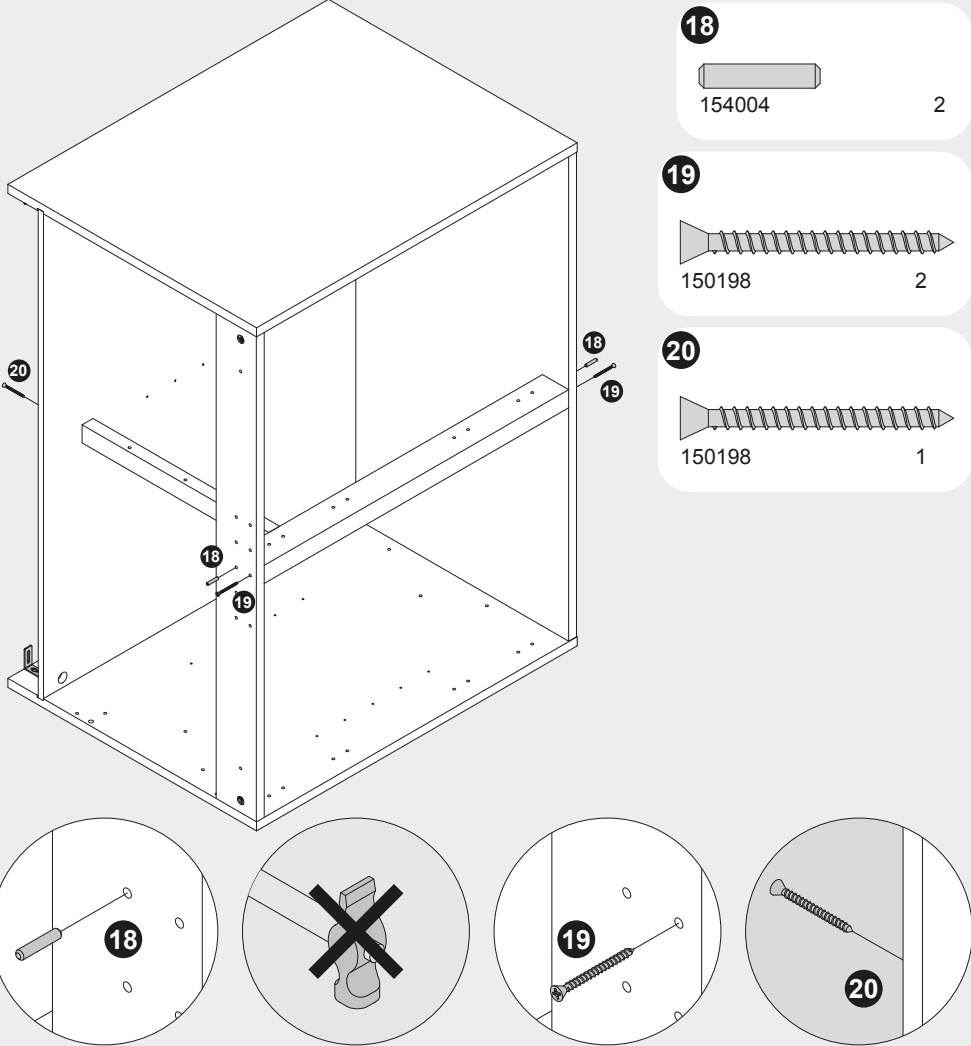

21 — 22

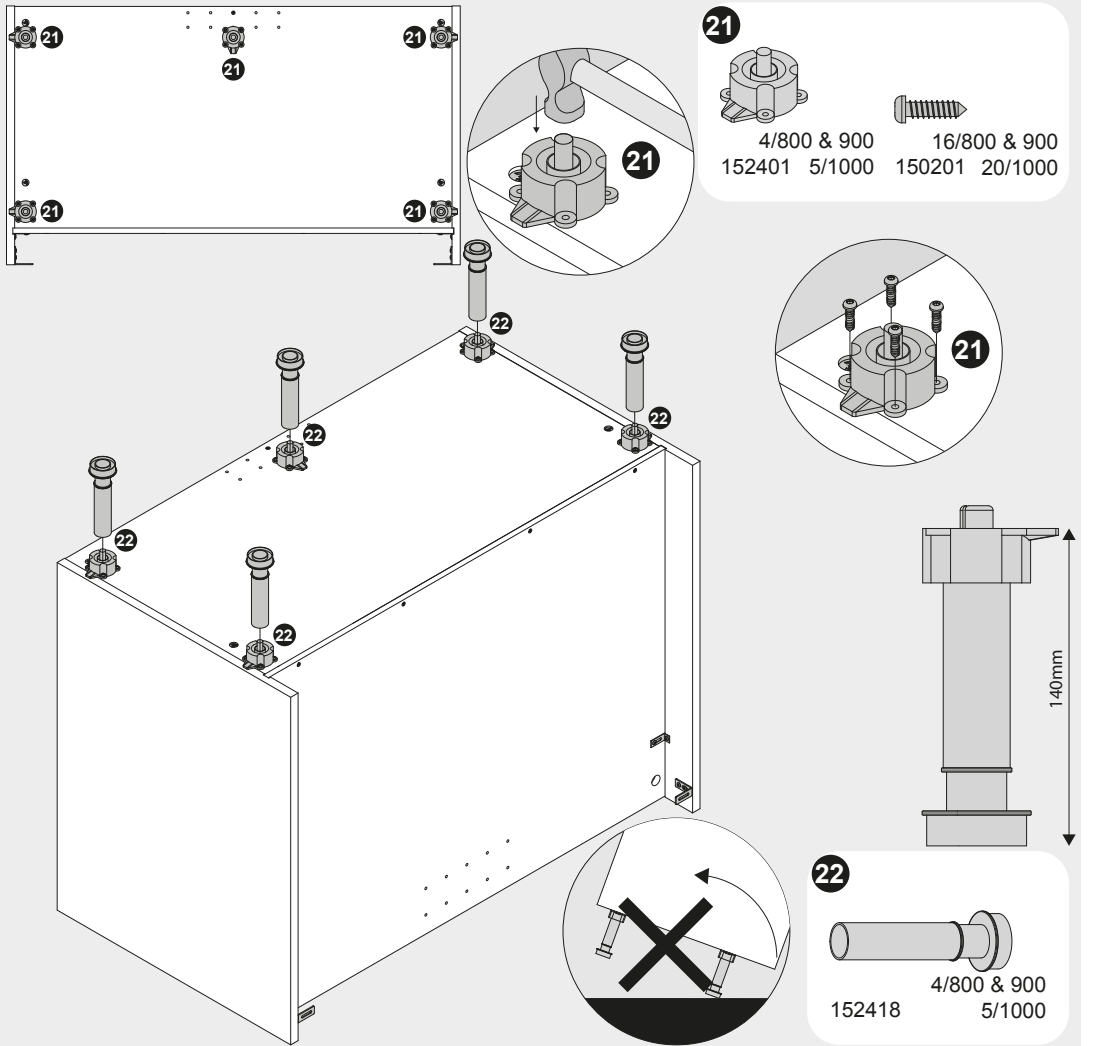

23 — 25 Installation Instructions

