



BASIN INSTALLATION MANUAL

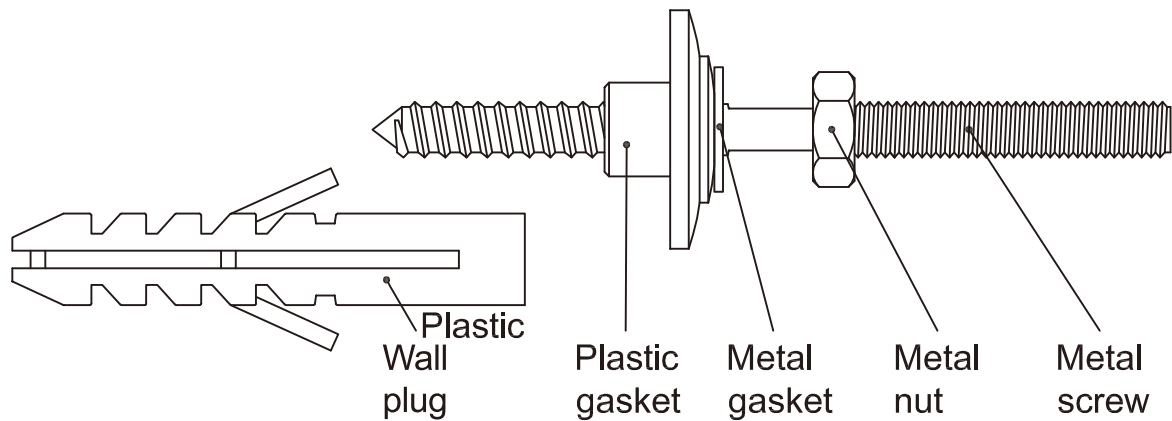


Note: These fixings are suitable for solid walls only. Plasterboard or stud walls may require specialist fixings (not supplied).


Caution: Care should be taken when drilling walls and floors to avoid any sunken wires or pipes.

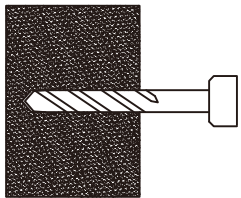


1. Using a 14mm masonry drill bit, drill two holes with a spacing of 180mm on the same horizontal

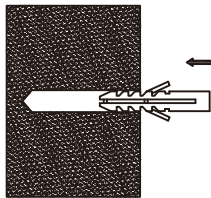


2. Push a wall plug into each hole.

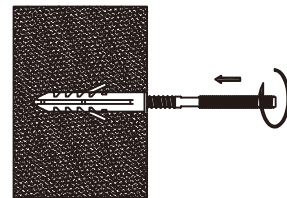


3. Screw a fixing bolt into each fixing plug using a 8mm spanner until the spanner contacts the wall.

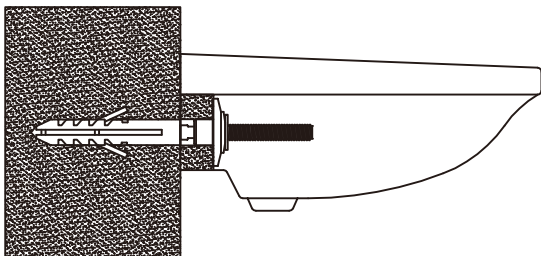

4. Place the basin in position against the wall, putting the fixing bolts through the holes in the rear of the basin. Push a plastic washer, followed by a metal washer, onto each fixing bolt.

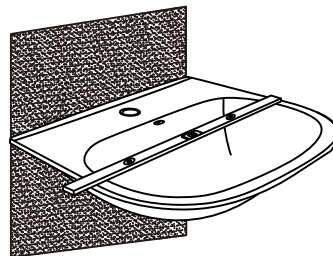

5. Horizontal measurement to check the basin is level.

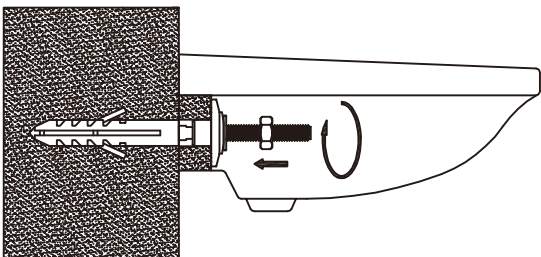

6. Screw a metal nut onto each fixing bolt to secure the basin. **Caution: Do not overtighten, as this may damage the ceramic.**

