


ASSEMBLY & INSTALLATION INSTRUCTIONS



Focal Point Fires Ltd
Christchurch, Dorset BH23 2BT
Tel: 01202 499330
Fax: 01202 499326
www.focalpointfires.co.uk
e : sales@focalpointfires.co.uk

Focal Point Fires Ltd
RBK House, Irishtown, Athlone,
Co. Westmeath, N37 XP52,
Ireland Tel: 01202 499330
Fax: 01202 499326
www.focalpointfires.co.uk
e: sales@focalpointfires.co.uk

MODELS COVERED BY THESE INSTRUCTIONS **HURST SUITE**

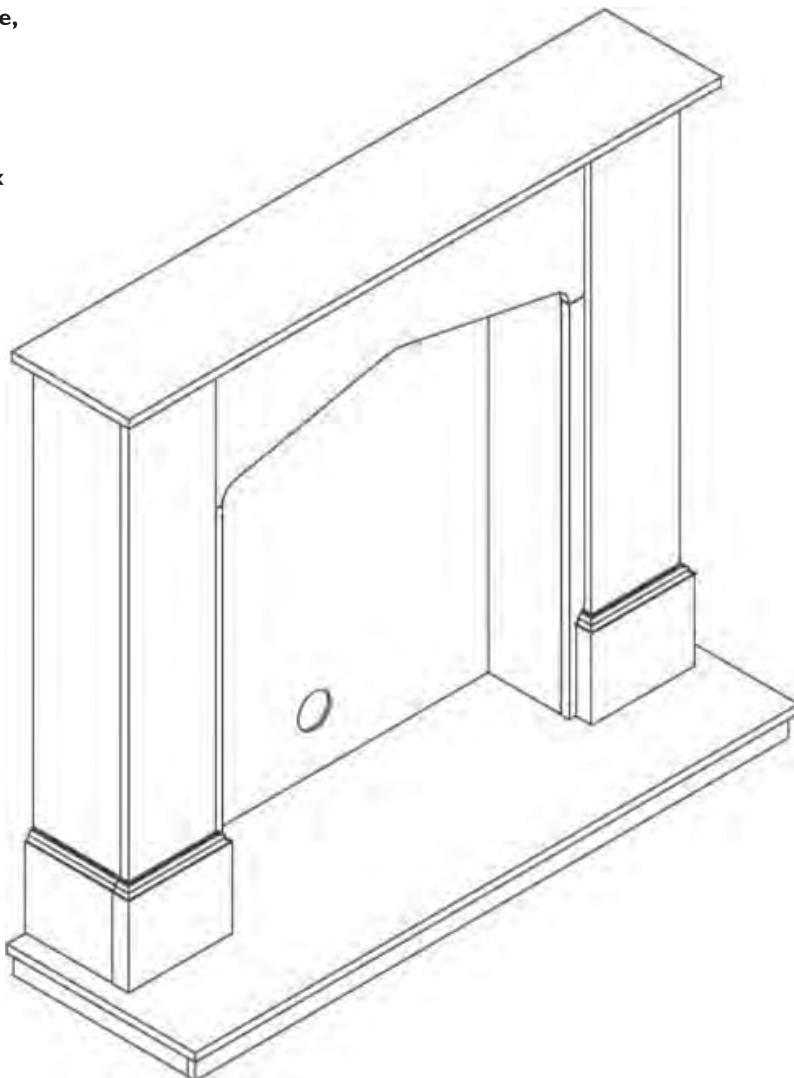

3 YEAR GUARANTEE

SUBJECT TO TERMS & CONDITIONS
For details please see: www.focalpointfires.co.uk or telephone
01202 588635 Option 4

Please note : Except where otherwise stated, all rights, including copyright in the text, images and layout of this booklet is owned by Focal Point Fires Ltd. You are not permitted to copy or adapt any of the content without the prior written permission of Focal Point Fires Ltd.

All instructions must be handed to the user for safekeeping.

Revision F - 11/22

© 2022 Focal Point Fires Ltd.

Section	Contents	Page No.
1.0	Important notes	2
2.0	Tools required	2
3.0	Hardware & parts list	2
4.0	Assembly	3
5.0	Installation	6
6.0	Cleaning/ finishing	6
7.0	Guarantee - terms and conditions	6

I.0 IMPORTANT NOTES

To ensure safe and stable installation:

1. The assembled Fire Surround can be fixed / secured to wall.
2. The wall must be sturdy and in good repair.
3. Some walls require alternative fixings (not included).
4. When drilling into the wall, check for hidden pipes and cables.
5. Lay the parts on to a soft surface with no debris that could damage the finish.

2.0 TOOLS REQUIRED





Cross head screwdriver PZ2 (3 inches in length or greater)

Drill, 6mm and a 2mm suitable drill bit

Pencil

Tape measure

3.0 HARDWARE & PARTS LIST

CODE	NAME	FIGURE	QUANTITY	CODE	NAME	FIGURE	QUANTITY
A	WOOD DOWELS (8X30mm)		21PCS	①	TOP PANEL		IPCS
B	CAM LOCKS (15X9mm)		18PCS	②	FRONT PANEL		IPCS
C	CAM BOLTS (6X40mm)		18PCS	③	LEFT LEG		IPCS
D	SCREWS (3.5X25mm)		15PCS	④	RIGHT LEG		IPCS
E	SCREWS (3X12mm)		9PCS	⑤	LEFT SIDE PANEL		IPCS
F	SCREWS (4X30mm)		2PCS	⑥	RIGHT SIDE PANEL		IPCS
G	SCREWS (4X12mm)		2PCS	⑦	INSIDE PANEL TOP		IPCS


3.0 HARDWARE & PARTS LIST - CONTINUED

GB IE

CODE	NAME	FIGURE	QUANTITY	CODE	NAME	FIGURE	QUANTITY
H	WALL PLUGS (6X30mm)		2PCS	⑧	RIGHT INSIDE PANELS		IPCS
I	ALLEN KEY		IPCS	⑨	LEFT INSIDE PANELS		IPCS
J	GLUE (10g)		IPCS	⑩	HEARTH		IPCS
K	FIXING STRAP		2PCS	⑪	BACK PANEL		IPCS


4.0 ASSEMBLY

STEP 1

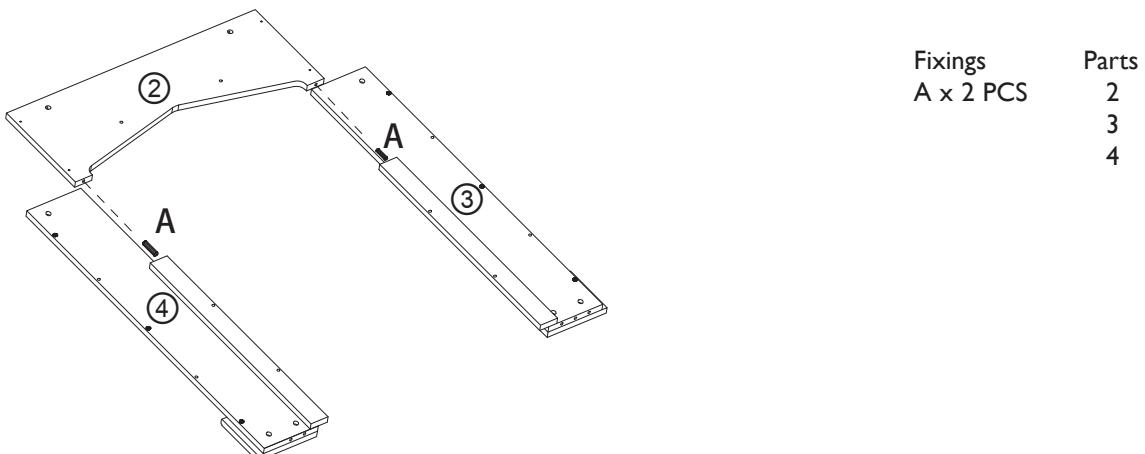


Lay the left leg (3) and the right leg (4) along with the front panel (2) on a soft floor. Next insert a 8 x 30mm wooden dowel (A) into the top of each leg with a small amount of glue (J).

STEP 2

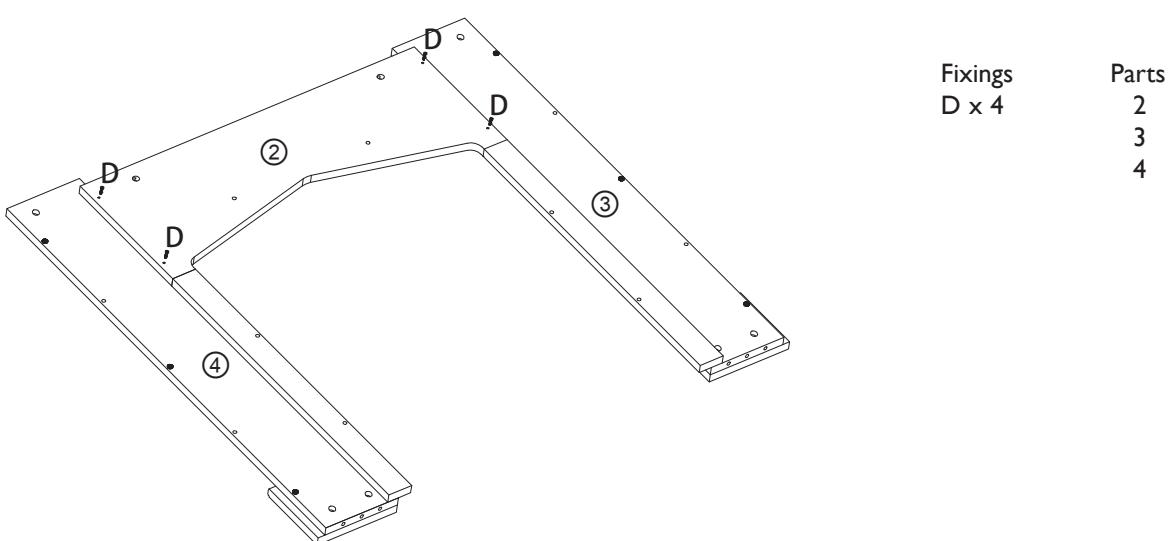

With the front panel (2) now in the correct position, you are able to screw the front panel (2) to the left (3) and the right (4) hand legs using the 3.5 x 25mm screws (D).


STEP 3

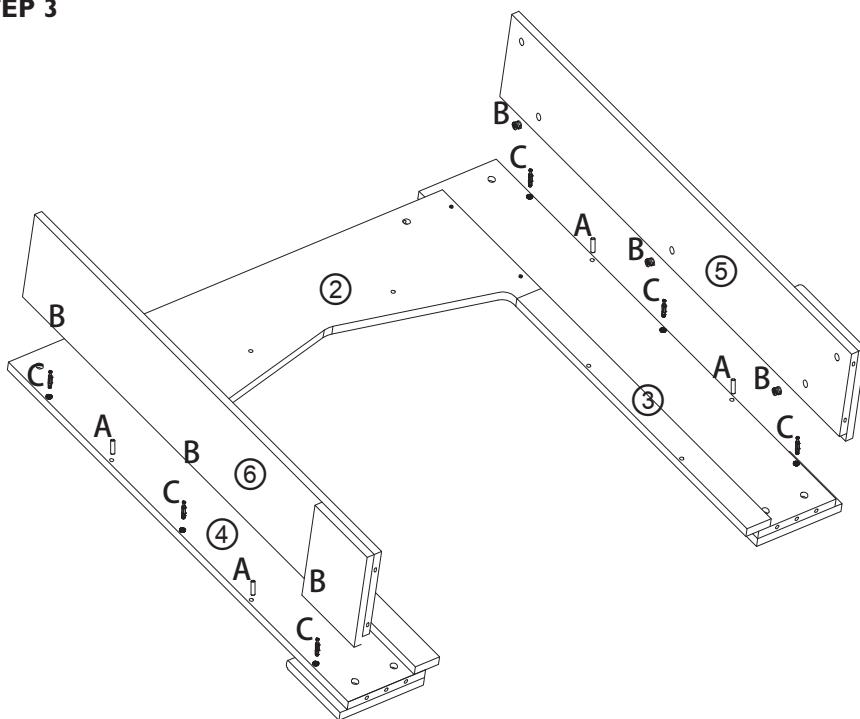

Fixings	Parts
A x 4 PCS	2
B x 6 PCS	3
C x 6 PCS	4
	5
	6

Insert some glue (J) into the 4 x dowel holes in the right leg (4) and left leg (3). Insert the 4 x wooden dowels (A) into the right leg (4) and left leg (3). Then with a cross headed screw driver, carefully screw 6 x cam bolts (C) in to the right leg (4) and left leg (3). Place some glue (J) into the dowel holes in the ends of the left side panel (5) and right side panel (6). Insert the left side panel (5) and right side panel (6) the correct way around on to the right leg (4) and left leg (3), making sure all the inserts are in the correct position. Insert the cam locks (B) into the left side panel (5) and right side panel (6). Once in position, turn the cam locks (B) with a cross headed screw driver clockwise to lock the parts together.


STEP 4

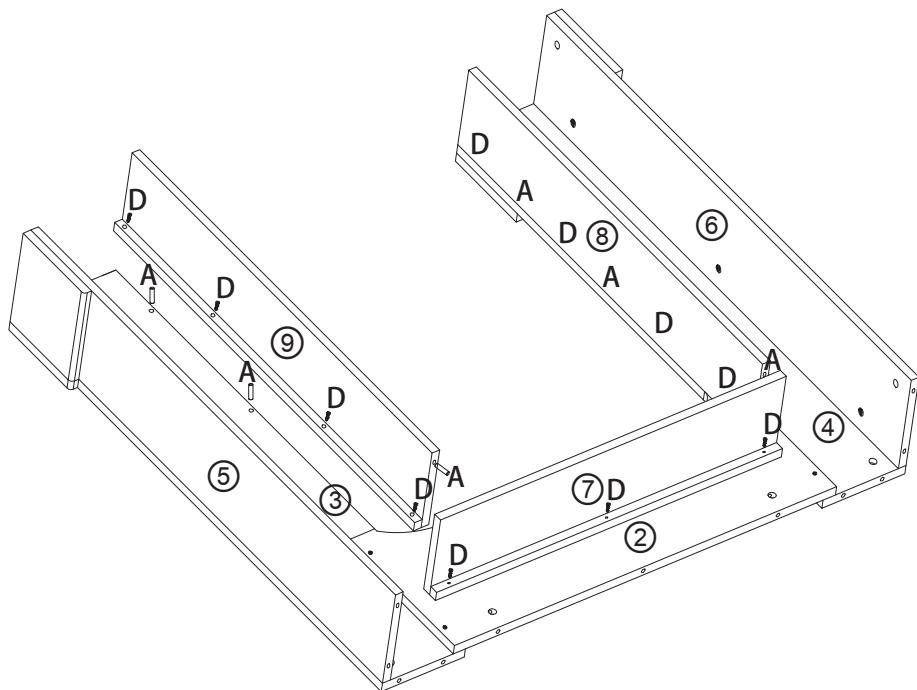

Fixings	Parts
A x 6 PCS	2
D x 11 PCS	3
	4
	5
	6
	7
	8
	9

Insert some glue (J) into the 6 x dowel holes in the rear of the right inside panel (8), left inside panel (7), right leg (4) and left leg (3). Then insert the 6 x wooden dowels (A) into place. Place a small amount of glue (J) into the dowel holes in the right inside panel (8), left inside panel (9) and the inside panel top (7). Then insert the right inside panel (8), left inside panel (9) and inside panel top (7) onto the wooden dowels (A) on the rear of the surround. Once both right inside panel (8), left inside panel (9) and inside panel top (7) are in position, screw the 11 x 3.5 x 25mm wood screws (D) in place, securing the right inside panel (8), left inside panel (9) and the inside panel top (7) to the surround.

STEP 5

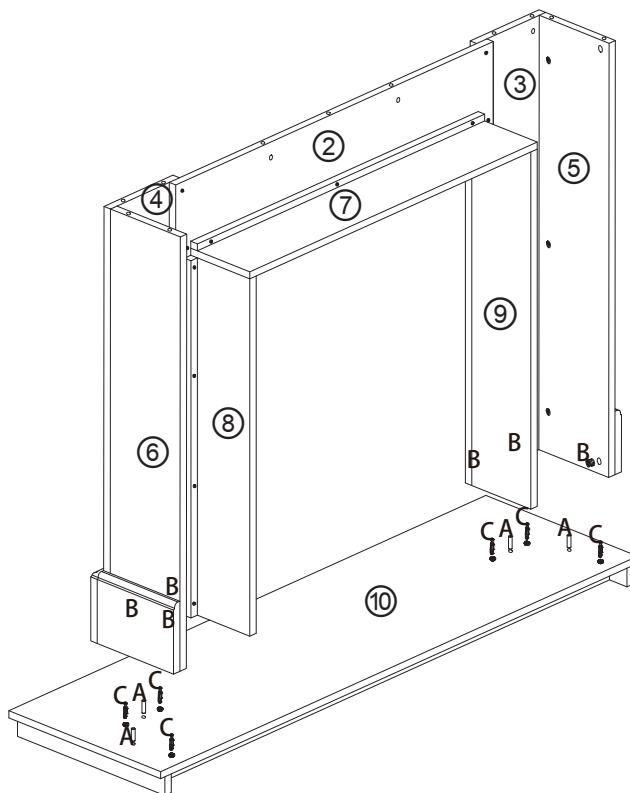


Fixings	Parts
A x 4 PCS	2
B x 6 PCS	3
C x 6 PCS	4
	5
	6
	7
	8
	9
	10

Firstly insert 4 x wooden dowels (A) with glue (J) into the top of the hearth (10). With a cross headed screw driver, carefully insert 6 x single headed cam bolts (C) into the top of the hearth (10). For this step we recommend to use two people.

Carefully lift the surround over the hearth (10) ensuring that all 6 x single headed cam bolts (C) and 4 x wooden dowels (A) insert the bottom edges of the surround. Once all 6 x single headed cam bolts (C) and wooden dowels (A) are correctly in position, insert 6 x cam locks (B) into the rear of the surround and tighten together using a cross headed screw driver.


STEP 6

Fixings	Parts
C x 6 PCS	1

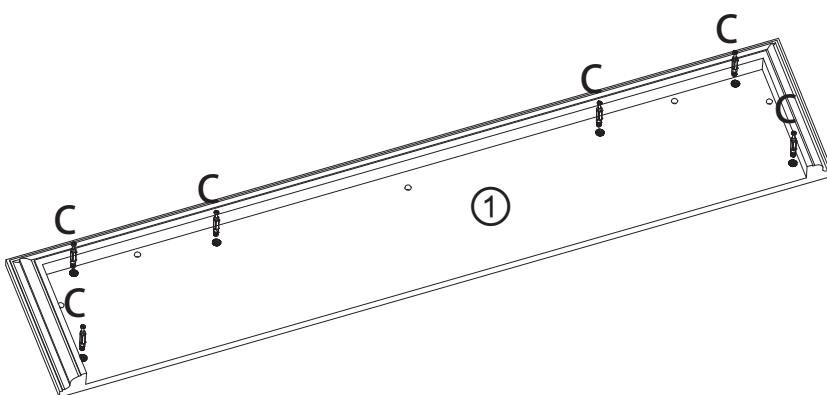

Prepare the top mantle (1) by screwing 6x cam bolts (C) into position.


STEP 7

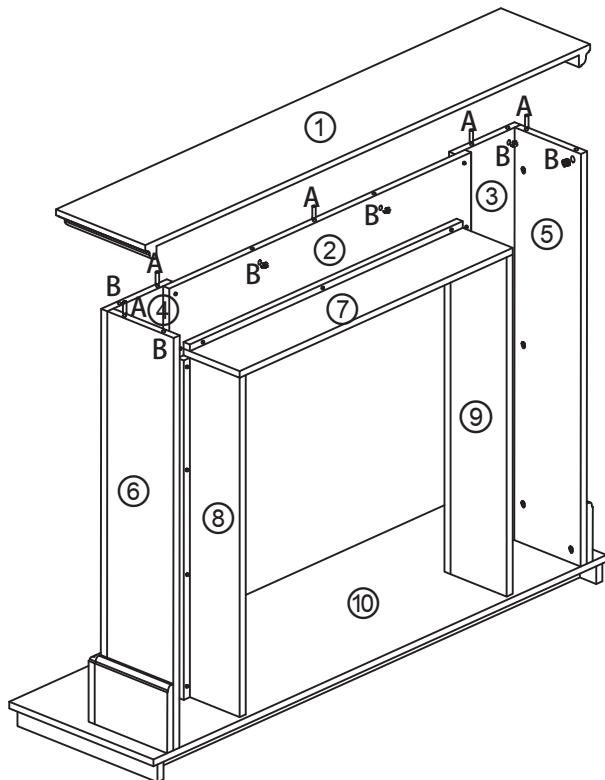

Fixings	Parts
A x 5 PCS	1
B x 6 PCS	2
	3
	4
	5
	6
	7
	8
	9
	10

Insert all 3 x cam locks (B) into each leg. The dowel joints (A) need to be glued in at each end of the surround. Connect the top mantle to the surround, making sure all 6 x inserts are in their correct position. Once home, all 6 x cam locks (B) can be tightened into position.

STEP 8

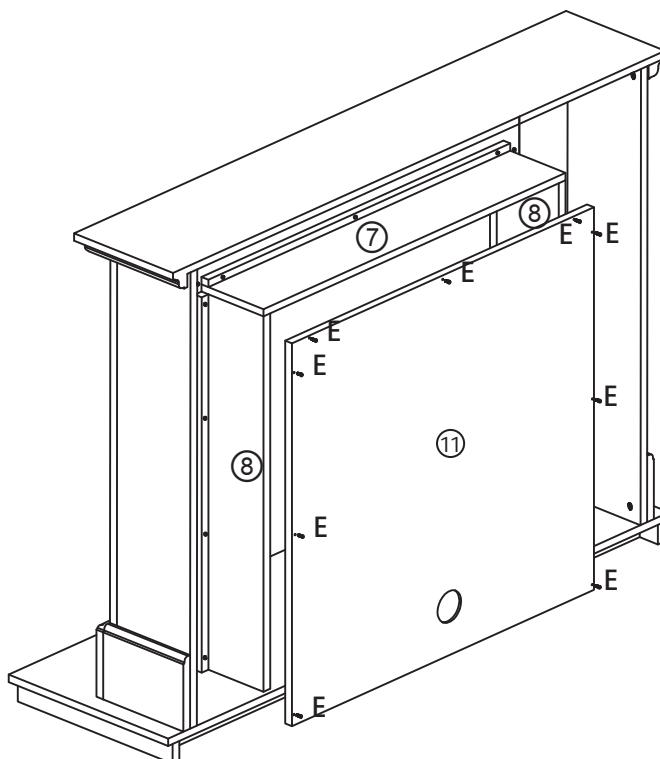


Fixings	Parts
E x 9 PCS	1
	2
	3
	4
	5
	6
	7
	8
	9
	10
	11

Offer the back panel (11) on to the rear of the surround. Ensuring that the plug cut out hole is at the bottom, line the edges of the back panel (11) up with the edges of the inside panel (7), right inside leg (8) and left inside leg(9). Once correctly in line, screw 9 x 3.5 x 12mm wood screws (E) through the rear of the back panel (11) and in to the rear of the inside panel (7) , right inside leg (8) and left inside leg (9).

STEP 1

 G x 2
 K x 2

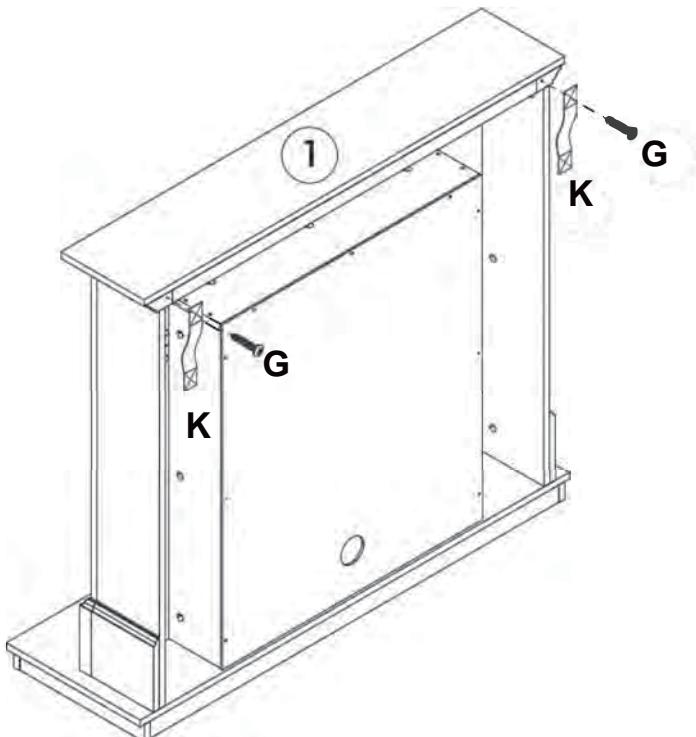


Fixings	Parts
G x 2 PCS	1
K x 2 PCS	2
	3
	4
	5
	6
	7
	8
	9
	10
	11

To avoid splitting the rear of the surround, pre drill the holes. Then attach the fixing straps (K) to the rear of the surround using the 4x12 screws (G)

STEP 2

 F x 2
 H x 2

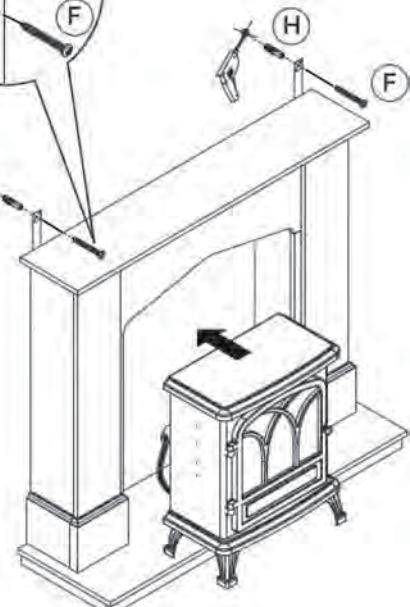

Fixings	Parts
F x 2 PCS	1
H x 2 PCS	2
	3
	4
	5
	6
	7
	8
	9
	10
	11

Once the fixing straps are in position, centre and level the suite into its final fitting position. Mark with a pencil on the wall where you wish to drill. Remove the suite from the position and prepare the wall from the marked positions. If using the fixings supplied (H), drill a pilot hole in the wall using a 6mm drill bit. If not, use a suitable drill bit for the wall plugs you are using. Insert the wall plugs (H) into position. Install the appliance onto the hearth and feed the mains cable through the hole in the back panel. Offer the surround back up into position against the wall. You are now able to secure the surround to the wall using the screws (F) provided.

6.0 CLEANING/ FINISHING

GB IE

Before carrying out any of the following operations, ensure that the appliance is OFF and completely cold. Regularly clean around the appliance to ensure that dust, fluff, pet hair etc, are kept to a minimum. There are no other specific requirements for care, other than regular cleaning of the general appliance.

A wipe with a dry cloth is normally sufficient. **DO NOT** use abrasive cleaners as they can damage the finish. Test in a hidden part before cleaning. Clean only in the direction of the grain. Regularly check the surround is securely fixed in position.

7.0 GUARANTEE - TERMS AND CONDITIONS

The 3 year guarantee commences from the date of purchase, provided that the following 3 terms and conditions are adhered to:

Registration is not required.

1. For any claim to be made within the 3 years from date of purchase you will be required to provide and supply us with your proof of purchase.
2. Your gas fire must have been commissioned by a CORGI/Gas Safe* registered installer, evidence of which you must provide together with the CORGI/Gas Safe* registration number.
3. Your appliance must have been serviced annually, irrespective of use, by a CORGI/Gas Safe* registered installer, evidence of which must be provided, such as the receipt.

Please note all consumable items such as any ceramics including; coals, pebbles, the matrix, front strips, side cheeks, rear panels and tapered rear panels are not covered by the 3 year guarantee. For all Electric fires purchased the 3 year guarantee commences from the date of purchase, providing that you can supply the proof of purchase. This does not cover consumable items such as pebbles, coals or light bulbs.

Making a claim is easy.

If you wish to make a claim under our 3 year guarantee and all the terms and conditions for your product have been met then please submit the following information for the attention of the 3G Service Department to the address below. Alternatively, you can email or fax. Please note that this does not affect your statutory rights.

Focal Point Fires Ltd, 3G Service Department, Reid Street, Christchurch, Dorset, BH23 2BT.
Alternatively email: 3g@focalpointfires.co.uk or fax. 01202 499326.

1. Name, full address including post code and contact telephone number.
2. Receipt of purchase or credit card statement.
3. Original installers CORGI/Gas Safe* registration number (gas fires only).
4. Annual service receipt for every 12 months (gas fires only).

*Gas Safe Register replaced CORGI as the gas registration body in Great Britain and the Isle of Man on 1st April 2009.

Disclaimer:

The components of this mantle are veneered MDF. As such, it is likely that there will be variations in the appearance, texture, grain structure and colour etc., of the individual components.

Caution: Wood products may produce splinters, so care should be taken during assembly.

Warning: This mantle is not designed for heavy use. Care should be taken to distribute weight evenly.

Note: Wall plugs supplied are for masonry or solid wall fixing only. For any other type of wall seek professional advice.