


OVERHEAD SHOWER ARM

AM3060##

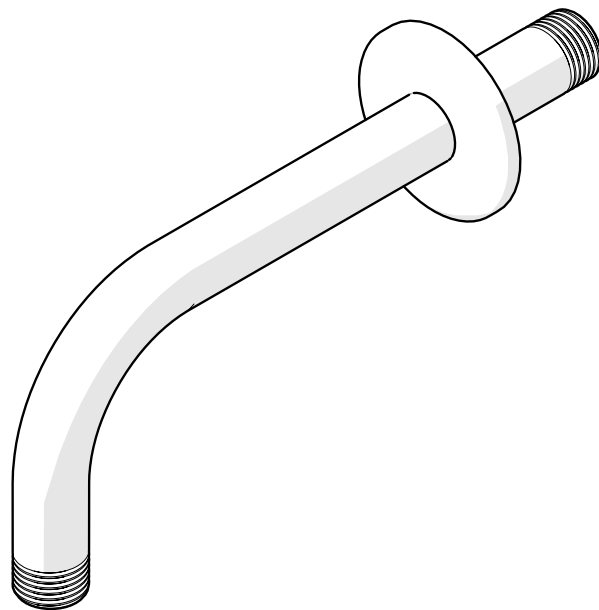

IMPORTANT!

This shower arm should be fitted to a supply of controllable mixed water.

EASY TO INSTALL

1. Support the shower arm using a rigid pipe-work connected to a female ½” BSP to 15mm compression adapter.
2. Adjust the height and depth of the pipe-work to suit the final position of the fixed shower head.
3. Ensure the pipe-work is securely fastened in position and connect to the water supply using thread sealing compound where required.
4. Before finishing the wall surface turn on the water supplies and check the connections for water leaks.
5. When the wall surface is finished check the stability of the shower arm, slide the decorative shroud onto the shower arm and push it up to the wall surface.
6. Fit a shower head to the arm in accordance with instructions supplied with the shower head.

PRODUCT CARE

To retain the best quality finish, clean product regularly with a soft damp cloth. Do not use abrasive or chemical cleaners , as these will damage the product.

Contact Details:

UK: Croydex, Central Way, Andover, Hampshire, SP10 5AW, UK

EU: MIL, Unit 8 Purcellsinch Ind Est, Dublin Road, Kilkenny, R95 HP71, Ireland

Tel: +44 (0)1264 365881

Email: info@croydex.co.uk

Web: www.croydex.com