



# HEAVY DUTY WIRE RACK

HJ325

## ASSEMBLY INSTRUCTIONS



Follow Manual  
Carefully



Keep Small  
Parts Away from  
Children



Do Not Exceed  
Weight Limit



Keep Away from  
Children



Do Not Climb



Keep Away from  
Fire



Handle and  
Dispose of Parts  
Properly




Watch the Assembly Video!


### SET UP

- 2 PEOPLE REQUIRED
- PROTECT FLOOR WITH MAT
- WEAR GLOVES WHEN ASSEMBLING
- ENSURE COMPONENTS ARE IN GOOD CONDITION BEFORE ASSEMBLING
- SET POWER TOOLS TO LOW SPEED
- DO NOT TIGHTEN SCREWS UNTIL FULLY ASSEMBLED
- HAMMER REQUIRED


### PARTS



A x2



B x8

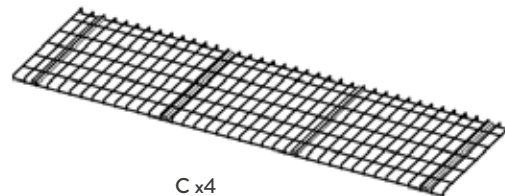


C x4



D x16

### STEP 1

- ATTACH CROSS BEAMS TO UPRIGHT FRAME BY INSERTING CLIPS INTO KEYHOLES FROM THE OUTSIDE AND HAMMERING DOWN UNTIL THEY SLOT INTO THE JOINT.

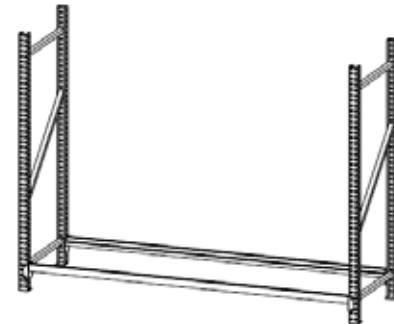

### STEP 2

- DROP WIRE DECKS INTO PLACE ENSURING THEY ARE FULLY INSERTED INTO THE CROSS BEAM SLOTS.



### STEP 3

- INSERT SAFETY PINS INTO JOINT HOLES BETWEEN FRAME AND CROSS BEAMS.

