

# ASSEMBLY & INSTALLATION INSTRUCTIONS



Focal Point Fires Ltd

Christchurch, Dorset BH23 2BT

Tel: 01202 499330

Fax: 01202 499326

[www.focalpointfires.co.uk](http://www.focalpointfires.co.uk)

e : [sales@focalpointfires.co.uk](mailto:sales@focalpointfires.co.uk)

## MODELS COVERED BY THESE INSTRUCTIONS

**F820583 FPFBQ385 CHARLOTTESVILLE PINE FIREPLACE**

**F820585 FPFBQ387 CHARLOTTESVILLE WHITE FIREPLACE**

**F820584 FPFBQ386 CHARLOTTESVILLE OAK FIREPLACE**

Focal Point Fires Ltd

RBK House, Irishtown, Athlone,


Co. Westmeath, N37 XP52,

Ireland Tel: 01202 499330

Fax: 01202 499326

[www.focalpointfires.co.uk](http://www.focalpointfires.co.uk)

e: [sales@focalpointfires.co.uk](mailto:sales@focalpointfires.co.uk)

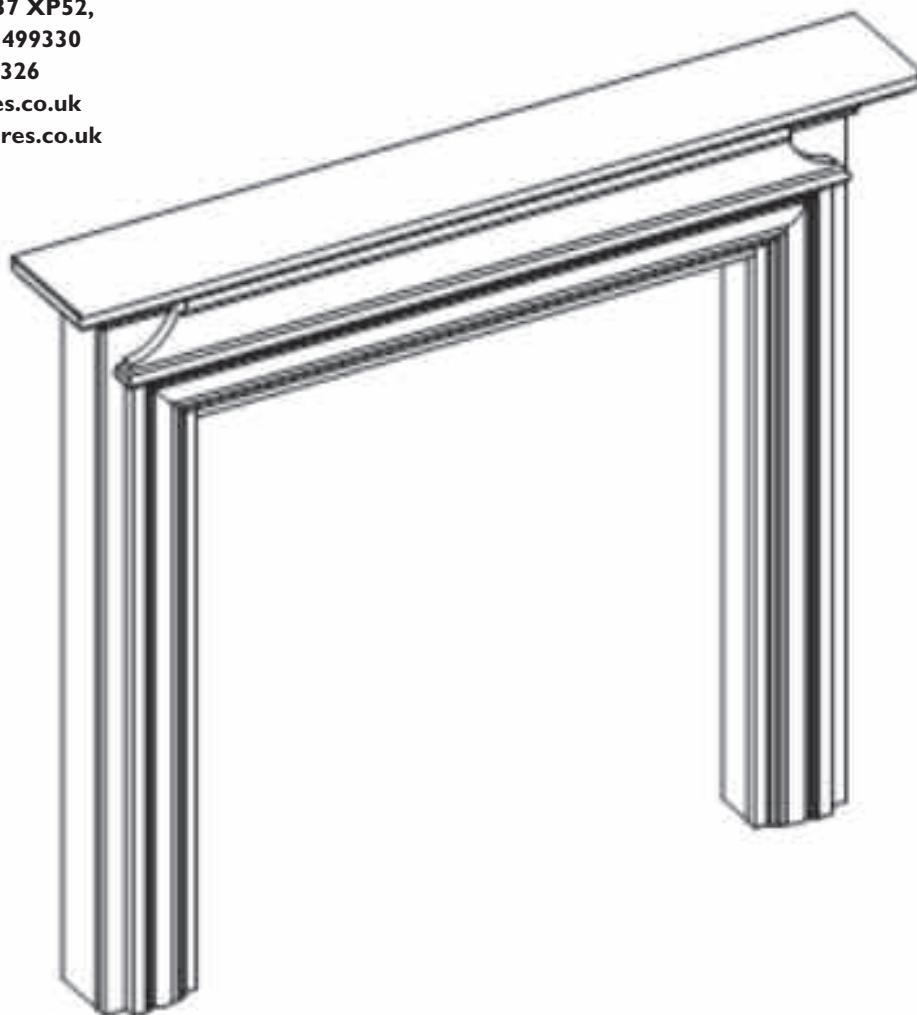

## **3 YEAR GUARANTEE**

SUBJECT TO TERMS & CONDITIONS

For details please see: [www.focalpointfires.co.uk](http://www.focalpointfires.co.uk) or telephone  
01202 588635 Option 4

Please note : Except where otherwise stated, all rights, including copyright in the text, images and layout of this booklet is owned by Focal Point Fires Ltd. You are not permitted to copy or adapt any of the content without the prior written permission of Focal Point Fires Ltd.

**All instructions must be handed to the user for safekeeping.**

Revision A - 01/22

© 2022 Focal Point Fires Ltd.

Section	Contents	Page No.
1.0	Important notes	2
2.0	Tools required	2
3.0	Hardware & parts list	2
4.0	Assembly	3
5.0	Installation	5
6.0	Cleaning/ finishing	5
7.0	Guarantee - terms and conditions	5

## 1.0 IMPORTANT NOTES

To ensure safe and stable installation:

1. The assembled Fire Surround must be fixed / secured to the wall.
2. The wall must be sturdy and in good repair.
3. Some walls require alternative fixings (not included).
4. When drilling into the wall, check for hidden pipes and cables.
5. There are three options for construction of this surround.

Option A - without a rebate, this option is similar to option B, but allows for a 95mm of space behind the surround.

Option B - with narrow rebates - If using this surround with an electric fire and a flat wall do not use with rebates, instead use the spacer frame from the fire, this option will give you 75mm of space behind the surround.

Option C - with wide rebates - if you are installing this surround with a gas fire, or an electric fire where there is space in the wall to recess the fire use parts 5 & 6, this means the back panel is against the wall.

## 2.0 TOOLS REQUIRED







Cross head screwdriver PZ2 (3 inches in length or greater)

Drill, 6mm and a 2mm suitable drill bit


Pencil

Tape measure

## 3.0 HARDWARE & PARTS LIST

CODE	NAME	FIGURE	QUANTITY	CODE	NAME	FIGURE	QUANTITY
A	WOOD DOWELS (8X30mm)		8PCS	①	BACK BOARD		IPCS
B	CAM LOCKS (15X9mm)		4PCS	②	TOP PANEL		IPCS
C	CAM BOLTS (6.5X40mm)		4PCS	③	NARROW INSIDE TOP		IPCS
D	WOOD SCREW (3.5X25mm)		17PCS	④	NARROW INSIDE LEG		2PCS
E	WALL SCREW (4X30mm)		2PCS	⑤	WIDE INSIDE TOP		IPCS
F	WOOD SCREW (3X12mm)		4PCS	⑥	WIDE INSIDE LEG		2PCS
G	WALL PLUG (6X30mm)		2PCS	⑦	LEFT SIDE PANEL		IPCS
H	MIRROR PLATES (45X43mm)		2PCS	⑧	RIGHT SIDE PANEL		IPCS
I	GLUE (10g)		IPCS				
J	ALLEN KEY		IPCS				
K	SCREWS (4X30mm)		2PCS				

### STEP 1

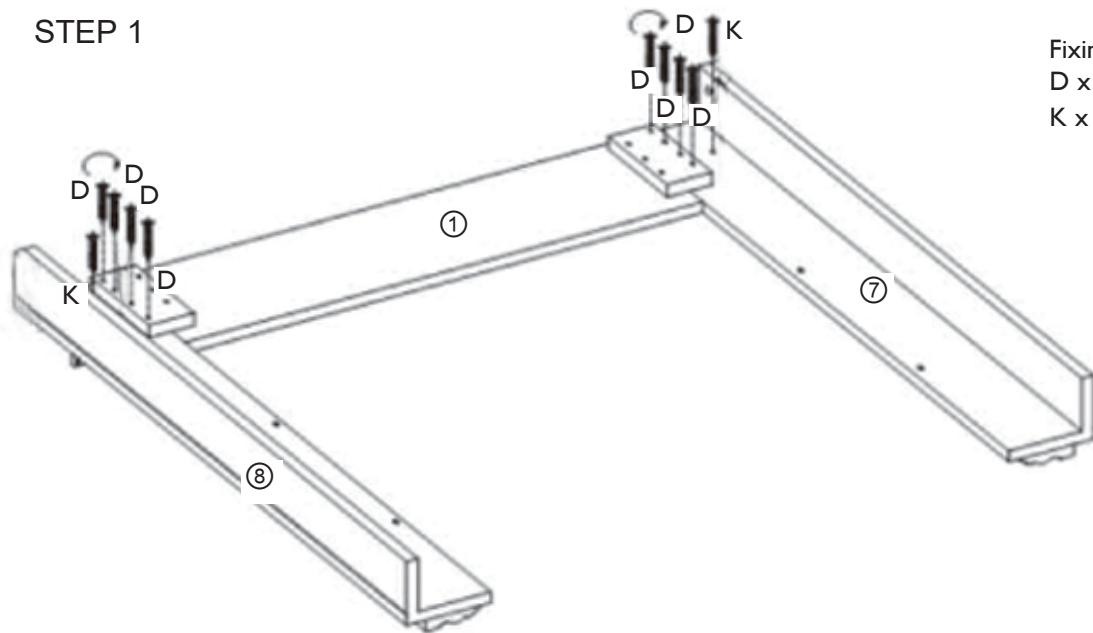

Fixings	Parts
D x 8 PCS	1
K x 2 PCS	7
	8



Gently lay both legs you have prepared onto a suitable protected surface. Be extremely careful not to scratch the front edges of the legs. DO NOT DRAG THE LEGS! Make sure that the legs are lifted everytime they are moved to avoid them from being damaged.

Use 2x4x30 screws (K) to screw the right leg (8) and left leg (7) to the back board (1).

Use 8x3.5x25 wood screws (D) to screw the right leg (8) and the left leg (7) to the back board (1).

### STEP 2

#### OPTION A

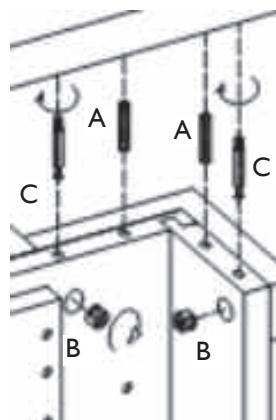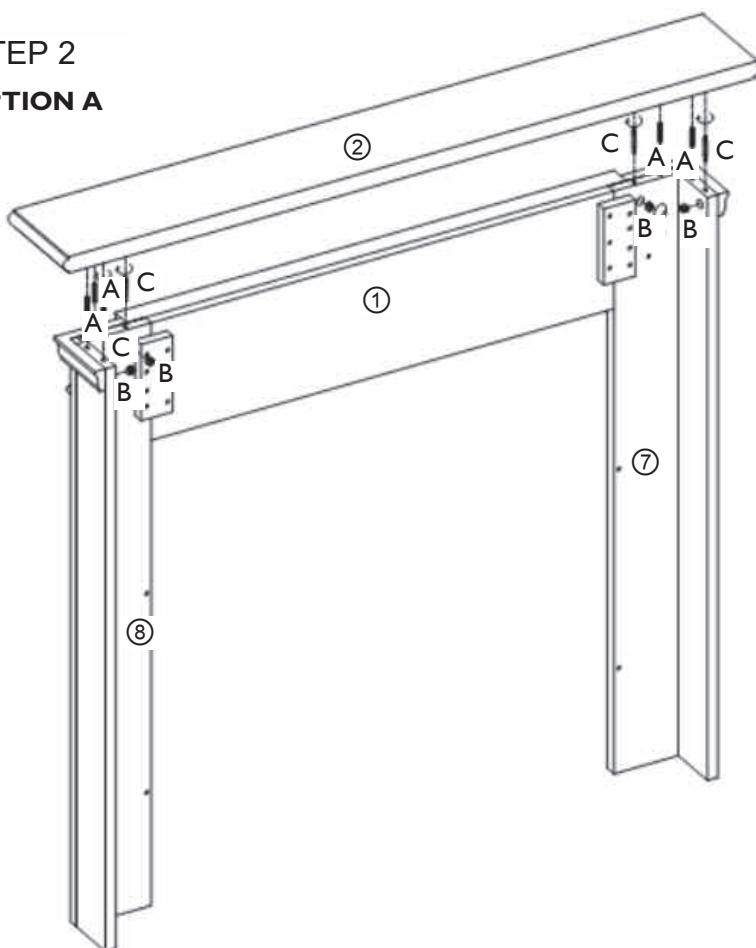


Fixings	Parts
A x 4 PCS	1
B x 4 PCS	2
C x 4 PCS	7
	8

Using a drop of glue (I) in each dowel hole, insert 2 dowels (A) in to the right leg (8), and repeat on the left leg (7).

Screw the cam bolts (C) into the top panel (2) and put a little glue (I) into the dowel holes. Place the top panel (2) onto the surround, ensuring that the cam bolts (C) and dowels (A) line up with the relevant holes. Push down, check there are no gaps then insert and tighten cam locks (B) into position. This surround now has a rebate depth of 95mm, proceed with step 3 for a 75mm rebate or step 4 for a 25mm rebate.

### STEP 3

#### OPTION B

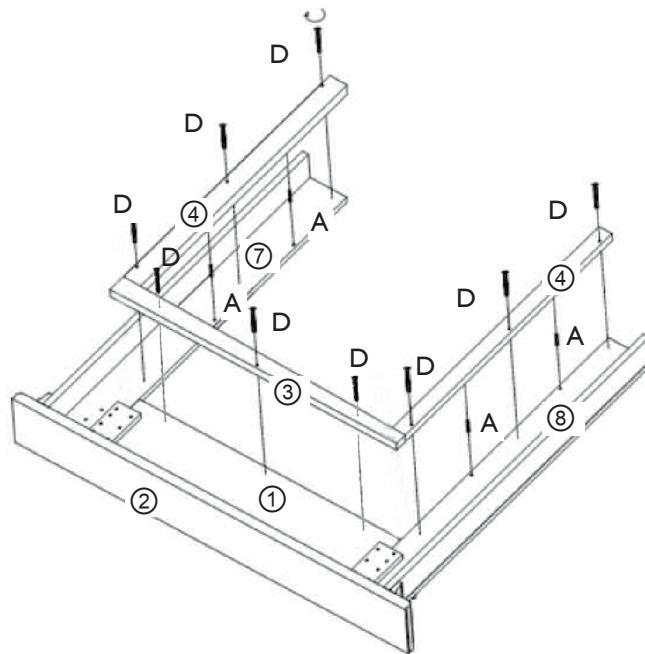


Fixings	Parts
A x 4 PCS	1
D x 9 PCS	2
	3
	4
	7
	8

Use the Glue (I) in the dowel holes before inserting 2 dowels (A) into the left and right hand legs. Now put a small amount of glue (I) in the dowel holes of the narrow inside leg panels (4). Push the narrow inside leg panels (4) on to the dowels. Take the narrow inside top (3) and mount this in place above the side panels, directly onto the back of the back board(1). Use 9 screws (D) to secure all 3 narrow panels down.

### STEP 4


#### OPTION C

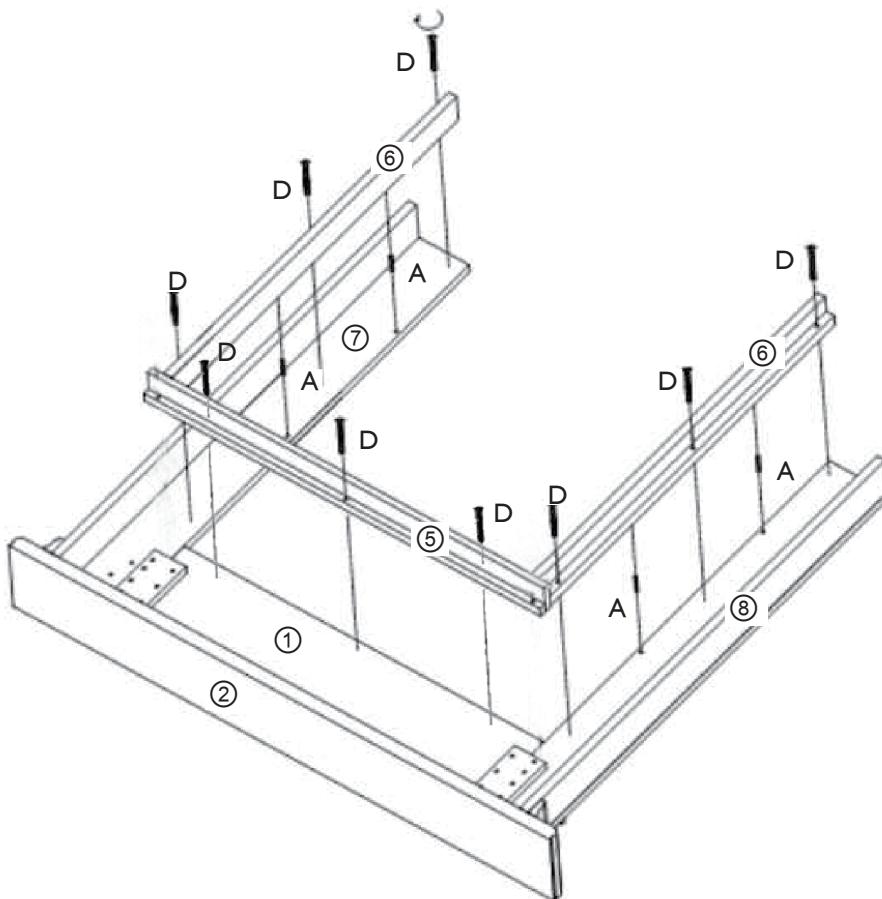

Fixings	Parts
A x 4 PCS	1
D x 9 PCS	2
	5
	6
	7
	8

Use the Glue (I) in the dowel holes before inserting 2 dowels (A) into the left and right hand legs. Now put a small amount of glue (I) in the dowel holes of the wide inside leg panels (6). Push the inside wide leg panels (6) on to the dowels. Take the wide inside top (5) and mount this in place above the side panels, directly onto the back of the back board(1). Use 9 screws (D) to secure all 3 wide panels down.

Fixings  
 E x 2 PCS  
 F x 4 PCS  
 G x 2 PCS  
 H x 2 PCS

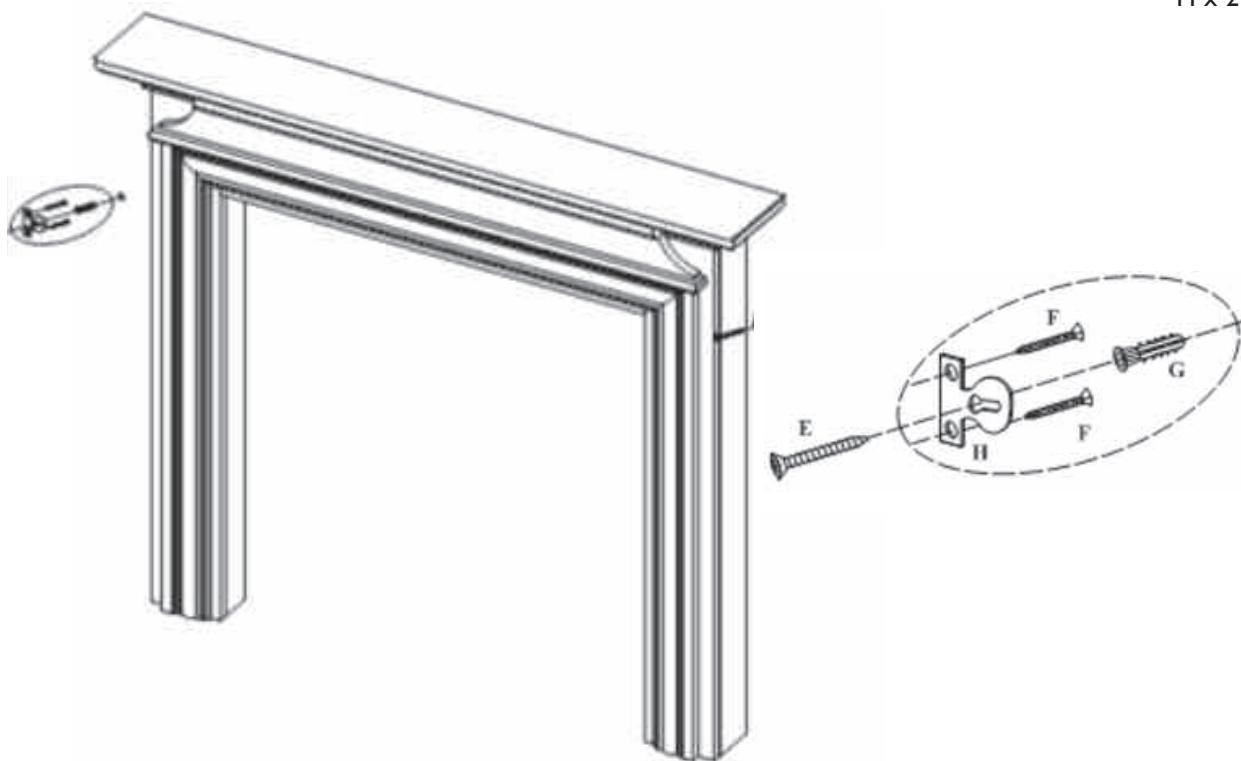

With a pencil mark out the desired height where you would like the mirror brackets (H) to be situated on the rear of the legs. To avoid splitting the leg, pre drill the bracket holes with a 2mm drill bit. Now attach the brackets to the legs using the 3x12mm screws (F). Once the brackets are in position, centre and level the hearth into its final fitting position. Position the surround on the hearth to correspond with the header/fireplace lintel, mark with a pencil on the wall where you wish to drill. Remove the surround and prepare the wall from the marked positions. If using the fixings supplied, drill a hole in the wall using a 6mm drill bit. If not, use a suitable drill bit for the wall plugs you are using. Insert the wall plugs (G) into position. Offering the surround back up into position against the wall, you are now able to secure the surround to the wall using the screws (E).

## 6.0 CLEANING/ FINISHING

Before carrying out any of the following operations, ensure that the appliance is OFF and completely cold. Regularly clean around the appliance to ensure that dust, fluff, pet hair etc, are kept to a minimum. There are no other specific requirements for care, other than regular cleaning of the general appliance.

A wipe with a dry cloth is normally sufficient. **DO NOT** use abrasive cleaners as they can damage the finish. Test on a hidden part before cleaning. Regularly check the surround is securely fixed in position.

## 7.0 GUARANTEE - TERMS AND CONDITIONS

The 3 year guarantee commences from the date of purchase, provided that the terms and conditions are adhered to:

**Registration is not required.**

1. For any claim to be made within the 3 years from date of purchase you will be required to provide and supply us with your proof of purchase.

**Making a claim is easy.**

If you wish to make a claim under our 3 year guarantee and all the terms and conditions for your product have been met then please submit the following information for the attention of the 3G Service Department to the address below. Alternatively, you can email or fax. Please note that this does not affect your statutory rights.

Focal Point Fires Ltd, 3G Service Department, Reid Street, Christchurch, Dorset, BH23 2BT.  
 Alternatively email: 3g@focalpointfires.co.uk or fax. 01202 499326.

### Details required:

1. Name, full address including post code and contact telephone number.
2. Receipt of purchase or credit card statement.

F861611