


ASSEMBLY & INSTALLATION INSTRUCTIONS



MODELS COVERED BY THESE INSTRUCTIONS

F820806 MONTANA OAK GREY FIRE SURROUND

Focal Point Fires Ltd.
Christchurch, Dorset BH23 2BT
Tel: 01202 499330
Fax: 01202 499326
www.focalpointfires.co.uk
e : sales@focalpointfires.co.uk

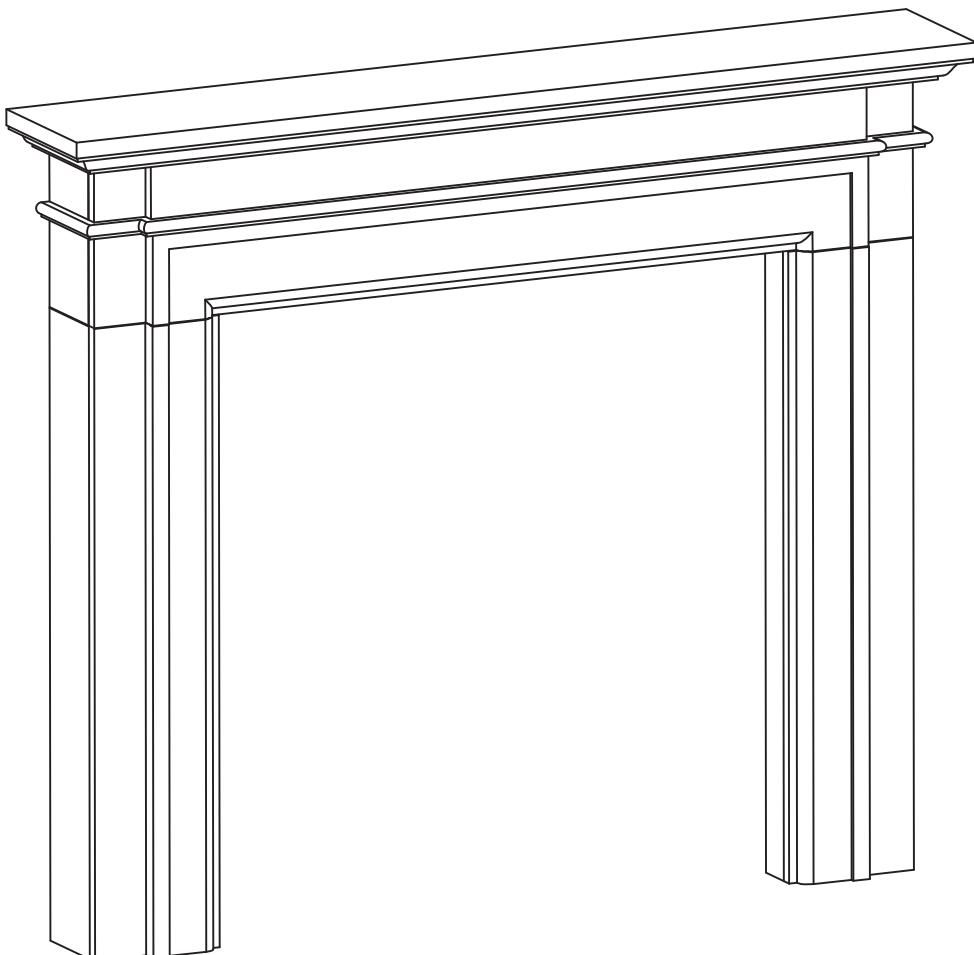

3 YEAR GUARANTEE

SUBJECT TO TERMS & CONDITIONS
For details please see: www.focalpointfires.co.uk or telephone
01202 588635 Option 4

Please note : Except where otherwise stated, all rights, including copyright in the text, images and layout of this booklet is owned by Focal Point Fires Ltd. You are not permitted to copy or adapt any of the content without the prior written permission of Focal Point Fires Ltd.

All instructions must be handed to the user for safekeeping.

Revision B - 04/22

© 2022 Focal Point Fires Ltd.

Section	Contents	Page No.
1.0	Important notes	2
2.0	Tools required	2
3.0	Hardware & parts list	2
4.0	Assembly	3
4.0	Assembly	4
5.0	Installation	4
6.0	Cleaning/ finishing	5
7.0	Guarantee - terms and conditions	5

1.0 IMPORTANT NOTES

To ensure safe and stable installation:

1. The assembled Fire Surround must be fixed / secured to wall.
2. The wall must be sturdy and in good repair.
3. Some walls require alternative fixings (not included).
4. When drilling into the wall, check for hidden pipes and cables.
5. There are two options for construction of this surround.

A - with rebates - If you are installing this surround with a gas fire, or an electric fire where there is space in the wall to recess the fire, this means the laminate / marble is up against the wall.

B - with out rebates - If using this surround with an electric fire and a flat wall you will need to remove the rebates, instead use the spacer frame from the fire.

2.0 TOOLS REQUIRED


Cross head screwdriver PZ2 (3 inches in length or greater)

Drill, 6mm and a 2mm suitable drill bit

Pencil

Tape measure

3.0 HARDWARE & PARTS LIST


CODE	NAME	FIGURE	QUANTITY
A	WOOD DOWELS (8x30mm)		18PCS
B	CAM LOCKS (15x9mm)		6PCS
C	CAM BOLTS (6x40mm)		6PCS
D	WOOD SCREWS (3.5x25mm)		17PCS
E	WALL SCREWS (4x30mm)		2PCS
F	WOOD SCREWS (3x12mm)		4PCS
G	WALL PLUGS (6x30mm)		2PCS
H	MIRROR PLATES (45x43mm)		2PCS
I	GLUE (10g)		1PC
J	ALLEN KEY		1PC

CODE	NAME	FIGURE	QUANTITY
①	TOP PANEL		1PC
②	LEFT SIDE LEG		1PC
③	RIGHT SIDE LEG		1PC
④	SIDE REBATES		2PCS
⑤	LEFT SIDE PANEL		1PC
⑥	RIGHT SIDE PANEL		1PC
⑦	TOP REBATE		1PC

4.0 ASSEMBLY

GB IE

STEP 1

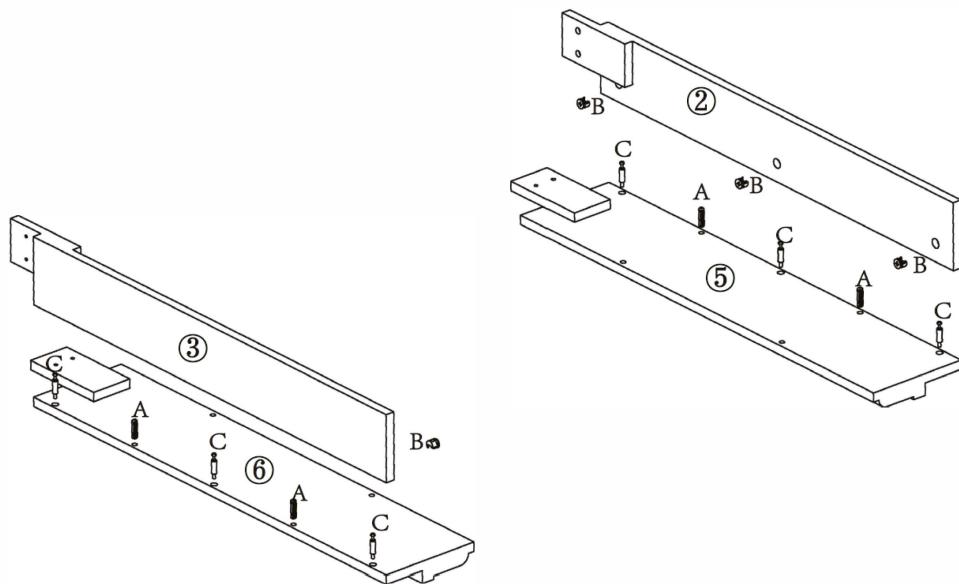


Fixings
A x 4 PCS
B x 6 PCS
C x 6 PCS

Use the glue (I) in the dowel holes before inserting wood dowels (A) into the left and right side panels (5 and 6). Position the cam bolts (C) into left and right side panels (5 and 6).

Take the left side leg and the right side leg (2 and 3), insert the cam locks (B) in to the left and right side legs (2 and 3), now turn the cam locks (B) clockwise to lock the parts together.

STEP 2

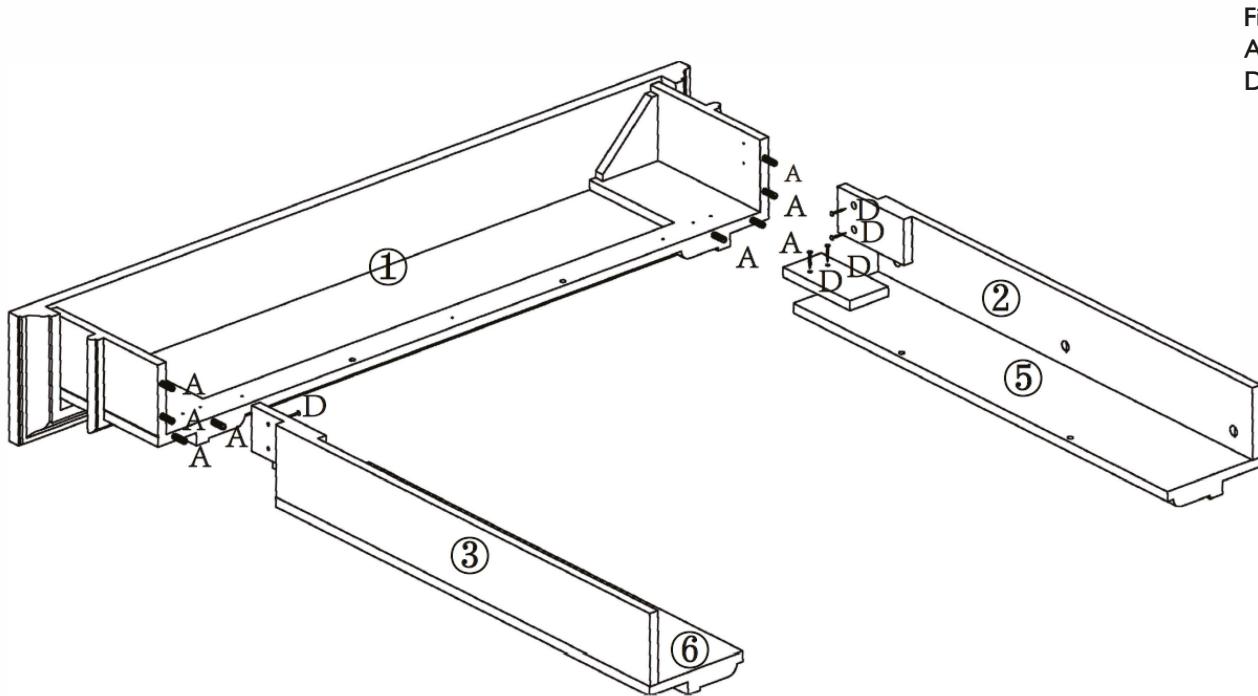

Fixings
A x 8 PCS
D x 8 PCS

Next using a drop of glue (I) in each dowel hole, insert the 8x wood dowels (A) into the top of the left leg and panel (2 and 5) and the right leg and panel (3 and 6). Carefully place the top panel (1) on to the top of the left and right legs and panels (2,5 and 3, 6). Use 8x screw (D) screwing them together.


4.0 ASSEMBLY

GB IE

STEP 3

If using option A only. If rebates are not being used go to section 5.


Fixings
A x 6 PCS
D x 9 PCS

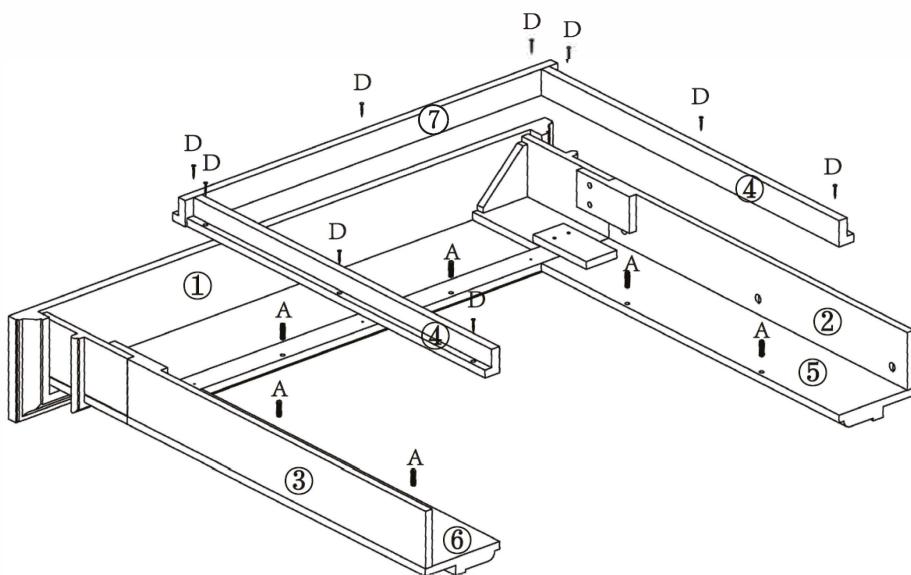

Using a drop of glue (I) in each dowel hole, insert 2x dowels (A) in to the left panel (5). Again, using a drop of glue (I) in the dowel holes take the side rebate (4) and push it on to the dowels of the left panel (5). Use 3x wood screws (D) to screw the side rebate (4) to the left side panel (5). Repeat the process to secure the other side rebate (4) to the right side panel (6), and the top rebate (7) to the top panel (1).

5.0 INSTALLATION

Fixings
E x 2 PCS
F x 4 PCS
G x 2 PCS

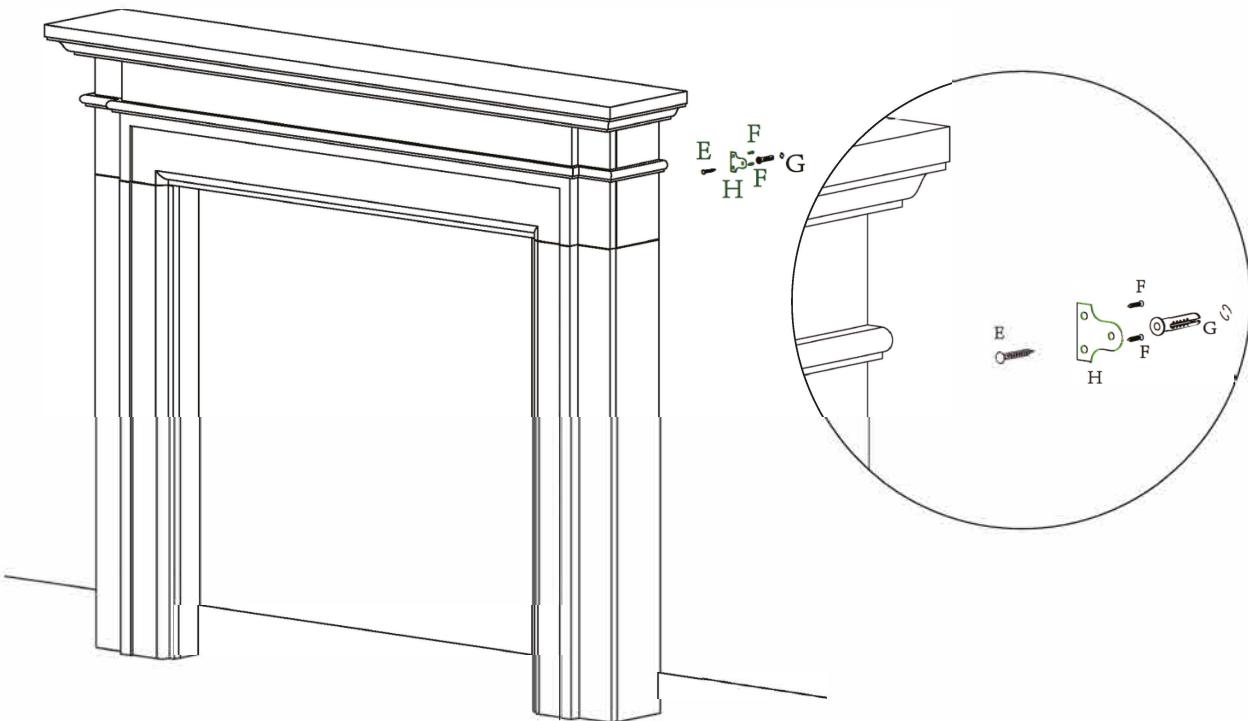

With a pencil mark out the desired height where you would like the mirror brackets (H) to be situated on the rear of the legs. To avoid splitting the leg, pre drill the bracket holes with a 2mm drill bit. Now attach the brackets to the legs using the 3x12mm screws (F). Once the brackets are in position, centre and level the hearth into its final fitting position. Position the surround on the hearth to correspond with the header/ fireplace lintel, mark with a pencil on the wall where you wish to drill. Remove the surround and prepare the wall from the marked positions. If using the fixings supplied, drill a hole in the wall using a 6mm drill bit. If not, use a suitable drill bit for the wall plugs you are using. Insert the wall plugs (G) into position. Offering the surround back up into position against the wall, you are now able to secure the surround to the wall using the 4x30mm screws (E).

6.0 CLEANING/ FINISHING

GB IE

Before carrying out any of the following operations, ensure that the appliance is OFF and completely cold. Regularly clean around the appliance to ensure that dust, fluff, pet hair etc, are kept to a minimum. There are no other specific requirements for care, other than regular cleaning of the general appliance.

A wipe with a dry cloth is normally sufficient. **DO NOT** use abrasive cleaners as they can damage the finish. Test on a hidden part before cleaning. Clean only in the direction of the grain. Regularly check the surround is securely fixed in position.

7.0 GUARANTEE - TERMS AND CONDITIONS

The 3 year guarantee commences from the date of purchase, provided that the terms and conditions are adhered to:

Registration is not required.

1. For any claim to be made within the 3 years from date of purchase you will be required to provide and supply us with your proof of purchase.

Making a claim is easy.

If you wish to make a claim under our 3 year guarantee and all the terms and conditions for your product have been met then please submit the following information for the attention of the 3G Service Department to the address below. Alternatively, you can email or fax. Please note that this does not affect your statutory rights.

Focal Point Fires Ltd, 3G Service Department, Reid Street, Christchurch, Dorset, BH23 2BT.

Alternatively email: 3g@focalpointfires.co.uk or fax. 01202 499326.

Details required:

1. Name, full address including post code and contact telephone number.
2. Receipt of purchase or credit card statement.