
GENERAL FITTING GUIDE - SEMI RECESS BASIN


PRODUCT SHOWN WILL VARY DEPENDING ON MODEL

1

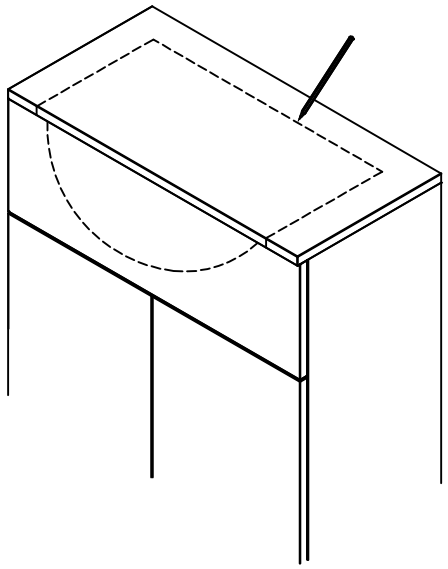


POSITION TEMPLATE AND MARK OUT WITH A PENCIL THE AREA TO BE CUT.

2

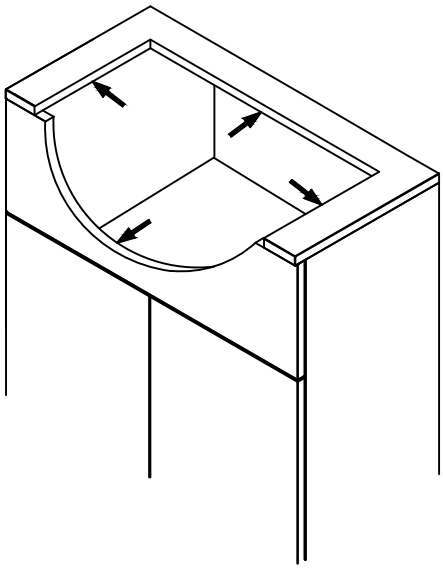


SEAL ANY RAW EDGES WITH SEALANT OR PVA GLUE TO PREVENT ANY WATER INGRESS.

3

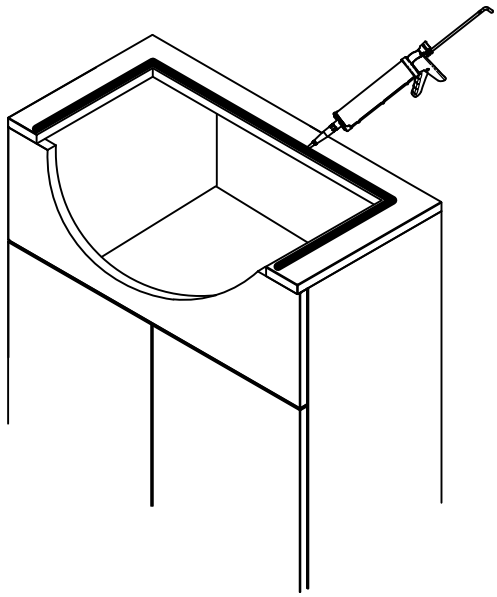

RUN A BEAD OF SILICONE AROUND THE TOP FACE OF THE WORKTOP. FIT BASIN INTO POSITION, MAKING SURE THERE'S A GOOD SEAL.

4

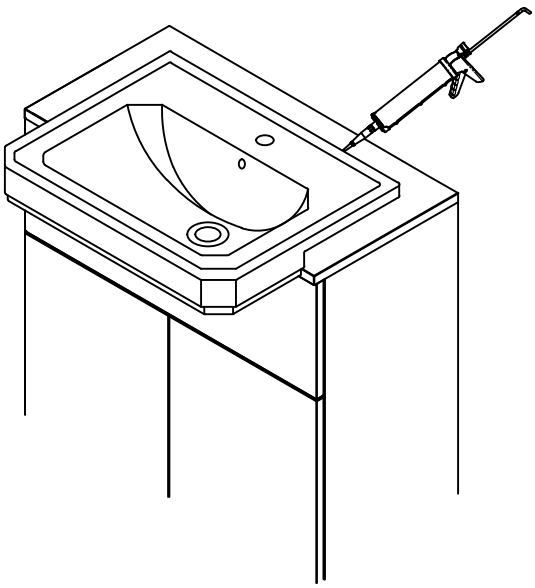

SEAL AROUND THE OUTER EDGES OF THE BASIN AND CLEAN OFF ANY EXCESS SEALANT (FOLLOW THE MANUFACTURERS INSTRUCTION REGARDING CURE TIME)