
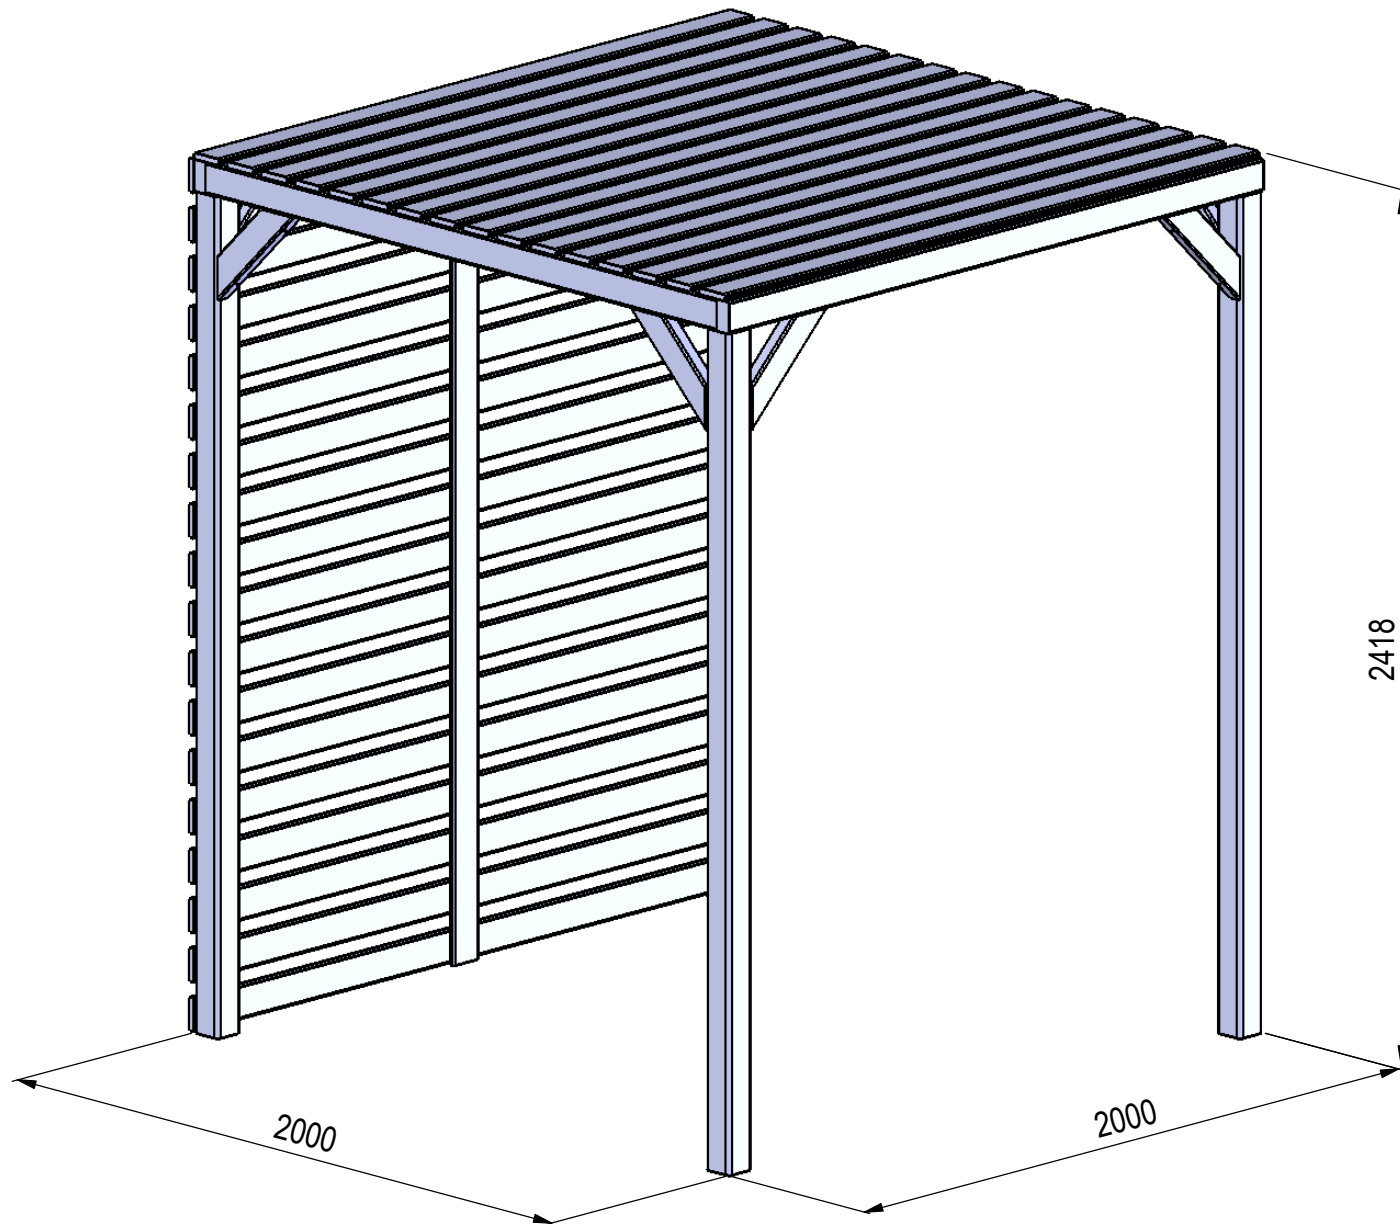



Modern Pergola 2m x 2m





1 x4 


3 x2 

4 x2 

5 x8 

6 x34 

7 x1 




8 x1 

1	4	88	88	2400
3	2	44	88	1912
4	2	44	88	2000
5	8	44	88	400
6	34	18	94	2000
7	1	18	94	2312
8	1	18	94	1912
W	32	5x80		
S	136	3.5x40		
T	68	3.5x30		

W 5x80 x32
S 3,5x40 x136
T 3,5x30 x68




Recommended tools (not included)

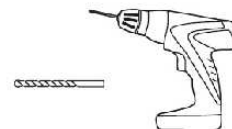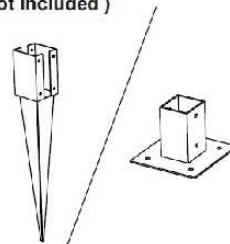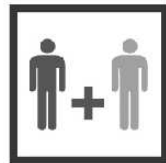


drill or screwdriver




1

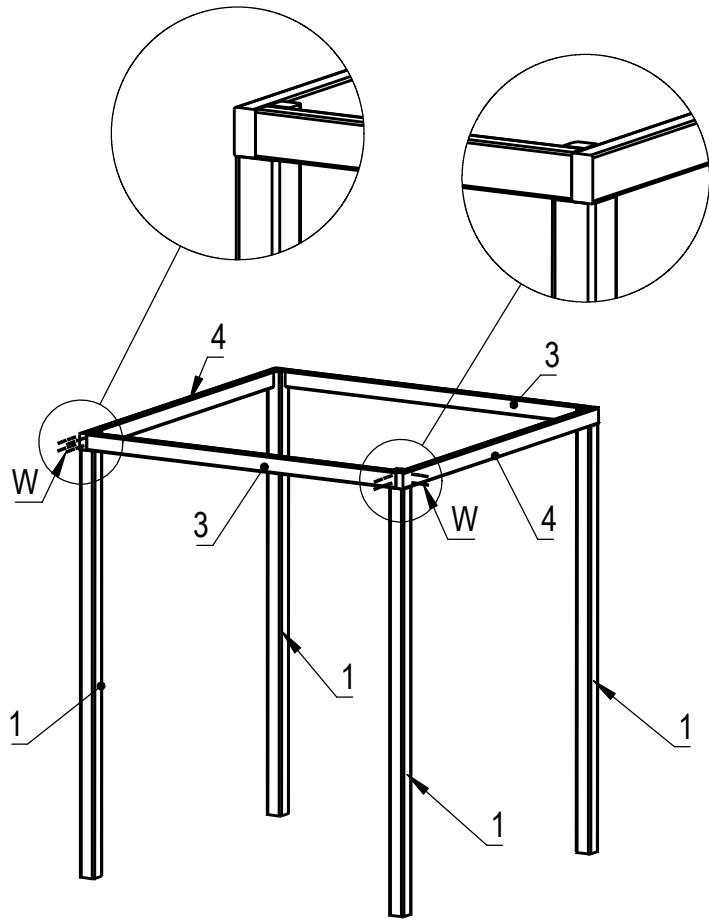

2

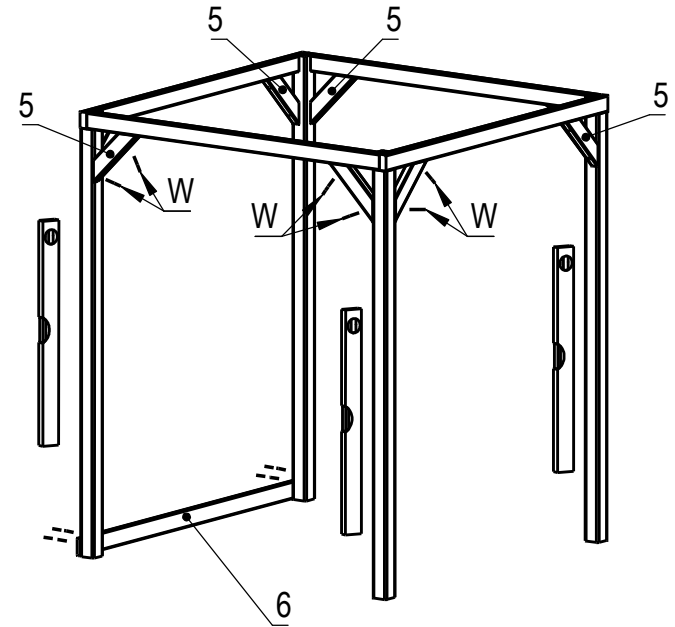


1 x4



1912

3 x2



2000

4 x2




W 5x80 x16



5 x8





W 5x80 x16
S 3,5x40 x4



2000

6 x1


3

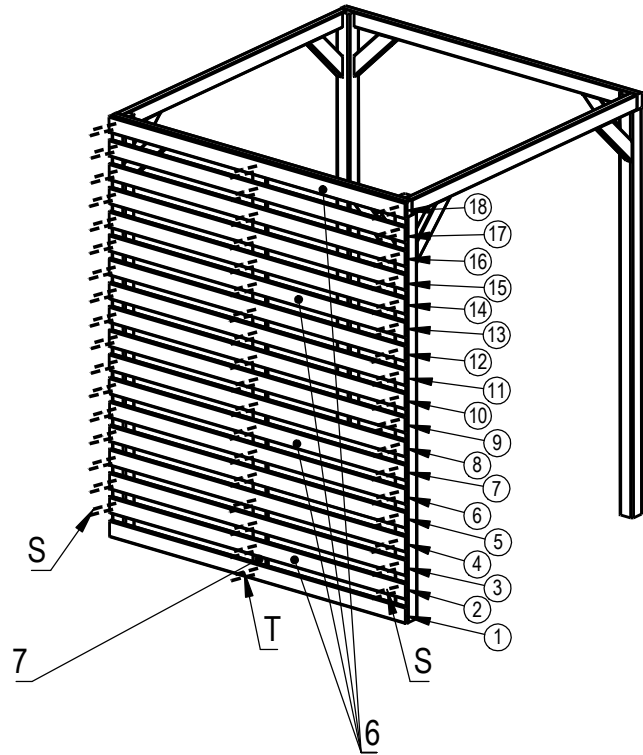

6 x17





S 3,5x40 x68
T 3,5x70 x36



7 x1

4




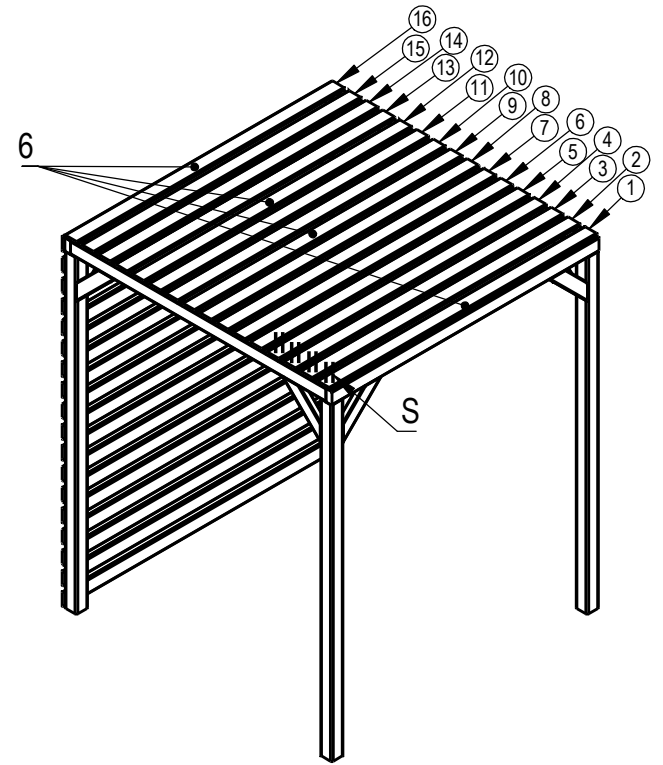


6 x16



S 3,5x40 x64

5

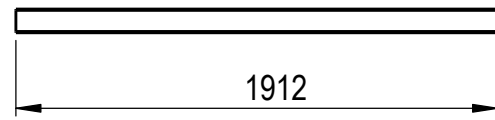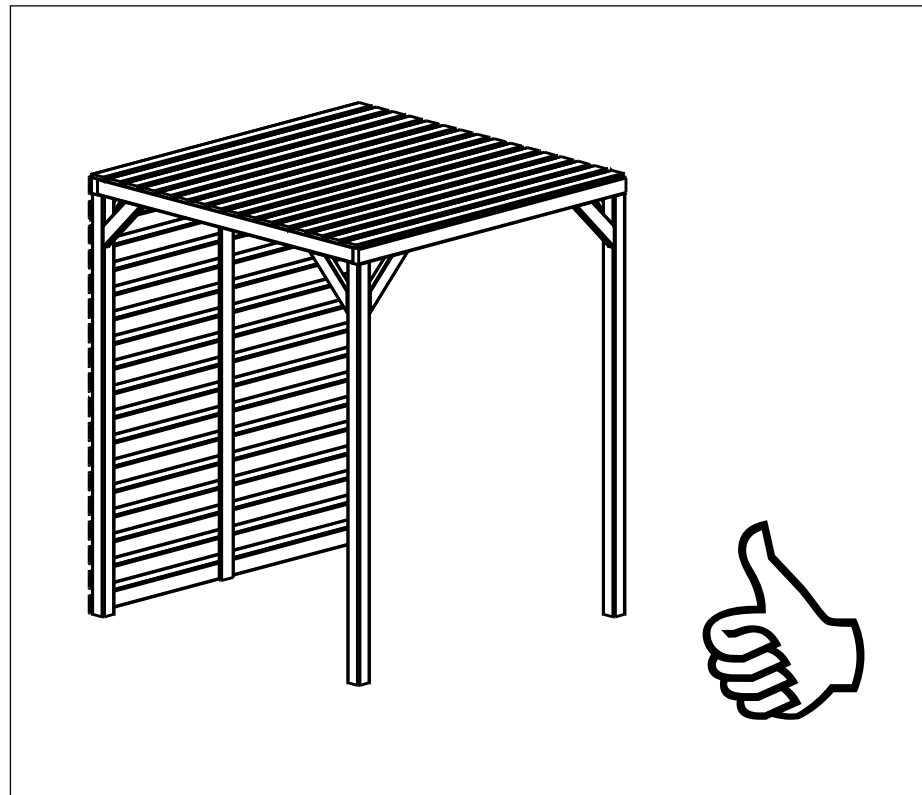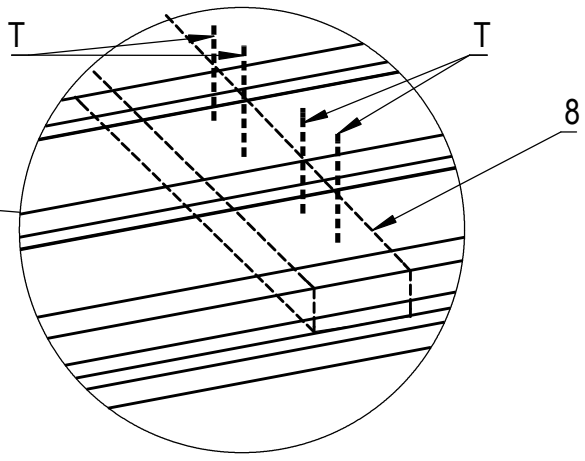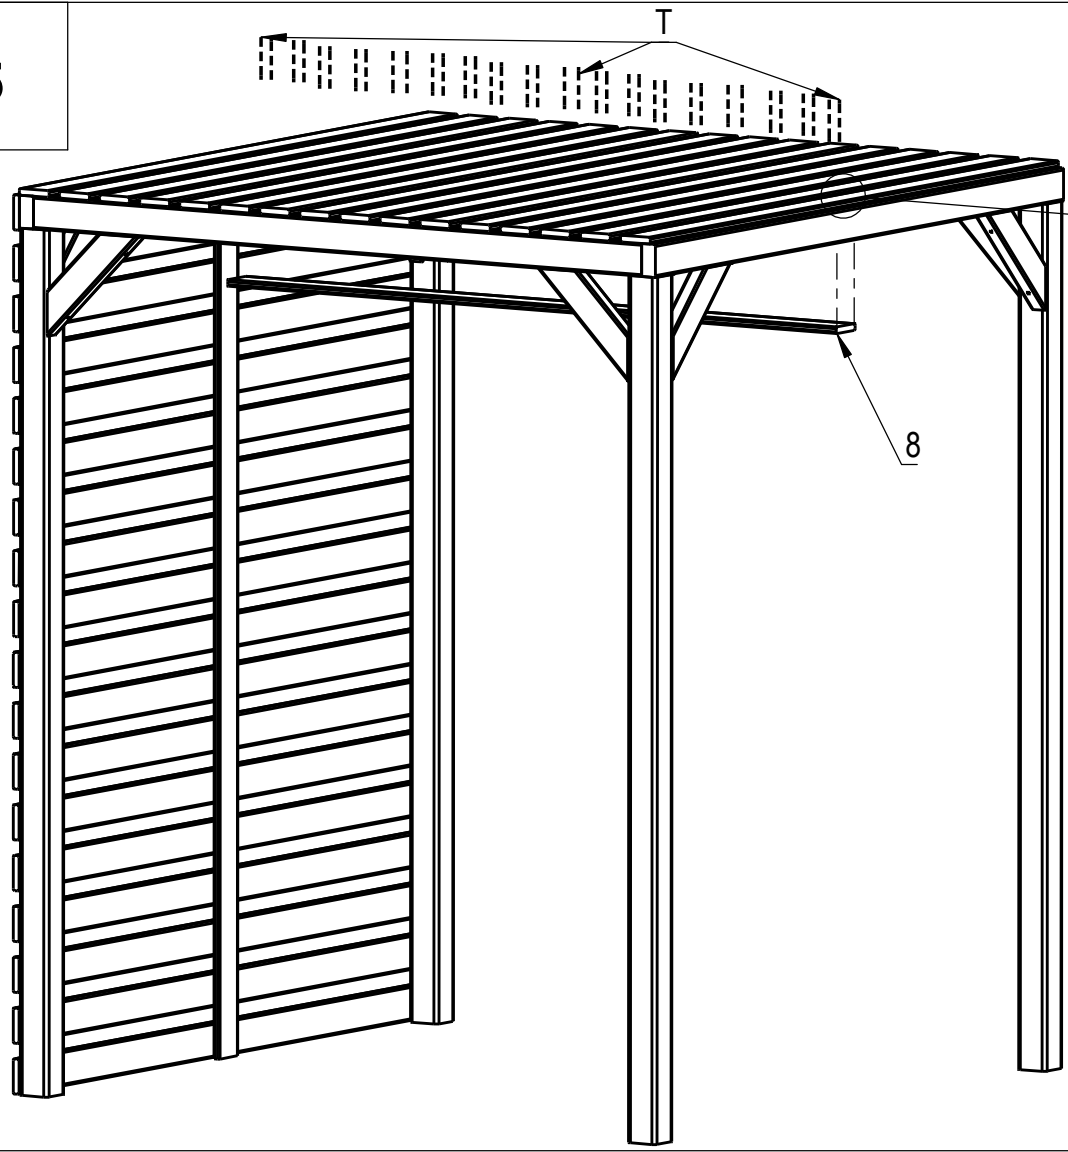

1912

8 x1



T 4x40 x32