



PI-21-0044 - Tower Anchor Kit


Pack Contents

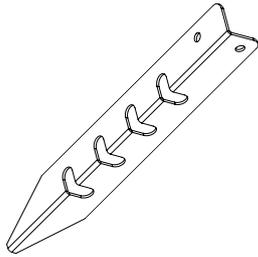


Anchor x 4



Screw x 8

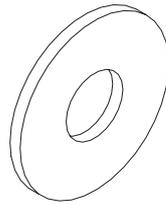


Washer x 8

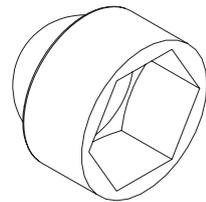


Caps x 8


INSTRUCTIONS

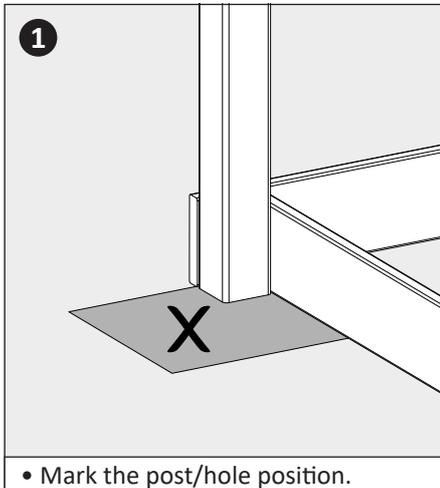


- Mark the post/hole position.

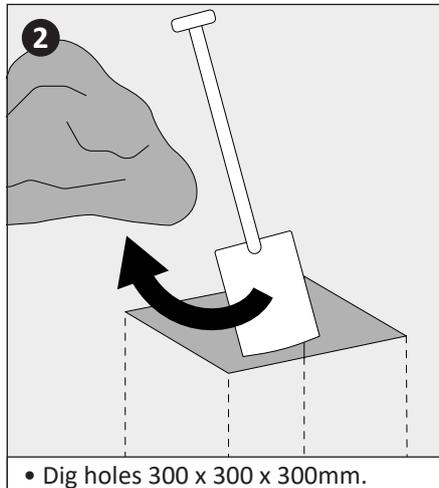


- Dig holes 300 x 300 x 300mm.

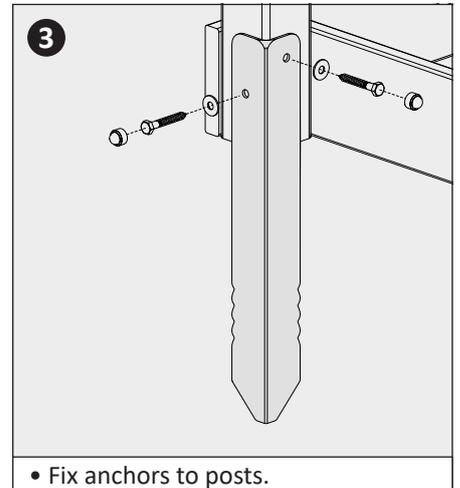

- Fix anchors to posts.

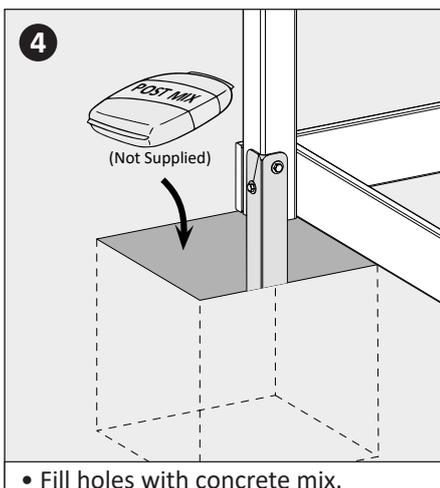

- Fill holes with concrete mix.

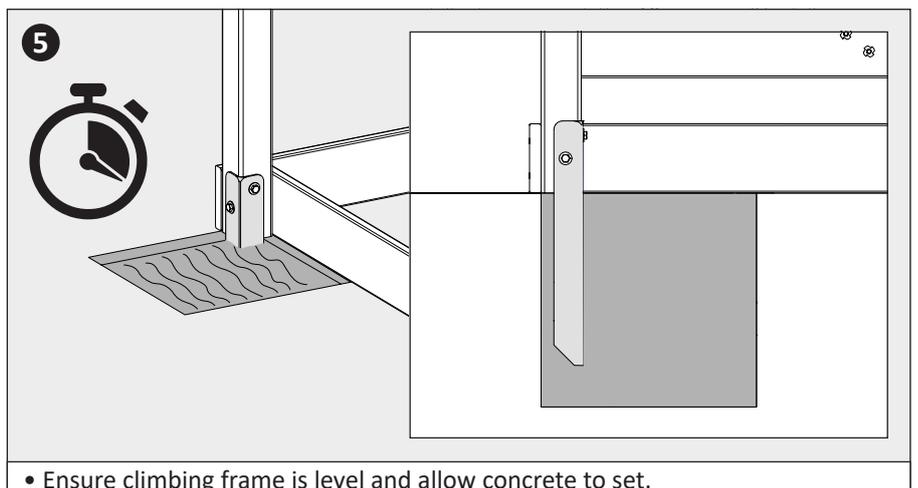

- Ensure climbing frame is level and allow concrete to set.