
Installation Instructions

Grab Rail-Chrome

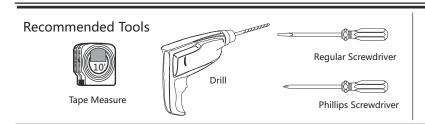

CARE INSTRUCTIONS:

DO CLEAN THE PRODUCT WITH CLEAN WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH. DO NOT: CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

Steps

- 1. Separate the wall bracket covers from the walbrackets by twisting the covers in an anticlockwise direction.
- 2. Place the grab bar in position on the wall and using the hole centres of each wall bracket as a template, mark the screw fixing positions on the wall surface. If fitting the product in a vertical or horizontal orientation it is important to ensure the grab bar is level. (See Fig. 2)
- 3. Drill the holes in the marked positions using a masonry drill. If the product is to be fitted onto a ceramic tiled wall, a ceramic drill bit should be used.
- 4.Insert wall plugs flush to the surface of the wall. If fitting to a tiled surface, the wall plugs should be inserted below the surface of the tile to avoid cracking.
- 5.Insert the screws through the holes of the wall brackets and screw to the wall.(See Fig.2)
- 6. Slide the bracket covers back onto the wall brackets and twist in a clockwise direction to lock the covers in position. (See Fig. 1)

This product must only be fitted to solid brick, concrete block walls or similarly strong materials offering appropriate support for the maximum safe working load.

Maximum safe working load for the grab rail is 100kg



Fig.1



Fig.2