

ASSEMBLY & INSTALLATION INSTRUCTIONS



MODELS COVERED BY THESE INSTRUCTIONS


F820590 FPFBQ392 WOODTHORPE FIRE SURROUND PINE

F820591 FPFBQ393 WOODTHORPE FIRE SURROUND OAK VENEER

F820592 FPFBQ394 WOODTHORPE FIRE SURROUND WHITE

Focal Point Fires Ltd.
Christchurch, Dorset BH23 2BT
Tel: 01202 499330
Fax: 01202 499326
www.focalpointfires.co.uk
e : sales@focalpointfires.co.uk

Focal Point Fires Ltd
RBK House, Irishtown, Athlone,
Co. Westmeath, N37 XP52,
Ireland Tel: 01202 499330
Fax: 01202 499326
www.focalpointfires.co.uk
e: sales@focalpointfires.co.uk

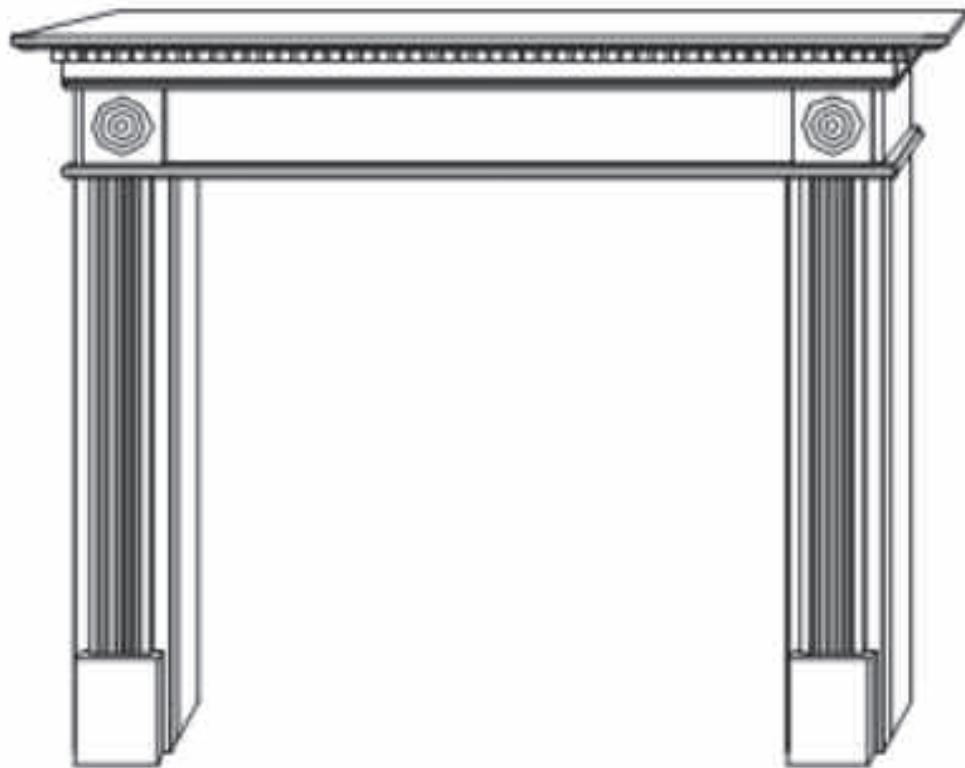

3 YEAR GUARANTEE

SUBJECT TO TERMS & CONDITIONS
For details please see: www.focalpointfires.co.uk or telephone
01202 588635 Option 4

Please note : Except where otherwise stated, all rights, including copyright in the text, images and layout of this booklet is owned by Focal Point Fires Ltd. You are not permitted to copy or adapt any of the content without the prior written permission of Focal Point Fires Ltd.

All instructions must be handed to the user for safekeeping.

Revision D - 02/22

© 2022 Focal Point Fires Ltd.

Section	Contents	Page No.
1.0	Important notes	2
2.0	Tools required	2
3.0	Hardware & parts list	2
4.0	Assembly	3
5.0	Installation	4
6.0	Cleaning/ finishing	4
7.0	Guarantee - terms and conditions	4

I.0 IMPORTANT NOTES

To ensure safe and stable installation:

1. The assembled Fire Surround must be fixed / secured to wall.
2. The wall must be sturdy and in good repair.
3. Some walls require alternative fixings (not included).
4. When drilling into the wall, check for hidden pipes and cables.

2.0 TOOLS REQUIRED


Cross head screwdriver PZ2 (3 inches in length or greater)

Drill, 6mm and a 2mm suitable drill bit

Pencil


Tape measure

3.0 HARDWARE & PARTS LIST

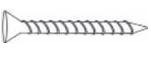CODE	NAME	FIGURE	QUANTITY	CODE	NAME	FIGURE	QUANTITY
A	SCREWS (3.5X25mm)		12PCS	①	MANTLE SHELF		1PC
B	SCREWS (3X12mm)		4PCS	②	LEFT LEG		1PC
C	WALL SCREWS (4X30mm)		2PCS	③	RIGHT LEG		1PC
D	WALL PLUGS (6X30mm)		2PCS				
E	MIRROR PLATES (45X43mm)		2PCS				

STEP 1

Fixings	Parts
A x 12 PCS	1
	2
	3

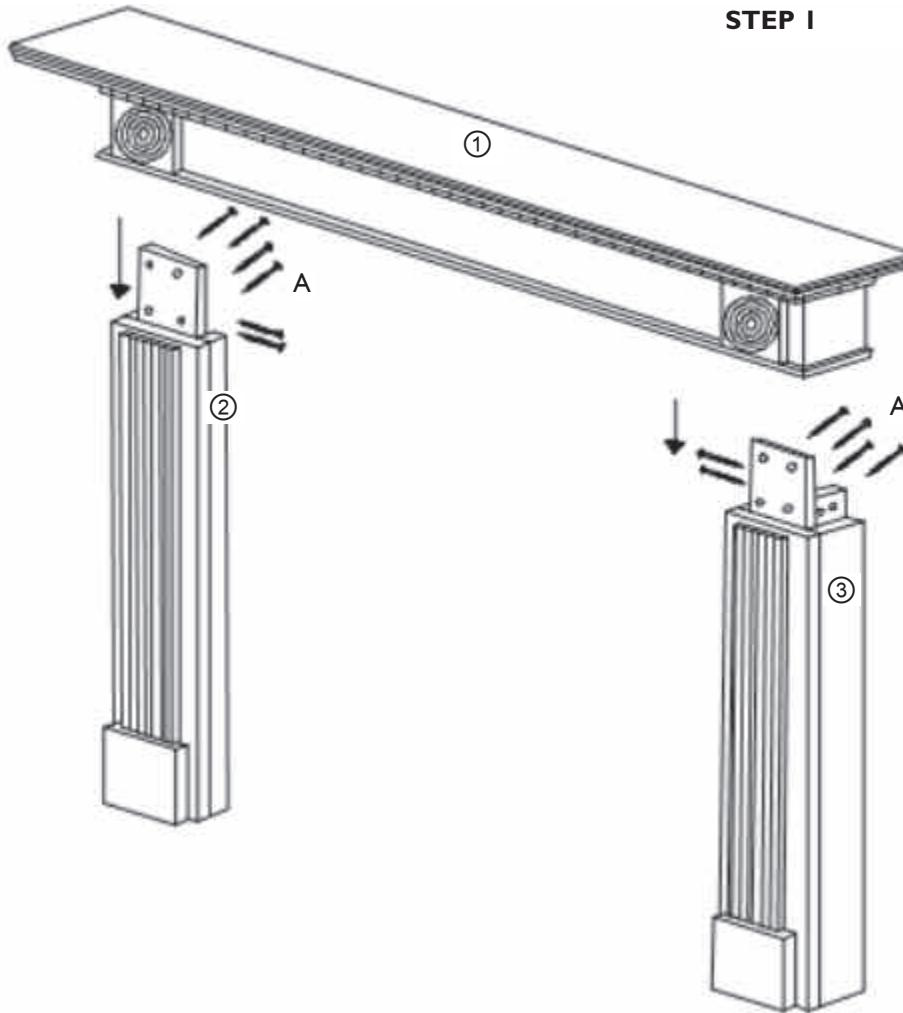


TAKE CARE - LAY THE SURROUND ON A SOFT SURFACE THAT WILL NOT DAMAGE THE SURROUND.

Lay the left leg (2) and the right leg (3) along with the top shelf (1) on the floor. Push them together so that the 3 parts fit together with no gaps. Next insert 6x wood screws (A) in to each leg, 4 of which face the front, and 2 that face the outside edge. When correctly aligned the screws (A) can be tightened.

5.0 INSTALLATION

GB IE

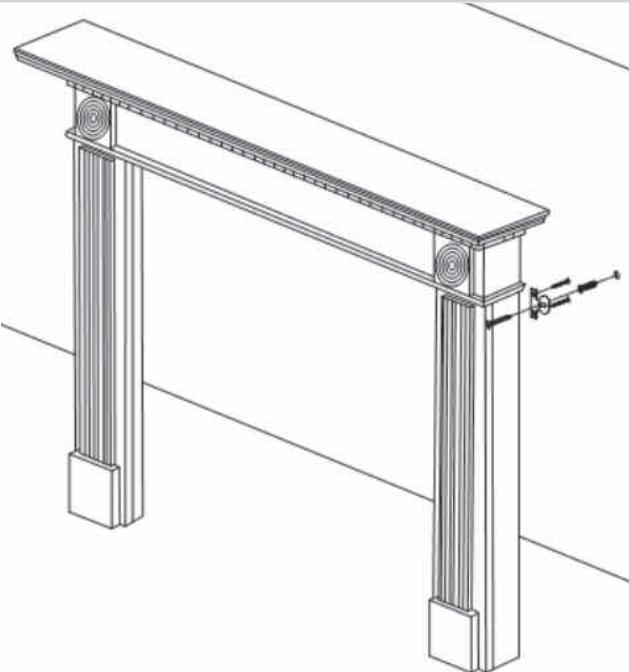

Fixings
B x 4 PCS
C x 2 PCS
D x 2 PCS
E x 2 PCS

With a pencil mark out the desired height where you would like the mirror brackets (E) to be situated on the rear of the legs. To avoid splitting the leg, pre drill the bracket holes with a 2mm drill bit. Now attach the brackets to the legs using the screws (B). Once the brackets are in position, centre and level the hearth into its final fitting position. Position the surround on the hearth to correspond with the header/fireplace lintel, mark with a pencil on the wall where you wish to drill. Remove the surround and prepare the wall from the marked positions. If using the fixings supplied, drill a hole in the wall using a 6mm drill bit. If not, use a suitable drill bit for the wall plugs you are using. Insert the wall plugs (D) into position. Offering the surround back up into position against the wall, you are now able to secure the surround to the wall using the screws (C).

6.0 CLEANING/ FINISHING

Before carrying out any of the following operations, ensure that the appliance is OFF and completely cold. Regularly clean around the appliance to ensure that dust, fluff, pet hair etc, are kept to a minimum. There are no other specific requirements for care, other than regular cleaning of the general appliance.

A wipe with a dry cloth is normally sufficient. **DO NOT** use abrasive cleaners as they can damage the finish. Test on a hidden part before cleaning. Clean only in the direction of the grain. Regularly check the surround is securely fixed in position.

7.0 GUARANTEE - TERMS AND CONDITIONS

The 3 year guarantee commences from the date of purchase, provided that the terms and conditions are adhered to:

Registration is not required.

1. For any claim to be made within the 3 years from date of purchase you will be required to provide and supply us with your proof of purchase.

Making a claim is easy.

If you wish to make a claim under our 3 year guarantee and all the terms and conditions for your product have been met then please submit the following information for the attention of the 3G Service Department to the address below. Alternatively, you can email or fax. Please note that this does not affect your statutory rights.

Focal Point Fires Ltd, 3G Service Department, Reid Street, Christchurch, Dorset, BH23 2BT.
Alternatively email: 3g@focalpointfires.co.uk or fax. 01202 499326.

Details required:

1. Name, full address including post code and contact telephone number.
2. Receipt of purchase or credit card statement.